Panasonic[®]

Digital Video Camcorder Operating Instructions



Models No. PV-DC152

PV-DC252

PV-DC152-K

PV-DC252-K





MultiMediaCard™







Before attempting to connect, operate or adjust this product, please read these instructions thoroughly. Spanish Quick Use Guide is included. Guía para rápida consulta en español está incluida.

For USA assistance, please call: 1-800-211-PANA(7282) or send e-mail to : consumerproducts@panasonic.com

For Canadian essistance, please call: 1-800-581-5505 or visit us at www.panasonic.ca

Things You Should Know

Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information on the right. The serial number is on the tag located on the underside of your Palmcorder. Be sure to retain this manual as your convenient Palmcorder information source.

| Date of Purchase | |
|-----------------------|--|
| Dealer Purchased From | |
| Dealer Address | |
| Dealer Phone No. | |
| Model No. | |
| Serial No. | |

Safety Precautions

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

Your "IN" Palmoorder is designed to record and play back in Standard Play (SP) mode and Long Play (LP) mode. It is recommended that only cassette tapes that have been tested and inspected for use in Palmcorder with the "" mark be used.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

The above markings are located on the appliance bottom cover.

Note: This equipment has been tested and found to comply with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver, If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

FCC Warning:

 To assure continued FCC compliance, the user must use only the provided shielded interfacing cable with ferrite core when connecting digital Palmcorder to computer in accordance with instruction herein. Also, any unauthorized changes or modifications to this equipment could void the user's authority to operate.

Declaration of Conformity

Model No.:

PV-DC152/PV-DC252

Trade Name:

Panasonic

Responsible party: Matsushita Electric Corporation of America Address:

One Panasonic Way, Secaucus, New Jersey 07094 Telephone number: 1-800-211-PANA (7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: TO PREVENT FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED

ACCESSORIES ONLY.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR **EQUIVALENT TYPE.**

• Since this product gets hot during use, operate it in well ventilated place; do not install this equipment in a confined space such as a bookcase or similar unit.


Important Safeguards

- Read Instructions—All the safety and operating instructions should be read before the unit is operated.
- Retain Instructions—The safety and operating instructions should be retained for future reference.
- Heed Warnings—All warnings on the unit and in the operating instructions should be adhered to.
- Follow Instructions—All operating and maintenance instructions should be followed.
- Cleaning—Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
- Attachments—Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
- 7) Water and Moisture—Do not use this video unit near water- for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8) Accessories—Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination
- 9) Ventilation—Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

to overturn.

10) Power Sources—This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.

- 11) Grounding or Polarization—This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin.
 - The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
 - The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
- 12) Power-Cord Protection—Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
- 13) Outdoor Antenna Grounding—If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the leadin wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

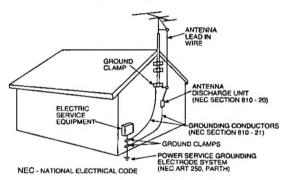

- 14) Lightning—For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.
- 15) Power Lines—An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 16) Overloading—Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Important Safeguards

- 17) Objects and Liquids Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
- 18) Servicing Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 19) Damage Requiring Service Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damaged.
 - b. If any liquid has been spilled into, or objects have fallen onto, the video unit.
 - c. If the video unit has been exposed to rain or water.
 - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
 - e. If the video unit has been dropped or the cabinet has been damaged.
 - f. When the video unit exhibits a distinct change in performance — this indicates a need for service.
- 20) Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 21) Safety Check— Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

Precautions

USE & LOCATION

- TO AVOID SHOCK HAZARD ... Your Palmcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Palmcorder if it gets wet. Your Palmcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Palmcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Palmcorder from the power supply before cleaning.
- DO NOT AIM YOUR PALMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS
- DO NOT LEAVE THE PALMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF
- DO NOT EXPOSE YOUR PALMCORDER TO EXTENDED HIGH TEMPERATURE ... Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Palmcorder.
- AVOID SUDDEN CHANGES IN TEMPERATURE ... If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- DO NOT LEAVE YOUR PALMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.
- STORAGE OF YOUR PALMCORDER ... Store and handle your Palmcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Palmcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

CADE

- TO CLEAN YOUR PALMCORDER ... Do not use strong or abrasive detergents when cleaning your Palmcorder body.
- TO PROTECT THE LENS ... Do not touch the surface of the lens with your hand. Use a commercial Palmcorder lens solution and lens paper when cleaning the lens.
 Improper cleaning can scratch the lens coating.
- TO PROTECT THE FINISH OF YOUR PALMCORDER ...
 Before handling your Palmcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

This class B digital apparatus complies with CANADIAN ICES-003.

This Product has a fluorescent lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: https://www.eiae.org.

ATTENTION: -




A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

| Before Using | c |
|---|----|
| Standard Accessories | o |
| Quick Guide | |
| To View the Playback Picture | |
| | |
| Controls and Components | |
| Remote Controller | |
| Power Supply | |
| Charging Time and Available Recording Time | |
| Lens Cap and Grip Belt | 13 |
| Attaching the Shoulder Strap | |
| Inserting a Cassette | |
| Turning on/off the Palmcorder and Selecting Modes | |
| Using the Viewfinder | |
| Using the LCD Monitor | |
| Using the Menu Screen | |
| List of Menus | |
| Setting Date and Time | 19 |
| Internal Lithium Battery Recharge | |
| LP Mode | |
| Audio Recording Mode | 19 |
| | |
| CAMERA Mode | |
| Recording | 20 |
| PhotoShot Recording on the DV Cassette | |
| Zoom In/Out Functions | |
| Digital Zoom Function | |
| | |
| Digital Electronic Image Stabilizer Function | |
| Fade In/Out Functions | |
| Cinema Function | |
| Backlight Compensation Function | 23 |
| Magic Pix Function | |
| Quick Start | |
| Wind Noise Reduction Function | |
| Recording in Special Situations | |
| Manual Shutter Speed Adjustment | |
| Manual Iris Adjustment (F Number) | |
| Manual Focus Adjustment | 25 |
| Recording in Natural Colors (White Balance) | 26 |
| Adjusting White Balance Manually | |
| Digital Effect Functions | 27 |
| | |
| VCR Mode | |
| Playing Back | 29 |
| Finding a Scene You Want to Play Back | 29 |
| Slow Motion Playback | |
| Still Playback/Still Advance Playback | 30 |
| Finding the End of a Recording | 30 |
| Index Search Functions | |
| Playback Zoom Function | |
| Playback Digital Effect Functions | 32 |
| Playing Back on Your TV | |
| CIAVUU DALB OD TOU IV | J |

Audio Dubbing.......33

Before Using

| Special Features | |
|---|------|
| Using a Memory Card | 34 |
| Recording on the Memory Card | 34 |
| Playing Back Files from the Memory Card | 36 |
| Copying Pictures from a Memory Card to a Cassette | 37 |
| Slide Show | |
| Creating a Title | |
| Inserting a Title | 39 |
| Protecting the Files on a Memory Card from Accidental | |
| Erasure (File Lock) | |
| Deleting the Files recorded on a Memory Card | . 40 |
| Formatting a Memory Card | |
| DPOF Setting | |
| Copying your DV Cassette to an S-VHS or VHS Cassette | |
| (Dubbing) | .42 |
| Using your Palmcorder with Digital Video Equipment | |
| (Dubbing) | .43 |
| Using the Software with a Computer | |
| ArcSoft Software | |
| Using the Supplied USB Connection Kit | |
| Installing USB Driver | |
| Connecting Computer and Palmcorder | |
| Check if Palmcorder is correctly recognized | |
| To disconnect USB cable safely | |
| Verifying and updating driver | .48 |
| If you no longer need software or driver (uninstall) | |
| Notes | . 52 |
| | |
| Others | |
| Indications | |
| Warning/Alarm Indications | |
| Notes & Precautions | |
| Cautions for Use | |
| Explanation of Terms | |
| Specifications | |
| Palmcorder Accessory System | . 65 |
| Palmcorder Accessory Order Form (For USA Customers) | 00 |
| | . 00 |
| Before Requesting Service (Problems and Solutions) | 67 |
| | |
| Request for Service Notice | |
| Limited Warranty | |
| Servicenter List | |
| Warranty | |
| Index | .73 |
| Spanish Quick Use Guide/ Guía española para el uso rápido | 74 |
| Guia espanoia para ei uso rapido | . 74 |

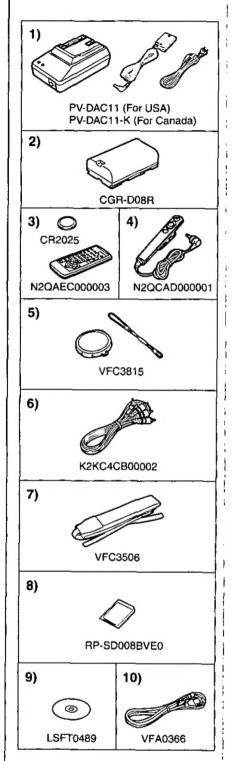

Before Using

Before Using

These operating Instructions are designed for use with models PV-DC252/PV-DC252-K and PV-DC152/PV-DC152-K. Pictures may be slightly different from the original.

- The illustrations used in these Operating Instructions show model PV-DC252, however, parts of the explanation refer to different models.
- Depending on the model, some functions are not available.
- · Features may vary, so please read carefully.

Standard Accessories

Illustrated on the left are accessories packaged with the Palmcorder.

- 1) AC Adaptor, DC Cable and AC Cable (→ 12)
 - Supplies power to the Palmcorder.


CAUTION:

This unit will operate on 110/120/220/240 V AC. An AC plug adaptor may be required for voltages other than 120 V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070) in an area which has special AC outlets.

- 2) Battery Pack (→ 12)
 - Supplies power to the Palmcorder.
- 3) Remote Controller and Button-Type Battery (→ 10, 11)
- 4) Tethered Remote Control
- 5) Lens Cap and Lens Cap String (→ 13)
- 6) A/V Cable (→ 33)
- 7) Shoulder Strap (→ 13)
- 8) SD Memory Card (→ 52) (PV-DC252/PV-DC252-K)
- 9) CD-ROM (PV-DC252/PV-DC252-K): USB Driver for Panasonic DVC (→ 46) G726 Decoder (→ 44) ArcSoft Software (→ 44, 45)

Microsoft[®] and Windows[®] are registered trademarks of Microsoft in the United States and other countries.

- Macintosh is a registered trademark of Apple Computer, Inc. 2001. ArcSoft, the ArcSoft logo, ArcSoft PhotoImpression 3.0, ArcSoft Photo Base 3.0, ArcSoft Panorama Maker 3.0 and ArcSoft PhotoPrinter 2000 Pro are trademarks of ArcSoft. Inc.
- All product/brand names are trademarks or registered trademarks of the respective holders,
- Intel[®] Pentium[®] is a registered trademark.
- •i.LINK and "i," are trademarks.
- IBM is a registered trademark of IBM Company.
- MultiMediaCard is a registered trademark.
- SD is a trademark.
- 10) USB Cable (→ 46) (PV-DC252/PV-DC252-K)

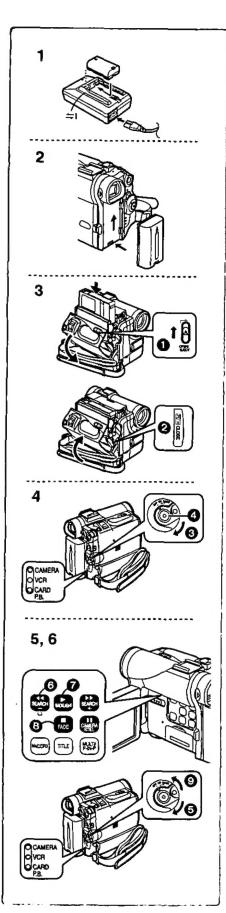

Quick Guide

1 Charge the Battery. (→ 12)

- Connect the AC Cable to the AC Adaptor and plug it into the AC Wall Outlet.
- Attach the Battery to the AC Adaptor. (This witl start the charging process.)
- The [POWER] Lamp and [CHARGE] Lamp lights up, and charging starts
- When the [CHARGE] Lamp goes off, charging is completed.
- Since the Battery will not be charged when the DC Cable is connected to the AC Adaptor, disconnect it.
- 2 Attach the Charged Battery to the Palmcorder. (→ 12)

3 Insert the Cassette. (→ 13)

- Slide the [OPEN/EJECT] 1 Lever toward the front and pull down to open the Cassette Compartment.
- Insert the Cassette.
- Press the [PUSH CLOSE] 2 to load the Cassette.
- Close the outside compartment Cover.


4 Start recording. (→ 20)


- Turn the Palmcorder on. (→ 14)
- Rotate the Switch 3 to [ON]. (The [CAMERA] Lamp lights up.)
- Press the 4 Button. (Recording starts.)
- Press the Button again to pause the recording.


To View the Playback Picture


- 5 Switch to the VCR Mode, rewind the tape, and play the tape back. (→ 29)
 - Set the Switch to VCR mode. (The [VCR] Lamp lights up.)
 - Press the 6 Button. (Rewind the tape.)
 - Press the Button. (Playback starts.)
 - Press the 8 Button. (Playback stops.)

6 Turn the Palmcorder off. (→ 14)

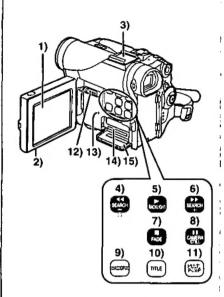

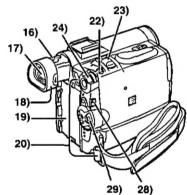

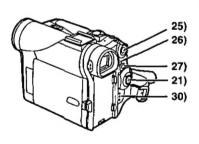


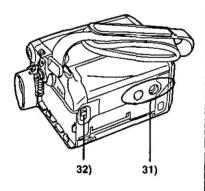



Controls and Components

- 1) LCD Monitor (→ 14)
- Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD Monitor screen. However, this is not a malfunction and does not affect the recorded picture.
- 2) LCD Monitor Open Tab [OPEN ▼] (→ 14, 62)
- 3) Accessory Shoe
 - Accessories, such as a stereo microphone (not supplied), are attached here.
- 4) Rewind/Review Button [◀◀] (→ 29)
 Reverse Search Button [SEARCH—] (→ 20)
 Recording Check Button [(□]) (→ 20)
- 5) Play Button [▶] (→ 29, 36, 38) Backlight Button [BACKLIGHT] (→ 23)
- 6) Fast Forward/Cue Button [►►] (→ 29) Forward Search Button [SEARCH+] (→ 20)
- 7) Stop Button [■] (→ 29, 36, 38) Fade Button [FADE] (→ 22)
- 8) Still Button [11] (→ 30, 36)
 - Camera Still Button [CAMERA STILL] (→ 21)
- 9) MAGICPIX Button [MAGICPIX] (→ 23)
- 10) Title Button [TITLE] (PV-DC252/PV-DC252-K) (→ 39)
- 11) Multi-Picture Button [MULTI] (→ 28, 39)
 Picture-in-Picture Button [P-IN-P] (→ 28)
- 12) Tape/Card PhotoShot Selector [TAPE/CARD] (PV-DC252/PV-DC252-K) (→ 34)
- 13) Card Access Lamp [ACCESS] (PV-DC252/PV-DC252-K) (→ 34)
- 14) Card Slot (PV-DC252/PV-DC252-K) (→ 34)
- 15) Card Slot Cover (PV-DC252/PV-DC252-K) (→ 34)
- 16) Eyepiece Corrector Knob (→ 14)
- 17) Viewfinder (→ 14, 62)
- Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Viewfinder screen. However, this is not a malfunction and does not affect the recorded picture.

- 18) Eyecup
- 19) Battery Holder (→ 12)
- 20) Shoulder Strap Holders (→ 13)
- 21) Recording Start/Stop Button (→ 20, 27, 28)
- 22) PhotoShot Button [PHOTO SHOT] (+ 21, 34, 35)
- 23) Zoom Lever [W/T] (→ 21, 22)
- 24) Multi-Function Dial [PUSH] (→ 15, 19, 25, 26, 29, 30)
- 25) Menu Button [MENU] (→ 15)
- 26) Quick Start Lamp (→ 24)
- 27) Quick Start Button [QUICK START] (→ 24)
- 28) Mode Selector Switch [AUTO/MANUAL/FOCUS] (→ 20, 24, 25, 26)
- 29) Off/On Mode Selector Switch [OFF/ON/MODE]
- 30) Operation Mode Lamps [CAMERA/VCR/CARD P.B.]
 (PV-DC252/PV-DC252-K) (→ 14, 20, 29, 36)/[CAMERA/VCR]
 (PV-DC152/PV-DC152-K) (→ 14, 20, 29)
- 31) Tripod Receptacle
 - •Use for mounting the Palmcorder on an optional tripod.
- 32) Battery Eject Lever [BATT] (→ 12)

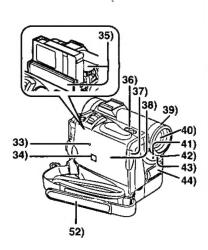

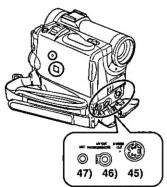

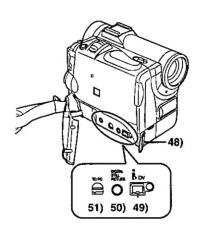


- 33) Reset Button [RESET] (→ 67)
- 34) Speaker
- 35) Cassette Holder
- 36) Cassette Eject Lever [OPEN/EJECT] (→ 13)
- 37) Cassette Cover Close Button [PUSH CLOSE] (→ 13)
- 38) Cassette Compartment Cover (→ 13)
- 39) Lens Hood (→ 62)
- 40) Lens
- 41) Tally Lamp (→ 20)
- 42) White Balance Sensor (→ 26, 63)
- 43) Remote Control Sensor (→ 11)
- 44) Microphone (Built-in, stereo) (→ 21)
- 45) S-Video Output Jack [S-VIDEO OUT] (→ 33)
- 46) Audio-Video Output Jack [A/V OUT] (→ 33) Headphone Jack [PHONES]

Tethered Remote Control Jack [REMOTE]

- Connecting an AV Cable or Tethered Remote Control to this Jack activates the Palmcorder's built-in speaker, but connecting a headphone, etc. deactivates it.
- When plugging the pin plug of the AV cable into the AV output terminal, plug it in as far as it goes.

47) Microphone Jack [MIC]

- Connecting with an external microphone or audio equipment. (When this Jack is in use, the built-in microphone does not operate.) (→ 21)
- 48) Shoulder Strap Holder/Lens Cap String Holder (→ 13)
- 49) DV Terminal (i.LINK) [i] (→ 43)
 - Connect this to the digital video equipment.
 - •"i.LINK" is the name of connectors in accordance with IEEE1394-1995.
 - "\"a" is a logo marked on products conforming with the "i.LINK" specifications.
- 50) Digital Still Picture Terminal [DIGITAL STILL PICTURE]
- 51) USB Jack [TO PC] (PV-DC252/PV-DC252-K) (→ 46)
- 52) Grip Belt (→ 13)

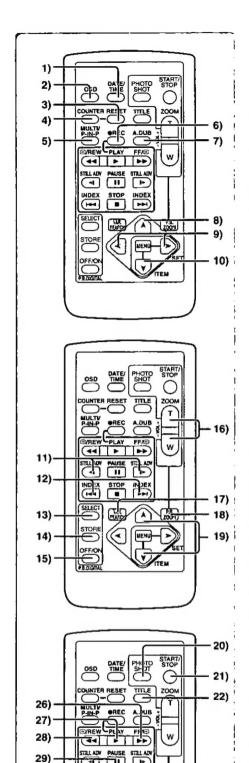

Remote Controller

Using the wireless remote controller that is supplied with the Palmcorder, most of the Palmcorder functions can be operated from a distance.

Remote Controller Buttons

- 1) Date and Time Button [DATE/TIME] (→ 55)
- 2) Indication Output Button [OSD] (→ 33)
- 3) Counter Reset Button (RESET) (→ 63)
- 4) Indication Shift Button [COUNTER] (→ 55)
- 5) Card Multi-Picture Button [MULTI/P-IN-P] (→ 28, 36)
- Recording Button [REC] (→ 43)
- 7) Audio Dubbing Button [A.DUB] (→ 33)
- B) Upward Direction Button [▲] (for Playback Zoom Function) (→ 32)
- Left/Right Direction Button [◄, ➤] (for Playback Zoom Function)
 (→ 32)
- Downward Direction Button [▼] (for Playback Zoom Function)
 32)
- 11) Slow Motion/Still Advance Button [◄, ►]
 (◄: reverse direction. ►: normal direction) (→ 30)
- 12) Index Search Button [I◄◄, ▶►] (I◄◄: reverse direction, ▶►I: normal direction) (→ 31)
- 13) Selection Button [SELECT] (→ 32)
- 14) Store Button [STORE] (→ 32)
- 15) Off/On Button [OFF/ON] (→ 32)
- 16) Zoom/Volume Button [ZOOM/VOL] (→ 21, 22, 29, 32)
- 17) Variable Speed Search Button [VAR.SEARCH] (→ 29)
- 18) Playback Zoom Button [P.B. ZOOM] (→ 32)
- 19) Speed Selection Button [▲, ▼] (for Variable Speed Search Function) (→ 29)

The following buttons function in the same manner as the corresponding buttons on the Palmcorder.

- 20) PhotoShot Button [PHOTO SHOT] (→ 21, 34)
- 21) Recording Start/Stop Button [START/STOP] (→ 20)
- 22) Title Button [TITLE] (→ 39)
- 23) Menu Button [MENU] (→ 15)
- 24) Item Set Button [SET] (→ 15)
- 25) Item Select Button [ITEM] (→ 15)
- 26) Fast-forward/Cue Button [▶▶] (→ 29)
- 27) Play Button [▶] (→ 29, 36)
- 28) Rewind/Review Button [◄◄] (→ 29)
- 29) Pause Button [11] (→ 30, 36)
- 30) Stop Button [■] (→ 29, 36)


Tethered Remote Control

This controller allows the scene to be shot in various angles, high to low and is also convenient when the Tripod is used. When you do not use this controller, attach the clip to the Grip Belt for convenience.

This controller allows the camera to be used more conveniently by a left-handed user.

- When using the Tethered Remote control, plug it in as far as it goes.
- Recording Start/Stop Button [●]
- Zoom Lever [W/T]


23) 24) 25) PhotoShot Button [PHOTO SHOT]

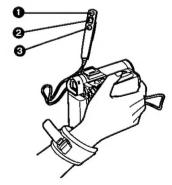

The Grip Belt detached from the Palmcorder can also be used wrapped around the wrist as shown in the illustration on the right.

INDEX

30)

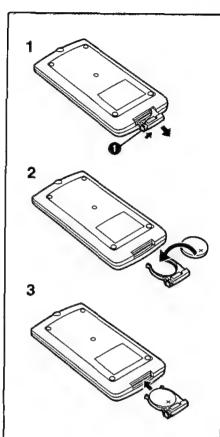



Before using the remote controller, insert the supplied button-type battery.

- 1 While pressing the Stopper 1, pull out the Battery Holder.
- 2 Insert the button-type battery with the imprint (+) facing upward.
- 3 Insert the Battery Holder into the Remote Controller.
- When the button-type battery becomes weak, replace it with a new CR2025 battery. (A battery is normally expected to last about one year. However, it depends on operation frequency.)
- Be sure to match the poles properly when inserting the battery.

Warning

Danger of explosion if battery is incorrectly replaced.


Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.

Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212° F (100° C) or incinerate. Keep the Button-Type battery out of the reach of children. Never put Button-Type battery in mouth. If swallowed, call your doctor.

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion.

Caution: Battery may explode if mistreated.
Dispose of used battery promptly. Keep away from children.

Do not recharge, disassemble or dispose of in fire.

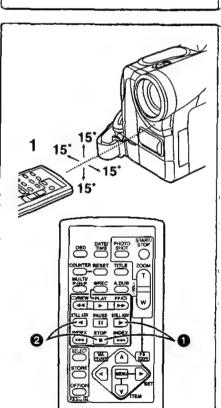

Using the Remote Controller

- Direct the Remote Controller at the Remote Control Sensor on the Palmcorder and press the desired button.
 - •Distance from the Palmcorder: Within approximately 15 feet (5 meters)
 - Angle: Approximately 15 degrees in the vertical and horizontal directions from the central axis
- The above operating ranges are for indoor use. Outdoors, or under strong light, the equipment may not operate properly even within the above ranges.
- Within 3 feet (1 meter) range, you can also use the Remote Controller on the side (the LCD Monitor side) of the Palmcorder.

Selecting Remote Controller Modes

When two Palmcorders are used simultaneously, they can be operated individually by selecting different Remote Controller Modes.

 If the Remote Controller Mode on the Palmcorder and Remote Controller do not match, [REMOTE] is displayed.


Setting on the Palmcorder:

Set [REMOTE] on the [OTHER FUNCTIONS] Sub-Menu to the desired Remote Controller Mode.

Setting on the Remote Controller:

[VCR1]: Press the [▶] Button and [■] Button simultaneously.
[VCR2]: Press the [◄] Button and [■] Button simultaneously.
2


 When the battery in the Remote Controller is replaced, the Mode is automatically reset to [VCR1] Mode.

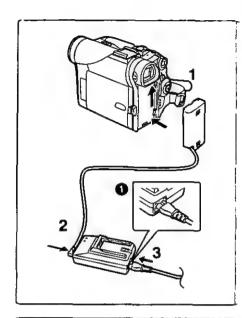

Power Supply

Using the AC Adaptor

- Insert the battery-shaped connector of the DC Cable into the Battery Holder on the Palmcorder.
- 2 Connect the DC Cable to the [DC OUT] Jack on the AC Adaptor.
- 3 Connect the AC Adaptor and AC Cable.
- The AC Cable's outlet plug cannot be pushed fully into the AC Adaptor Jack. A gap will remain as shown
- Before disconnecting the power supply, set the [OFF/ON/MODE] Switch on the Palmcorder to [OFF].
- Battery cannot be charged if DC Cable is connected to AC Adapter.

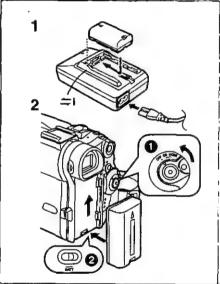

Using the Battery

Before use, fully charge the battery.

- 1 Attach the Battery to AC Adaptor and charge it.
 - Since the Battery will not be charged when the DC Cable is connected to the AC Adaptor, disconnect it.
 - The [POWER] Lamp and [CHARGE] Lamp lights up, and charging starts.
 - •When the [CHARGE] Lamp goes off, charging is completed.
- 2 Attach the charged Battery to the Palmcorder.

Disconnecting the Power Source


Set the [OFF/ON/MODE] Switch 1 to [OFF], and the [BATT] Lever to the right 2, and then slide the Battery to remove it.

- When attaching or removing battery, set [OFF/ON/MODE] Switch to [OFF] and make sure the Operation Mode Lamp is not lit.
- For other notes, see page 56.

| CGR-D08A/1B | (A) | 1 h. |
|-------------|------------|--------------------------------|
| | B | 2 h 10 min. (1 h 35 min.) |
| CGR-D16A/1B | (A) | 2 h. |
| | B | 4 h 20 min. (3 h 10 min.) |
| CGP-D28A/1B | A | 3 h 15 min. |
| | ₿ | 7 h 40 min. (5 h 35 min.) |
| CGR-D53A/1K | (A) | 5 h 20 mln. |
| | B | 14 h 10 min. (10 h 25 min.) |

Charging Time and Available Recording Time

- A Charging Time
- B Maximum Continuous Recording Time
- "1 h 20 min." indicates 1 hour and 20 minutes.
- Battery CGR-D08R is supplied.
- •The hours shown in the table are approximate hours. The numeric characters in parentheses indicate the recording time when the LCD monitor is used. In actual use, the available recording time may be shorter in some cases.
- The hours shown in the table are for continuous recording at a temperature
 of 68°F (20°C) and humidity of 60%. If the Battery is charged at a higher or
 lower temperature, the charging time may longer.

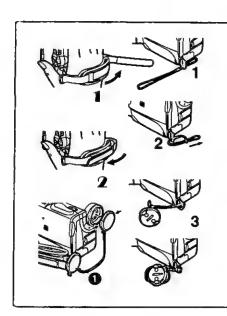

Lens Cap and Grip Belt

Attach the Lens Cap


To protect the Lens surface, attach the Lens Cap.

- 1 Pass the end of the Lens Cap String through the Lens Cap String holder.
- 2 Pass the other end of the String through the loop made by the String itself and pull it toward the direction indicated by an arrow.
- 3 Fit the lens cap onto the lens cap string.
- The removed Lens Cap can be hooked onto the Grip Belt ①. (When you are not recording, be sure to keep the Lens Cap attached to the Lens for protection.)

Adjust the Grip Belt

Adjust the length of the Grip Belt to the size of your hand.


- 1 Detach the tip of the Grip Belt and adjust the length of it.
- 2 Reattach the Grip Belt.

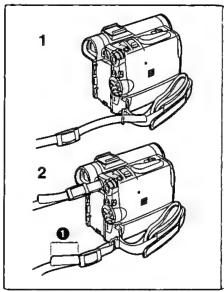

Attaching the Shoulder Strap

We recommend that you attach the Shoulder Strap before going outdoors to record so as to avoid dropping the Palmcorder.

- Pass the tip of the Shoulder Strap through the Shoulder Strap Holder on the Palmcorder and pull the Shoulder Strap.
- 2 Fold the tip of the Shoulder Strap, pass it through the Shoulder Strap Length Adjuster, and pull it.
 - Pull it out more than 1 inch (2 cm) from the Shoulder Strap Length Adjuster so that it cannot slip off.

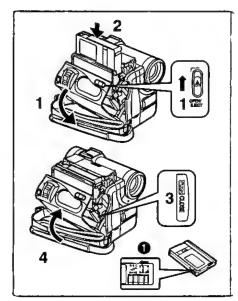


Inserting a Cassette

When power is supplied to the Palmcorder, the cassette can be taken out without turning the Palmcorder on.

- 1 Slide the [OPEN/EJECT] Lever toward the front and pull down to open the Cassette Compartment.
- 2 Insert a Cassette.
- 3 Close the Cassette Compartment by pressing the [PUSH CLOSE] Button.
- Close the Cassette Compartment Cover.
- For other notes, see page 56.

Accidental Erasure Prevention

Opening the accidental erasure prevention slider ① on the cassette (by sliding it in the [SAVE] arrow direction) prevents recording. To enable recording, close the accidental erasure protection slider (by sliding it in the [REC] arrow direction.)

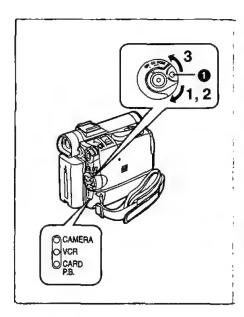

Turning on/off the Palmcorder and Selecting Modes

Turn on the power first and then select Modes.

How to Turn on the Power


- Set the [OFF/ON/MODE] Switch to [ON] while pressing the center Button 1.
 - •The [CAMERA] Lamp lights up.

How to Switch Modes

- 2 Rotate the [OFF/ON/MODE] Switch.
 - With each slide of the Switch, the Mode switches in the order of Camera Mode, VCR Mode, and Card Playback Mode. (PV-DC252/PV-DC252-K)
 - The appropriate Mode Lamp lights up.

How to Turn off the Power

Set the [OFF/ON/MODE] Switch to [OFF] while pressing the center Button 1.

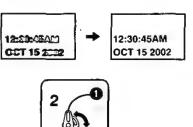

Using the Viewfinder

Before using the Viewfinder, adjust the field of view so that the displays inside the Viewfinder become clear and easy to read.

- Pull the Viewfinder.
- 2 Adjust by turning the Eyepiece Corrector Knob 1.

Using the LCD Monitor

With the LCD Monitor open, you can also record the picture while watching it.

- 1 Set the [OFF/ON/MODE] Switch to [ON].
- 2 Bring out the [OPEN] Tab about 90° in the direction of the arrow to open the LCD Monitor.
 - The Viewfinder goes off.
- 3 Adjust the LCD Monitor angle according to the desired recording angle.
 - ◆The LCD Monitor can rotate a maximum of 180° 2 from the vertical position to the upward direction and a maximum of 90° (3) to the downward direction. Forcefully rotating the LCD monitor beyond these ranges will damage the Palmcorder.

Closing the LCD monitor

Push the LCD Monitor until it is securely locked.

Adjusting Brightness and Color Level

When [LCD/EVF SET] on the [DISPLAY SETUP] Sub-menu is set to [YES], the following items are displayed:

LCD Brightness [LCD BRIGHTNESS]

Adjusts the brightness of the image on the LCD screen.

LCD Color Level [LCD COLOR LEVEL]

Adjusts the color saturation of the image on the LCD screen.

Brightness of the Viewfinder [EVF BRIGHTNESS]


Adjust the brightness of the image in the Viewfinder.

- 1 Press the [PUSH] Dial and select the item you want to adjust.
- 2 Rotate the [PUSH] Dial and increase or decrease the number of the vertical bars on the Bar Indication.
 - The Bar Indication has 8 steps. A larger number of vertical bars indicates stronger brightness or color saturation.


Increasing the Brightness of the Entire LCD Monitor

Set the [LCD MODE] on the [DISPLAY SETUP] Sub-Menu to [BRIGHT].

- These adjustments do not affect the recorded images.
- For other notes, see page 62.

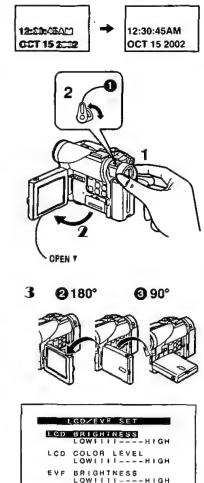


PUSH MENU TO RETURN

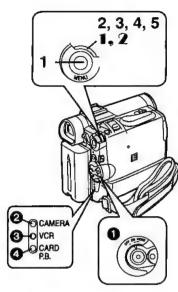








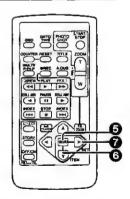



Using the Menu Screen

To facilitate the selection of a desired function or setting, this Palmcorder displays various function settings on menus.

1 Press the [MENU] Button.

- The Menu corresponding to the Mode selected by using the [OFF/ON/MODE] Switch is displayed.
- When the [CAMERA] Lamp is on, the Camera Function Menu is displayed.
- When the [VCR] Lamp is on, the VCR Function Menu is displayed.
- When the [CARD P.B.] Lamp is on, the Card Function Menu is displayed. (a) (PV-DC252/PV-DC252-K)
- 2 Rotate the [PUSH] Dial to select a desired Sub-Menu.
 - Rotate the [PUSH] dial to display the items highlighted.
- 3 Press the [PUSH] Dial to display the selected Sub-Menu.
- 4 Rotate the [PUSH] Dial to select the item to be set.
- 5 Press the [PUSH] Dial to set the selected item to a desired Mode.
 - Each press of the [PUSH] Dial, the cursor [▶] brings up a subsequent Mode. Menu items that cannot be used in combination with the selected menu are displayed in dark blue.
- While a Menu is displayed, you cannot begin to record or play back. Menus can be displayed during playback but not during recording.
- The above operations can be carried out using the Remote Controller.
 (→ 10)
 - To display the Menu, press the [MENU] Button 6 on the Remote Controller.
 - To select items on the Menu, press the [iTEM] Button 6 on the Remote Controller.
 - To set the mode for the selected items, press the [SET] Button on the Remote Controller.

To Exit the Menu Screen

Press the [MENU] Button again.

About the Menu Mode Setting

The setting selected on the Menu will be retained even when the Palmcorder is turned off. However, if the Battery or AC Adaptor is disconnected before Turning the Palmcorder off, the selected setting may not be retained. (But, the setup of [EFFECT2] (> 27) is not retained.)


Menu operation flow is shown in this text by >>.

File Selection in the Card Playback Mode (PV-DC252/PV-DC252-K)

A File Selection Operation may be necessary during Menu Operations. In this case, carry out the following procedure.

- Turn the [PUSH] Dial and select a file.

 The selected file is marked by a frame 3.
- 2 Press the [PUSH] Dial to confirm the selection of the file.
- After the above File Selection Procedure, carry out the various Menu Operations. (The above procedure will not be repeated in the following instructions.)

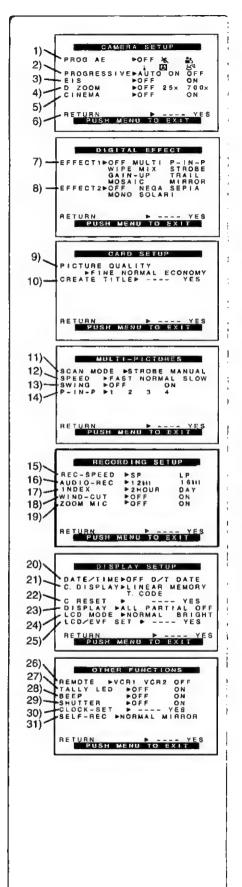

List of Menus

The illustrations of the Menus are for explanation purposes only, and they are different from the actual Menus.

Camera Mode Main-Menu [CAMERA FUNCTIONS] [CAMERA SETUP] Sub-Menu

- 1) Auto Exposure Mode [PROG.AE] (→ 24)
- 2) Progressive PhotoShot Mode [PROGRESSIVE] (→ 21)
- 3) Digital Effect Image Stabilizer [EIS] (→ 22)
- 4) Digital Zoom [D.ZOOM] (→ 22)
- 5) Cinema-like Format Recording [CINEMA] (→ 23)
- 6) Returning to the Main-Menu [RETURN]

[DIGITAL EFFECT] Sub-Menu

- 7) Digital Effects 1 [EFFECT1] (→ 27)
- 8) Digital Effects 2 [EFFECT2] (→ 27)

[CARD SETUP] Sub-Menu (PV-DC252/PV-DC252-K)

- 9) Picture Quality [PICTURE QUALITY] (→ 35)
- 10) Title Creation [CREATE TITLE] (→ 39)

[MULTI-PICTURES] Sub-Menu

- 11) Multi-Picture Mode [SCAN MODE] (→ 28)
- 12) Strobe Multi-Picture Speed [SPEED] (→ 28)
- 13) Swing Mode [SWING] (→ 28)
- 14) Position of Small Picture inside Normal Picture [P-IN-P] (→ 28)

[RECORDING SETUP] Sub-Menu


- 15) Recording Speed Mode [REC-SPEED] (→ 19)
- 16) Audio Recording Mode [AUDIO-REC] (→ 19, 33)
- 17) Index Mode [INDEX] (→ 31)
- 18) Wind Noise Reduction [WIND-CUT] (→ 24)
 - If this function is set to [ON], the sound of wind hitting the microphone can be reduced for recording.
- 19) Zoom Microphone [ZOOM MIC] (→ 21)

[DISPLAY SETUP] Sub-Menu

- 20) Date and Time Indication [DATE/TIME] (→ 55)
- 21) Counter Display Mode [C.DISPLAY] (→ 55)
- 22) Counter Reset [C.RESET] (+ 63)
 - Set the counter value to zero. However, it cannot reset the Time Code.
- 23) Display Mode [DISPLAY] (→ 55)
- 24) LCD Brightness [LCD MODE] (→ 14)
- 25) LCD and Viewfinder Adjustment [LCD/EVF SET] (→ 14)

[OTHER FUNCTIONS] Sub-Menu

- 26) Remote Controller Mode [REMOTE] (→ 11)
- 27) Recording Lamp [TALLY LED] (→ 20)
- 28) Beep Sound [BEEP] (→ 56)
- 29) Shutter Effect [SHUTTER] (→ 21)
- 30) Date and Time Setting [CLOCK-SET] (→ 19)
- 31) Self-Recording [SELF-REC] (→ 20)

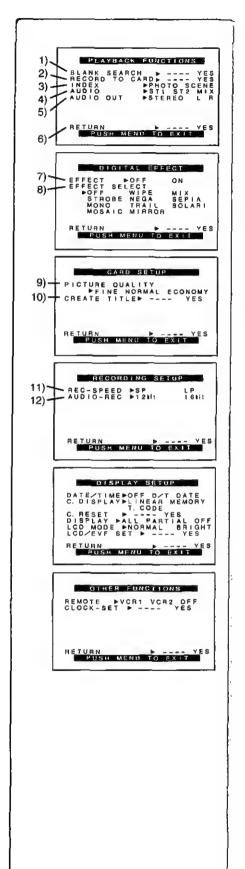

VCR Mode Main-Menu [VCR FUNCTIONS] [PLAYBACK FUNCTIONS] Sub-Menu

- 1) Blank Search [BLANK SEARCH] (→ 30)
- Recording to Card [RECORD TO CARD] (PV-DC252/PV-DC252-K)
 (→ 35)
- 3) Index Search Mode [INDEX] (→ 31)
- 4) Audio Selector [AUDIO] (→ 33)
- 5) Audio Output Mode [AUDIO OUT] (→ 58)
- 6) Returning to the Main-Menu [RETURN]

[DIGITAL EFFECT] Sub-Menu

- 7) Digital Effect On/Off [EFFECT] (→ 32)
- 8) Digital Effect Selection [EFFECT SELECT] (→ 32)

[CARD SETUP] Sub-Menu (PV-DC252/PV-DC252-K)

- 9) Picture Quality [PICTURE QUALITY] (→ 35)
- 10) Title Creation [CREATE TITLE] (→ 39)


[RECORDING SETUP] Sub-Menu

- 11) Recording Speed Mode [REC-SPEED] (→ 19)
- 12) Audio Recording Mode [AUDIO-REC] (→ 19, 33)


[DISPLAY SETUP] Sub-Menu


- •Same as described on page 16.
- [OTHER FUNCTIONS] Sub-Menu
- •Same as described on page 16.









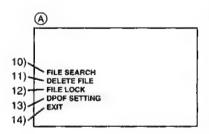

Card Playback Mode Main-Menu [CARD FUNCTIONS] (PV-DC252/PV-DC252-K)

[DELETE CARD FILE] Sub-Menu

- Selecting and deleting a File [DELETE FILE BY SELECTION] (→ 40)
- 2) Deleting All Files [DELETE ALL FILES] (→ 40)
- 3) Selecting and Deleting a Title [DELETE TITLE BY SELECTION] (→ 40)

[CARD EDITING] Sub-Menu

- 4) Recording to Cassette [RECORD TO TAPE] (→ 37)
- 5) Searching a File [FILE SEARCH] (→ 36)
- 6) Setting the Lock [FILE LOCK] (→ 40)
- 7) Setting a Slide Show [SLIDE SHOW] (→ 38)
- 8) Setting DPOF [DPOF SETTING] (→ 41)
- 9) Formatting a Card [CARD FORMAT] (→ 41)

[DISPLAY SETUP] Sub-Menu

• Same as described on page 16.

[OTHER FUNCTIONS] Sub-Menu

Same as described on page 16.

Short-Cut Menus of the Card Playback Mode (PV-DC252/PV-DC252-K) (A)

If you use the Short-Cut Menu, the Card Playback Mode Menu can be called up quickly. Press the [PUSH] Dial to display the Short-Cut Menu, and turn the [PUSH] Dial to select the desired Menu.

10) [FILE SEARCH]:

The [FILE SEARCH] Menu for finding files by number appears. (→ 36)

11) [DELETE FILE]:

The [DELETE FILE] Menu for deleting the file being displayed appears. (→ 40) Use this Menu after the file to be erased appears.

12) [FILE LOCK]:


The [FILE LOCK] Menu to prevent the accidental erasure of files (Lock Setting) being displayed appears. (→ 40) Use this Menu after the file to be locked appears.

13) [DPOF SETTING]:

The [DPOF SETTING] Menu for performing the DPOF settings for the displayed picture appears. (→ 41) Use this Menu after the picture whose DPOF settings are to be performed has appeared.


14) [EXIT]:

For terminating the Short-Cut Menu.

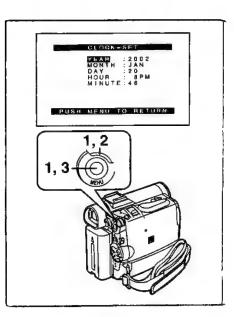

Setting Date and Time


- 1 Press the [MENU] Button and rotate the [PUSH] Dial to select [OTHER FUNCTIONS] >> [CLOCK-SET] >> [YES].
- 2 Rotate and press the [PUSH] Dial to select [YEAR]/[MONTH]/ [DAY]/[HOUR]/[MINUTE] and set it to a desired value.
 - •Year will cycle in the order shown below. 2000→ 2001→ ...→ 2089→ 2000→ ...
- 3 Press the [MENU] Button to finish setting the date and time.
 - The clock operation starts from [00] seconds.
 - The menu will disappear when the [MENU] button is pressed again.
- It is possible that the built-in clock in the Palmcorder may become inaccurate. Please check the time before recording. If the [😂] Indication is flashing, charge the built-in lithium battery and reset the date and time.

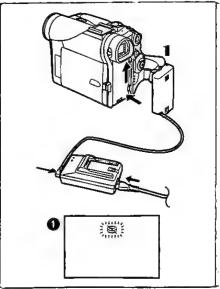

Internal Lithium Battery Recharge

The internal lithium battery sustains the operation of the clock. When the $[\ \ \ \ \]$ Indication $(\ \ \)$ is lit, the internal lithium battery is near exhaustion.

- Connect the AC Adaptor to the Palmcorder with the power turned off and then connect to the AC Jack.
 - After charging for 4 hours, the built-in lithium battery can power the clock for approximately 3 months.

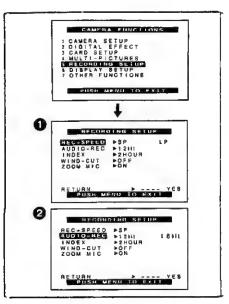

LP Mode

A desired recording speed can be selected with [REC-SPEED] on the [RECORDING SETUP] Sub-Menu.

If LP Mode is selected, the recording time becomes 1.5 times longer than that of SP Mode.


Although the image quality does not decrease with the LP Mode recording, mosaic-like noise patterns may appear on a playback image, or some normal functions may be restricted.

- The contents that are recorded in LP Mode are not completely compatible with other equipment.
- Audio Dubbing is not possible with LP Mode. (→ 33)

Audio Recording Mode

The sound quality of the recorded sound can be selected with [AUDIO-REC] on the [RECORDING SETUP] Sub-Menu.

High sound-quality recording is possible with "16bit 48kHz 2 track" Mode. With the "12bit 32kHz 4 track" Mode, the original sound can be recorded on 2 tracks in stereo, while the other 2 tracks can be used for re-recording.

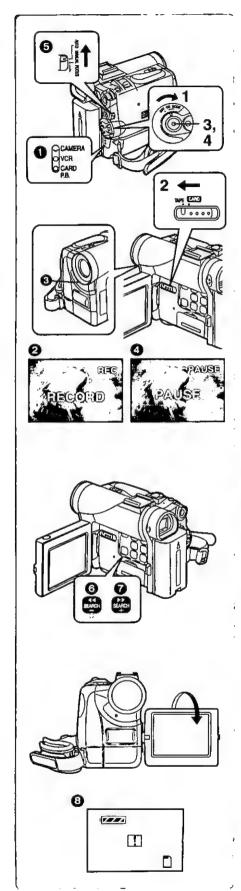

CAMERA Mode

Recording

- 1 Set the [OFF/ON/MODE] Switch to [ON].
 - ◆The [CAMERA] Lamp lights up.
- 2 Slide the [TAPE/CARD] Selector towards [TAPE]. (PV-DC252/PV-DC252-K)
- 3 Press the Recording Start/Stop Button.
 - · Recording starts.
 - After the [RECORD] indicator is displayed, it changes to [REC].
 - The Tally Lamp (LED Lamp) (1) lights up during recording and alerts
 those being recorded that recording is in progress. The Tally Lamp
 does not light up if the [TALLY LED] on the [OTHER FUNCTIONS]
 Sub-menu is set to [OFF].
- 4 Press the Recording Start/Stop Button again to pause the recording.
 - [PAUSE] is displayed.
- If the Recording Pause Mode continues for more than 5 minutes, the power is turned off automatically for tape protection and power conservation. To resume recording from this condition, turn on the power again.
- When recording while the Mode Selector Switch is set to [AUTO] ⑤, the
 Palmcorder automatically adjusts the focus and white balance. (In some
 cases, they cannot be adjusted automatically and need to be adjusted
 manually.) (→ 25, 26)

■ To Check the Recording

By pressing the [] Button (3) in the Recording Pause Mode, you can play back the last few seconds of the recorded scene.

- [CHK] is displayed. After checking, the Palmcorder resumes the Recording Pause Mode.
- To View the recorded scene while the Recording is paused (Camera Search)

The recorded scene can be viewed by holding down the [SEARCH-] Button or [SEARCH+] Button in the Recording Pause Mode.

The Camera Search function is useful for finding the starting point of a new scene to create a smooth transition from one scene to another.

- When the [SEARCH-] Button is pressed, images are played back in the reverse direction.
- When the [SEARCH+] Button is pressed, images are played back in the forward direction.

Self-Recording

By opening the LCD Monitor and turning it so that it faces forward (to the lens side), you can let the subject in front of the Palmcorder monitor the shot while shooting is in progress.

- When the LCD Monitor is opened, the Viewfinder is disabled automatically.
 However, when the LCD Monitor is rotated forward, the image is also shown in the Viewfinder.
- If you prefer to have the image on the LCD Monitor to look like an image in a mirror, set [SELF-REC] on the [OTHER FUNCTIONS] Sub-Menu to [MIRROR]. (Mirror Mode)


Images are recorded normally and no left and right reversal occurs.


- If [MIRROR] is selected, only recording Indication [●], recording pause Indication [●11], Card PhotoShot Indication [□] (PV-DC252/PV-DC252-K) and Remaining Battery Power Indication [□] are displayed ⑤.
- If a general Warning/Alarm Indication [T] appears, return the LCD Monitor to the original position in order to check the specific content of the Warning/ Alarm Indication.

To Finish the Recording

Set the [OFF/ON/MODE] Switch to [OFF].

• For other notes, see page 56.

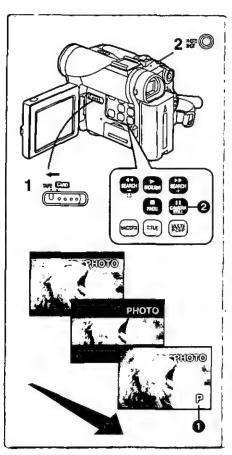

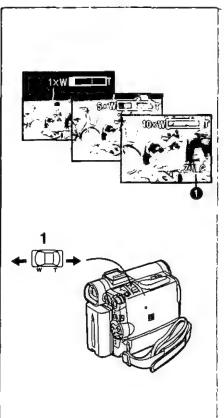

PhotoShot Recording on the DV Cassette

With this function, you can record still pictures with sound for approximately 7 seconds each on the Cassette.

- 1 Slide the [TAPE/CARD] Selector to [TAPE]. (PV-DC252/PV-DC252-K)
- 2 Press the [PHOTO SHOT] Button in the Recording Pause Mode.
 - The Palmcorder records a still picture for about 7 seconds and then switches back to the Recording Pause Mode.
- PhotoShot Recording results in slightly inferior image quality.

Progressive PhotoShotTM Mode

With the progressive PhotoShotTM mode, you can record still pictures with higher resolution than with the normal PhotoShot Function.

- After setting [PROGRESSIVE] on the [CAMERA SETUP] Sub-menu to [ON] or [AUTO], press the [PHOTO SHOT] Button in the Recording Pause Mode. [P] is displayed.

 ●
- This Function may not work with some function settings. (→ 56)
- If you select Card Mode, [PROGRESSIVE] is set to [ON].

Continuous PhotoShot

If the [PHOTO SHOT] Button is held down with the [SHUTTER] of the Sub-Menu [OTHER FUNCTIONS] set to [ON], the Palmcorder will record still images without interruptions every 0.7 seconds until the button is released.

 The screen blinks and, at the same time, a shutter clicking sound is recorded. (This function, however, is not enabled when Progressive PhotoShot is set to [ON] or [AUTO].)

Digital Still Picture

When the [CAMERA STILL] Button ② is pressed, images become still pictures. When the Button is pressed again, the Digital Still Picture Mode is cancelled.

- We recommend that you press the [CAMERA STILL] Button first at the position where you want to record the picture and then press the [PHOTO SHOT] Button.
- For the still pictures taken in the Continuous PhotoShot Mode or Digital Still Picture Mode, PhotoShot index signals are not recorded.

Zoom In/Out Functions

It gives special effects to the Palmcorder by Recording objects close by or with wide-angle shot.

1 For wide-angle shots (zoom out):
Press the [W/T] zoom lever towards [W].
For close-ups (zoom in):
Press the [W/T] zoom lever towards [T].


- Zoom magnification is displayed for a few seconds.
- Generally speaking, when the {W/T} zoom lever is pressed farther towards
 [W] or [T], the zooming speed gradually increases.


Taking Close-up Shots of Small Subjects (Macro Close-up Function) When the zoom magnification is $1 \times$, the Palmcorder can focus on a subject that is as close as approximately 1.5 inches (35 mm) from the lens. With this feature, small subjects such as insects can be recorded.


To Use the Zoom Microphone Function

Along with the zooming operation, the microphone's directional angle and sensitivity are varied for recording sounds.

- Set [CAMERA FUNCTIONS] >> [RECORDING SETUP] >> [ZOOM MIC] >> [ON]. (The [Z.MIC] Indication is displayed. (1))
- The Zoom Microphone Function may not work effectively if the surrounding noise is too loud.
- When the [TAPE/CARD] Selector is set to [CARD], the Zoom Microphone Function does not work. (PV-DC252/PV-DC252-K)
- For other notes, see page 56.

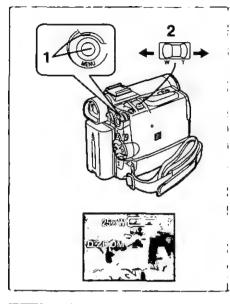

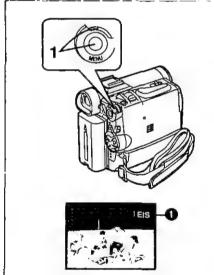

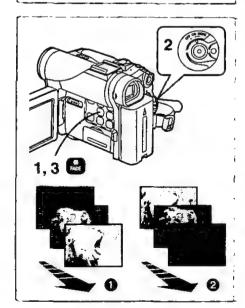

Digital Zoom Function

This function is useful when you want to record close-up shots of subjects located beyond a normal zoom range of 1× to 10× magnification. With the Digital Zoom Function, you can select a magnification of 25× or 700×.

- 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [D.ZOOM] >> [25x] or [700x].
 - ●25×: Digital zooming to 25×
 - ●700×: Digital zooming to 700×
- 2 To zoom in or out, press the [W/T] zoom lever towards [T] or towards [W].
- As the magnification of digital zooming increases, the quality of image may deteriorate.

Canceling the Digital Zoom Function

Set [D.ZOOM] on the [CAMERA SETUP] Sub-menu to [OFF].

• For other notes, see page 56.

Digital Electronic Image Stabilizer Function

If you are recording in unstable situations and the Palmcorder is shaky, you can use this function to correct for camera shake in these images.

- If the Palmcorder shakes too much, this function may not be able to stabilize images.
- 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [EIS] >> [ON].
 - •The [EIS] Indication 1 appears.

Canceling Digital Electronic Image Stabilizer

Set [EIS] on the [CAMERA SETUP] Sub-Menu to [OFF].

EIS function may not work when...

- Palmcorder movement is too extreme.
- Recording a subject with distinct horizontal or vertical stripes.
- Recording in low light situations.
- Recording a subject under a great amount of fluorescent light.
- · Recording a scene with very fast movement.
- For other notes, see page 56.

Fade In/Out Functions

Fade In


Fade in brings out images and sounds gradually from a black screen at the beginning of a scene.

- 1 Hold down the [FADE] Button while the Palmcorder is set to the Recording Pause Mode.
 - The image fades out gradually.
- When the image is completely gone, press the Recording Start/Stop Button to start recording.
- 3 Release the [FADE] Button about 3 seconds after starting recording.
 - The image reappears gradually.

Fade Out 2

Fade Out causes images and sounds to disappear gradually, leaving a black screen at the end of a scene.

- 1 Hold down the [FADE] Button while recording.
 - The image fades out gradually.
- 2 About 3 seconds after the image is completely gone, press the recording Start/Stop Button to stop recording.
- 3 Release the [FADE] Button.
- For other notes, see page 57.

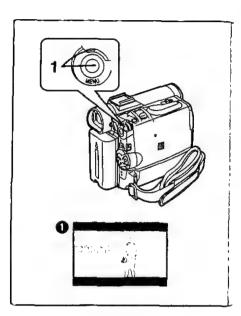

Cinema Function


This function is for recording in a cinema-like wide screen.

- 1 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> [ON].
 - •Black bars appear at the top and bottom of the screen.

To Cancel the Cinema Mode

Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> [OFF].

• For other notes, see page 57.

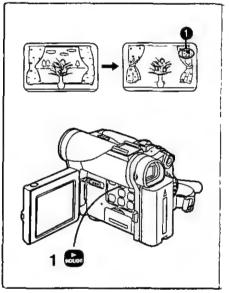

Backlight Compensation Function


This function prevents a recording subject from being recorded too dark in backlight. (Backlight is the light that shines from behind a recording subject.)

- 1 Press the [BACKLIGHT] Button.
 - •The [] Indication 1 flashes and then is displayed.

To resume normal Recording

Press the Backlight Button [BACKLIGHT].

- When the [BACKLIGHT] Button is pressed, the entire screen becomes brighter.
- By operating the [OFF/ON/MODE] Switch, the Backlight Compensation Function is cancelled.
- This function cannot be used when the Iris is set.

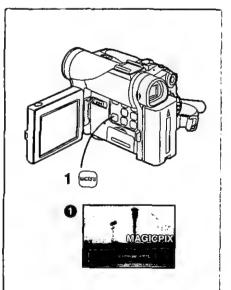



Magic Pix Function


This Palmcorder automatically adjusts the shutter speed in accordance with the amount of available light. Objects can be brightly isolated from backgrounds with a luminance of one lux (where the shutter speed is set to 1/2 second.)

1 Press the [MAGICPIX] Button.

- The [MAGICPIX] Indication 1 appears.
- In a bright place, the mode temporarily reverts to the normal recording mode.
- The recorded picture is presented in a time-lapse-like manner.
- Focusing must be adjusted manually.
- Use this function only in situations where there is limited light. Do not use it in brightly lit places or aim at the sun. The Palmcorder will be seriously damaged.
- The Progressive Function is automatically turned off.
- •The Continuous PhotoShot Function cannot be used.
- ·White Balance cannot be set.
- The electronic shutter cannot be adjusted.
- The AE or Digital Effect Functions cannot be set.
- The Image Stabilizer does not function.

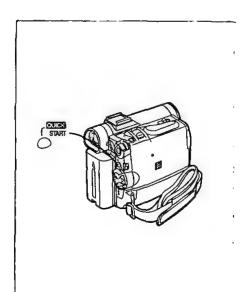

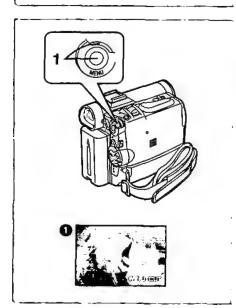

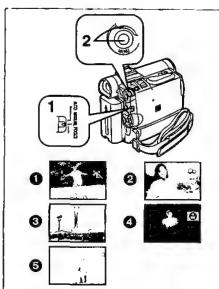

Quick Start

When this feature is activated, you can resume recording quickly even if the Palmcorder goes into standby mode (when left in Pause mode for 5 minutes). Palmcorder will be ready for shooting in approximately 1.5 seconds when the Power switch is turned [OFF] and back to [ON] again. To activate this feature, press the [QUICK START] button to turn on the Quick Start Lamp.

However, this feature will not work under the following conditions even if the Quick Start Recording Lamp is on:

- If there is no tape inserted while Palmcorder is set to Tape mode.
- If there is no card inserted while Palmcorder is set to Card mode.
 If the [QUICK START] Button is pressed and held for approximately
 2 seconds while the Quick Start Lamp is on, the lamp will go off and the

power will completely be turned off.

Also, if the Palmcorder is not operated for approximately 30 minutes while the Quick Start Recording Lamp is on, the lamp will go off and the power will completely be turned off.

If the battery is replaced while in the Quick Start mode, the Quick Start mode is retained.

During the Automatic White Balance Mode, the color may be recorded unnaturally at the beginning of the recording.

The zoom magnification differs from when it is in the Recording Pause mode and when the recording starts.

Wind Noise Reduction Function

This function reduces the noise that the wind makes as it hits the microphone during recording.

- 1 Set [CAMERA FUNCTIONS] >> [RECORDING SETUP] >> [WIND-CUT] >> [ON].

Recording In Special Situations

(Program AE)

Select optimal automatic exposures under specific recording situations.

- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication appears.
- 2 Set [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [PROG.AE] >> a desired Mode [¾,], [♣], [♠], [♠], [♠].
 - The Indication of the selected Mode is displayed.

[🔏] Sports Mode 🕦

For Recording scenes involving quick movements, such as sports scenes.

[造] Portrait Mode 2

Focuses on the main subject of the image and leaves the background slightly out of focus.

[4] Low Light Mode (3)

Preserves the mood of dim light settings without altering picture brightness.

[3] Spotlight Mode 4

Neutralizes the additional brightness created by a spotlight.


[8 Surf & Snow Mode 6

Compensates for excessive illumination from sun glare to produce a clear picture.

Canceling the Program AE Function

Set [PROG.AE] on the [CAMERA SETUP] Sub-Menu to [OFF]. Or, set the Mode Selector Switch to [AUTO].

• For other notes, see page 57.

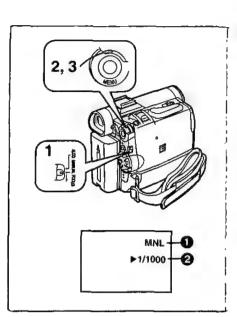

Manual Shutter Speed Adjustment

Useful for Recording fast-moving subjects.

- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication 1 appears.
- 2 Press the [PUSH] Dial repeatedly until the shutter speed Indication 2 appears.
- 3 Rotate the [PUSH] Dial to adjust the shutter speed.

The Range of Shutter Speed Adjustment

1/60-1/8000

The standard shutter speed is 1/60 second.


Selecting a speed closer to [1/8000] causes the shutter speed to be faster, resulting in crisper captures of moving subjects but a lower light level.

 When the progressive function is [ON], a speed only up to 1/500 can be used.

To Resume Automatic Adjustment

Set the Mode Selector Switch to [AUTO].

• For other notes, see page 57.

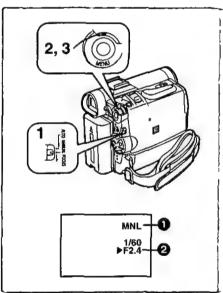

Manual Iris Adjustment (F Number)

You can use this function when the screen is too bright or too dark.

- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication appears.
- Press the [PUSH] Dial repeatedly until the iris Indication appears.
- 3 Rotate the [PUSH] Dial to adjust the iris.

Adjustable Range of the Iris

CLOSE (Closed), F16, ..., F1.7,


OP (Opened) 0dB, ..., 18dB

When a value closer to [CLOSE] is selected, the image becomes darker. When a value closer to [OP+18dB] is selected, the image becomes brighter. The value to which +dB is attached indicates a gain value. If this value is too large, the quality of the image deteriorates.

To Resume Automatic Adjustment

Set the Mode Selector Switch to [AUTO].

• For other notes, see page 57.

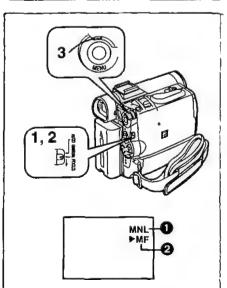


Manual Focus Adjustment


Focus can be adjusted manually for recording in a situation where auto focus may not function well.


- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication appears.
- 2 Set the Mode Selector Switch to [FOCUS].
 - The [►MF] Indication (Manual Focus Mode) 2 appears.
- 3 Rotate the [PUSH] Dial to adjust the focus.

To Resume Automatic Adjustment

Set the Mode Selector Switch to [AUTO].

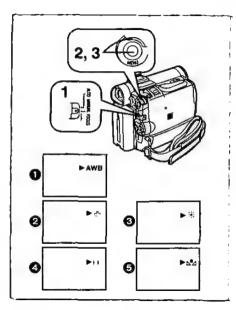

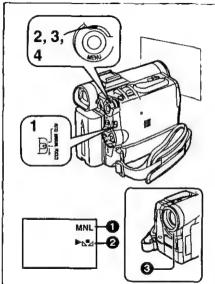

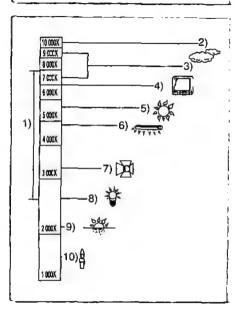

Recording in Natural Colors (White Balance)

Depending on the scene or light conditions, the Automatic White Balance Adjustment Mode may not be able to bring out natural colors. In such a case, the white balance can be adjusted manually.

- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication appears.
- 2 Press the [PUSH] Dial.
 - The [AWB] Indication appears.
- 3 Rotate the [PUSH] Dial to set a desired White Balance Mode.
- Automatic White Balance Adjustment [AWB]
- Indoor Mode (shooting under incandescent lighting) [----]
- Outdoor Mode [※]
- ◆ Fluorescent light Mode [禁]
- 5 The White Balance setting that was previously set manually []

To Resume Automatic Adjustment

Rotate the [PUSH] Dial until the [AWB] Indication appears. Or, set the Mode Selector Switch to [AUTO].

- When power is turned on with the Lens Cap on, the Automatic White Balance Adjustment may not function properly. Please turn on the Palmcorder after removing the Lens Cap.
- For other notes, see page 57.

Adjusting MU to Date of Advanced to the Control of the Control of

Adjusting White Balance Manually

When the Auto White Balance Adjustment function does not operate suitably under the existing light conditions, use the Manual White Balance Adjustment mode.

- 1 Set the Mode Selector Switch to [MANUAL].
 - The [MNL] Indication appears.
 - Press the [PUSH] Dial.
 - •The [AWB] Indication appears.
 - B Rotate the [PUSH] Dial until the [№] indication ② is displayed.
- 4 Point the Palmcorder at a full-screen white subject, and then keep the [PUSH] Dial pressed until indication [№] stops flashing.
 - When the [№] indication flashes after turning the Palmcorder on, the previously adjusted white balance setting is still kept.

To Resume Automatic Adjustment

Rotate [PUSH] Dial until the [AWB] Indication is displayed. Or, set the Mode Selector Switch to [AUTO].

MAbout White Balance Sensor

The White Balance Sensor 3 determines the nature of the light source during recording.

Do not cover the White Balance Sensor with your hand during recording.
 Otherwise, White Balance will not work normally.

Use of Auto White Balance Adjustment in inappropriate lighting conditions may result in reddish or bluish images. Where the subject is found on the left, but surrounded by many light-sources, Auto White Balance Adjustment may not operate properly. In such a case, we suggest that you adjust the White Balance.

- The range that is controlled by the Auto White Balance Adjustment Mode of this Palmcorder
- 2) Blue sky
- 3) Cloudy sky (Rain)
- 4) TV screen
- 5) Sunlight
- 6) White fluorescent light
- 7) Halogen light bulb
- 8) Incandescent light bulb
- 9) Sunrise and sunset
- Candlelight
- For other notes, see page 57.

1) MULTI 2) P-IN-P





4) MIX



5) STROBE



6) GAIN-UP



7) TRAIL



8) MOSAIC



9) MIRROR



10) NEGA



11) SEPIA




12) MONO



13) SOLARI



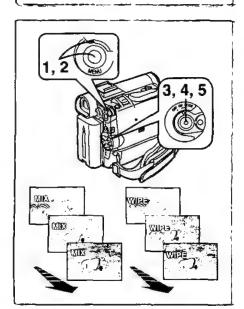

Digital Effect Functions

This Palmcorder is equipped with digital effect functions that add special effects to the scene.

Digital Effects 1 [EFFECT1]

- 1) [MULTI] Multi-Picture Mode
- 2) [P-IN-P] Picture-in-Picture Mode
- 3) [WIPE] Wipe Mode
- 4) [MIX] Mix Mode
- 5) [STROBE] Strobe Mode
 - Records images with a stroboscopic effect.
- 6) [GAIN-UP] Gain-up Mode
 - ·Brightens images electronically.
 - Adjust focus manually when using this Mode.
- 7) [TRAIL] Trailing Effect Mode
 - Records images with a trailing effect.
- 8) [MOSAIC] Mosaic Mode
 - Produces a mosaic-like image.
- 9) [MIRROR] Mirror Mode
 - •The right half of an image becomes a mirror image of the left half.

Digital Effects 2 [EFFECT2]

- 10) [NEGA] Negative Mode
 - •The colors of the recorded image are inverted as seen in a negative.
- 11) [SEPIA] Sepia Mode
 - •Records a scene with a brownish tint, like the color of old pictures.
- 12) [MONO] Black & White Mode
 - ·Records an image in black and white.
- 13) [SOLARI] Solarization Mode
 - Records an image with a painting-like effect.

Selecting a desired digital effect

Set [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] or [EFFECT2] >> a desired digital effect.

Canceling the digital effect

Set [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] or [EFFECT2] >>[OFF].

• For other notes, see page 58.

Wipe Mode and Mix Mode


Wipe Mode:


Like a curtain being pulled, the still picture of the last recorded scene gradually changes to the moving image of a new scene.

Mix Mode:

While the moving image of a new scene fades in, the still image of the last recorded scene gradually fades out.

- 1 Set [DIGITAL EFFECT] >> [EFFECT1] >> [WIPE] or [MIX].
- 2 Exit the menu by pressing the [MENU] Button.
 - ◆The [WIPE] or [MIX] Indication appears.
- 3 Press the Recording Start/Stop Button to start the Recording.
- 4 Press the Recording Start/Stop Button to pause the Recording.
 - The last scene is stored in memory. The [WIPE] or [MIX] Indication changes to [WIPE] or [MIX].
- 5 Press the Recording Start/Stop Button to restart the Recording.
 - The last image of the previous scene gradually changes to the new scene.
- For other notes, see page 58.

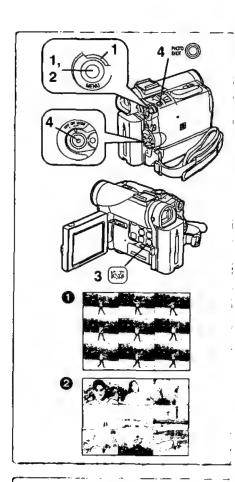

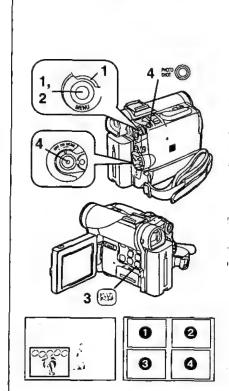

Multi-Picture Mode

Strobe Multi-Picture Mode 1:

You can capture and record 9 consecutive small still pictures.

Manual Multi-Picture Mode 2:

You can manually capture and record 9 small still pictures.

After setting [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] >> [MULTI].....

1 Set [MULTI-PICTURES] >> [SCAN MODE] >> [STROBE] or [MANUAL].

When [STROBE] is selected:

•Set the [SPEED] to a desired strobe speed.

[FAST]: You can capture 9 consecutive still pictures within

approximately 1 second

[NORMAL]: You can capture 9 consecutive still pictures within

approximately 1.5 seconds

[SLOW]: You can capture 9 consecutive still pictures within

approximately 2 seconds

If you set [SWING] on the [MULTI-PICTURES] Sub-Menu to [ON], the
intervals at which the 9 still pictures are taken are longer at the
beginning and end than in the middle of the swing strobe period, and it
is useful for analyzing swing motion, etc., in sports.

When [MANUAL] is selected:

- You can select a desired scene one at a time up to 9 small pictures.
- 2 Exit the menu by pressing the [MENU] Button.
- 3 Press the [MULTI] Button.
 - If [MANUAL] is selected, press the [MULTI] Button at each scene you want to capture.
- 4 Press the Recording Start/Stop Button or the [PHOTO SHOT] Button to record on the Cassette.

Deleting all the captured Multi-Pictures

While 9 multi-pictures are displayed, press the [MULTI] Button.

 If [MANUAL] has been selected, press the [MULTI] Button after 9 pictures are displayed.

To Display the Multi-Pictures again

Press the [MULTI] Button for 1 second or longer.

To Delete Multi-Pictures one by one (When pictures were captured in [MANUAL])

When the [MULTI] Button is pressed for 1 second or longer while the still pictures are displayed, the picture captured last is deleted. If you keep pressing the [MULTI] Button, the pictures are deleted continuously.

After still pictures are deleted one by one, they cannot be displayed again.

• For other notes, see page 58.

Picture-in-Picture Mode


You can display a sub-screen (still picture) inside the screen.


After setting [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] >> [P-IN-P].....

- 1 Select [P-IN-P] on the [MULTI-PICTURES] Sub-Menu and set the position (1234) where you want to insert a small still picture.
- 2 Exit the menu by pressing the [MENU] Button.
- 3 Aim the Palmcorder at the scene you want to capture and press the [P-IN-P] Button to insert a small still picture.

A small still picture is displayed in a Normal picture.

- If the [P-IN-P] Button is pressed again, the small still picture is cleared.
- 4 Press the Recording Start/Stop Button or the [PHOTO SHOT] Button to record on the Cassette.
- •For other notes, see page 58.

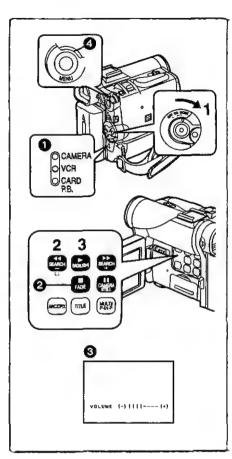

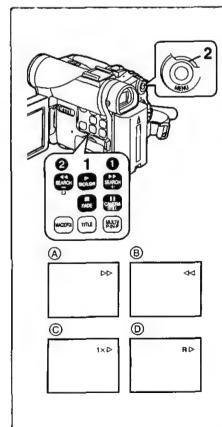

VCR Mode

Playing Back

The recorded scene can be played back immediately after recording.

- 1 Rotate the [OFF/ON/MODE] Switch and set the Palmcorder in the VCR Mode.
 - The (VCR) Lamp lights up.
- 2 Press the [◄◄] Button to rewind the tape.
 - Rewind the tape to the point where you want to start playback.
 - When the tape reaches the beginning, rewinding stops automatically.
- Press the [▶] Button to start playback.

To Stop Playback

Press the [] Button 2.

 If a Cassette recorded with copyright protection signals is played back, the screen becomes blue or mosaic-like noise patterns appear.

Adjusting the Sound Volume

Until the [VOLUME] Indication (3) appears, keep pressing the [PUSH] Dial 4. Then, rotate the [PUSH] Dial to adjust the volume. After the adjustment, press the [PUSH] Dial to make the [VOLUME] Indication disappear. To adjust the volume with the Remote Controller, press the [T] or [W] Button to display the [VOLUME] Indication. Press the [T] Button to increase the volume or press the [W] Button to decrease the volume. The [VOLUME] Indication goes off 2 or 3 seconds after the adjustment is finished.

- When the Playback Zoom Function is in use, the sound volume cannot be adjusted.
- For other notes, see page 58.

Finding a Scene You Want to Play Back

■ Cue/Review Playback

Cue Playback (A)

Press the [>>] Button 1 during playback.

Review Playback (B)

Press the [◄◄] Button 2 during playback.

- If the Button is held continuously, it remains as Cue Playback or Review Playback until you release it.
- If the Button is pressed briefly, Cue Playback or Review Playback continues even when it is released.

Hyper Check Function

If you press the [▶▶] Button during fast-forwarding of the tape or the [◄◄] Button during rewinding of the tape, Cue Playback or Review Playback continues for as long as the Button is held down.

■ Variable Speed Search Function

The speed of Cue Playback or Review Playback can be varied.

- During playback, press the [▶] Button.
 - [1×▷] Indication appears. (C)

Rotate the [PUSH] Dial and select a desired search speed.

The following 6 playback speeds are available for the Variable Speed Search Function in both the fast-forwarding and rewinding directions. 1/5× (slow playback, SP mode only), 1/3× (slow playback, LP mode only),1×, 2×, 5×, 10×, and 20×.

• The same setting can be performed using the Remote Controller's the [VAR.SEARCH] Button, the [▲] Button and the [▼] Button.


Resuming Normal Playback

Push the [▶] Button.

- During Cue or Review Playback, fast-moving images may show mosaic-like noise patterns. This is not a malfunction.
- The sound is muted during search.

Repeat Playback

If you hold down the [▶] Button for 5 seconds or longer, the Palmcorder switches to Repeat Playback Mode, and the [R ▷] Indication appears (D). (To cancel Repeat Playback Mode, set the [OFF/ON/MODE] Switch to [OFF].)

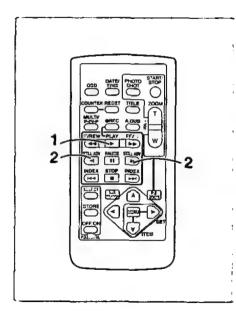

Slow Motion Playback

This Palmcorder can play back at a slow speed.


- Press the [▶] Button.
- Press the [◄1] Button or the [▮►] Button on the Remote Controller.
 - When the [◄] Button is pressed, Slow Motion Playback proceeds in the reverse direction, while pressing the [▶] Button starts Slow Motion Playback in the forward direction.

Scenes recorded in the SP mode are played back at approximately 1/5th of the normal speed.

Scenes recorded in the LP mode are played back at approximately 1/3rd of the normal speed.

Resuming Normal Playback

Press the [] Button.

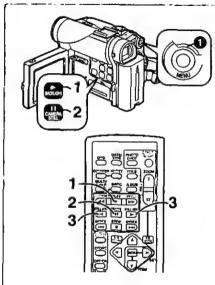

Still Playback/Still Advance Playback

This Palmcorder is capable of still picture playback and frame-advance playback.

- Press the [▶1 Button.
- Press the [II] Button.
 - The playback image stops in the Still Playback Mode.
- Press the [◄] Button or the [▶] Button on the Remote
 - ●With each pressing of the [◄] Button, still pictures advance in the reverse direction. With each pressing of the [▶] Button, still pictures advance in the forward direction. If either one of the Buttons is pressed continuously, still pictures advance continuously one frame at a time until the Button is released.

Resuming Normal Playback

Press the [▶] Button or [11] Button.

Jog Playback

By rotating the Jog Dial ([PUSH] Dial) 1 of the Palmcorder in the Still Playback Mode, still pictures can be advanced one frame at a time in the forward or reverse direction.

 If the Palmcorder is left in the Still Playback Mode for more than 5 minutes. the Palmcorder switches to the Stop Mode to protect the video heads from excessive wear and tear.

Finding the End of a Recording


(Blank Search Function)


The Blank Search Function helps you to locate the end of a Recording on the Cassette quickly.


- Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [BLANK SEARCH] >> [YES].
 - The [BLANK] Indication 1 appears.
 - Approximately 1 second before the last recorded scene, the Palmcorder switches to the Still Playback Mode.
 - If there is no blank portion left on the Cassette, the Palmcorder stops at the end of the tape.

Canceling Blank Search prior to completion


Press the [] Button.

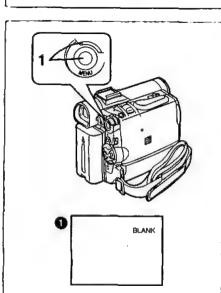

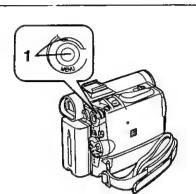

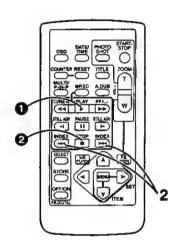





Index Search Functions

To facilitate searching of desired scene, this Palmcorder automatically records index signals during recording, as explained in the following.

PhotoShot Index Signal

These signals are automatically recorded whenever still pictures are taken in PhotoShot Mode (→ 21).

When recording still pictures using the Continuous PhotoShot Mode (→ 21), the index signal is not recorded.

Scene Index Signal

Scene Index Signals are automatically recorded when you start recording after inserting a Cassette.

However, if the Palmcorder is switched from the VCR Mode to Camera Mode, or if the date and time is set before the start of recording, the index signal is not recorded.

• If (INDEX) of [RECORDING SETUP] Sub-Menu on the

[CAMERA FUNCTIONS] Main-Menu is set to [2HOUR], an index signal is recorded when Recording is restarted after a lapse of 2 hours or longer. If it is set to [DAY], an index signal is recorded when recording is restarted after the date has changed since the last recording. (While the index signal is recorded, the [INDEX] indication (A) flashes for a few seconds.)

PhotoShot Index Search

- 1 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [INDEX] >> [PHOTO].
- 2 Press the [▶▶I] Button or the [I◄◄] Button on the Remote Controller.
- With each press of the corresponding button, still pictures recorded in PhotoShot Mode are searched.
- After Pictures with Sounds are played back for 4 seconds, the Palmcorder switches to the Still Playback Mode.


Scene Index Search


- 1 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [INDEX] >> [SCENE].
- 2 Press the [►►I] Button or the [I◄◄] Button on the Remote Controller.
- When the corresponding Button is pressed once, the [S 1] Indication (B) appears, and searching of the subsequent scene marked with an index signal starts. Each time the button is pressed after the start of Scene Index Search, the indication changes from [S 2] to [S 9], and the beginning of the scene corresponding to the selected number will be searched. After reaching the desired scene, playback starts automatically.
- Up to 9 scene numbers can be selected.


Top Scan

If the [►►] Button or the [◄◄] Button is pressed for more than 2 seconds, the Palmcorder will scan for scenes (or PhotoShots) and playback the first few seconds of each. (To cancel, press the [►] Button ① or the [■] Button ②.)

• For other notes, see page 58.

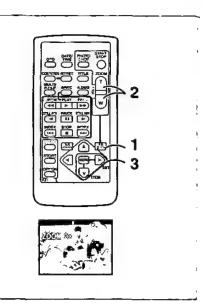

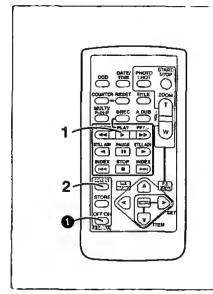

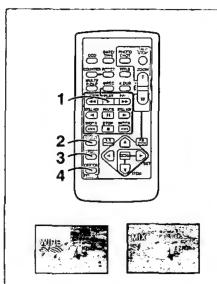

Playback Zoom Function

A part of the image can be enlarged up to 10 times during playback.

- 1 During playback, press the [P.B. ZOOM] Button on the Remote Controller.
 - The center of the image is enlarged to approximately double the size.

Changing the Zoom Magnification

- 2 Change the magnification by pressing the [W] or [T] Button on the Remote Controller.
 - You can increase the magnification up to 10x.

Changing the enlarged area of an image

- 3 Press the Arrow Button (▲, ◄, ➤, ▼) on the Remote controller that points to the area you want to enlarge.
 - When the playback is stopped, the position of the enlarged image area is reset to the center automatically.

Canceling the Playback Zoom Function

Press the [P.B. ZOOM] Button on the Remote Controller.

• For other notes, see page 58.

Playback Digital Effect Functions

During playback, special Digital Effects can be added to the Recording. The digital effects that may be applied in the process of recording (except Picture in Picture Mode) will be the same as these added effects.

- 1 Press the [▶] Button.
- 2 Press the [SELECT] Button of the Remote Controller and select desired Digital Effect.
 - When the [SELECT] Button is pressed repeatedly, the Digital Effect selection changes.
 - WIPE \rightarrow MIX \rightarrow STROBE \rightarrow NEGA \rightarrow SEPIA \rightarrow MONO \rightarrow TRAIL \rightarrow SOLARI \rightarrow MOSAIC \rightarrow MIRROR
 - The same setting can also be set using the [DIGITAL EFFECT] on the [VCR FUNCTIONS] Main-Menu.

Suspending Playback Digital Effect Temporarily

Press the [OFF/ON] Button ① to clear or restart the digital effect. When the Digital effect is paused temporarily, the selected effect's indication flashes.


Canceling the Digital Effect

Press the [SELECT] Button on the Remote Controller repeatedly until the Digital Effect Indication is cleared.

For other notes, see page 58.

Playback with Wipe Mode and Mix Mode

- 1 Press the [▶] Button to start playback.
- 2 Press the [SELECT] Button of the Remote Controller and select [WIPE] or [MIX].
- 3 Press the [STORE] Button at the moment you want to save as a still picture.
 - The last scene is stored in memory. The (WIPE) or [MIX] Indication changes to [WIPE] or [MIX].
- 4 Press the [OFF/ON] Button in the scene in which you want to use the Wipe or Mix effect.
 - The scene changes as a result of the Wipe or Mix effect.
- The Wipe Function and Mix Function can be used only from the Remote Controller during playback.
- If the [OFF/ON] Button is pressed while Wipe Function or Mix is used, the
 effect will stop temporarily at that point. Pressing the [OFF/ON] Button again
 will bring back the effect.

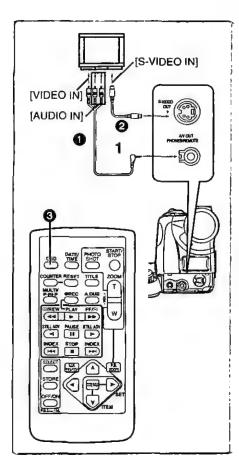

Playing Back on Your TV


By connecting your Palmcorder to your TV, the recorded scenes can be viewed on your TV screen.

- Before connecting them, turn off the power of both the Palmcorder and TV.
- 1 Connect the [A/V OUT] Jack of the Palmcorder to the Video and Audio Input Jacks of the TV.
 - Using the AV Cable (supplied), make a connection with the TV. If the TV has an S-Video Jack, connect an S-Video Cable (not supplied)
 too.

Making the Indications Appear on the TV screen

Press the [OSD] Button (3) on the Remote Controller.

- Be sure to select the proper input on your TV. (If necessary, consult your TV's operating instructions.)
- If you play back a Cassette recorded with copyright protection signals, the screen becomes blue or mosaic-like noise patterns appear.

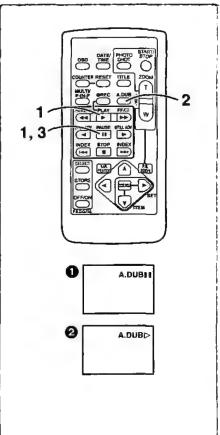

Audio Dubbing

You can add music or narration to the recorded Cassette.

- If you perform audio dubbing onto a tape that was recorded with [AUDIO-REC] on the [RECORDING SETUP] Sub-Menu of the [CAMERA FUNCTIONS] Main-Menu set to [16bit], the original sound is erased. (If you want to preserve the original sound, use the [12bit] Mode when recording.)
- Audio Dubbing cannot be performed onto recordings made in LP Mode.
 (→ 19)
- 1 Press the [▶] Button, and then press the [▮] Button at the point where you want to start dubbing.
- Press the [A.DUB] Button on the Remote Controller.

 [A.DUB11] Indication appears.
- 3 To start Audio Dubbing, press the [II] Button on the Remote Controller.
 - •[A.DUB▷] Indication appears. 2

To Stop Audio Dubbing

Press the [11] Button on the Remote Controller.

The Palmcorder is in the Still Playback Mode again.

Playing Back the Sound Recorded with Audio Dubbing (For 12 bit Audio Recording)

Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [AUDIO] >> [ST2] or [MIX].


ST1: Play back only the original sound.


ST2: Play back only the sound added by Audio Dubbing

MIX: Play back both the original sound and the sound added by Audio

Dubbing simultaneously.

• For other notes, see page 58.

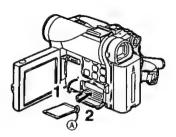

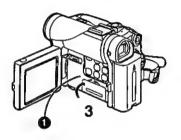

Special Features

The PV-DC252 and PV-DC252-K models come with card functions.

Using a Memory Card

A Card can be used to record files or play back files.

Use a genuine SD Memory Card or MultiMediaCard only.

Inserting a Memory Card

Before inserting a Memory Card, be sure to turn off the Palmcorder.

- Open the Card Slot Cover.
- While holding the Memory Card with its cut corner (A) facing right, insert it into the Card Slot.
- 3 Close the Card Slot Cover securely.

Removing the Card


Open the Card Slot Cover, press the centre of the Card and then pull it straight out.

- After removing the Card, close the Card Slot Cover.
- The Palmcorder or the Card may be damaged if the Card is forced out when the Card is fully inserted.

[ACCESS] Lamp

While the Palmcorder is accessing the Card (reading, recording, playback, erasing, moving of images), the [ACCESS] Lamp 1 lights up.

While the [ACCESS] Lamp is on, never attempt: to pull out the Card, to turn
off the Palmcorder power, or to switch the [TAPE/CARD] Selector. Such
actions will damage the Card and cause the Palmcorder to malfunction.

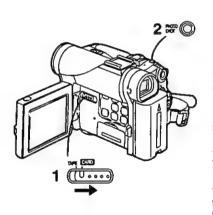




Recording on the Memory Card

- If the [TAPE/CARD] Selector is set to [CARD], the Palmcorder is automatically turned off when you leave it for about 5 minutes without performing any PhotoShot recording.
- When the [TAPE/CARD] Selector is set to [CARD], you cannot record to the Tape.

Card PhotoShot

Recording from the Palmcorder Lens (CAMERA Mode)

- 1 Set the [TAPE/CARD] Selector to [CARD].
 - •The (PICTURE) Indication 1 appears.
- 2 Press the [PHOTO SHOT] Button.
 - The [PICTURE] Indication will light in red.
- The power is automatically turned off after about 5 minutes when a cassette has been inserted.
- With the Progressive PhotoShot Function, you can record still pictures with higher resolution than with the normal PhotoShot Function (→ 21).

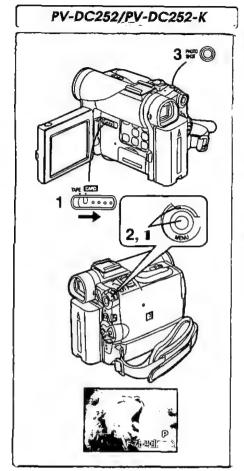

Card PhotoShot (continued)

Recording from a Cassette (VCR Mode)

1 Set the [TAPE/CARD] Selector to [CARD].

2 Set [VCR FUNCTIONS] >> [CARD SETUP] >> [PICTURE QUALITY] >> a desired picture quality.

3 Start playback and press the [PHOTO SHOT] Button at the scene you want to record.

While the image is being recorded, it stays still for a few seconds.


Selecting the quality of Card PhotoShot images

1 Set [CAMERA FUNCTIONS] or [VCR FUNCTIONS] >> [CARD SETUP] >> [PICTURE QUALITY] >> a desired picture quality.

Maximum number of images recordable on the supplied Card (8 MB)

[FINE] (high image quality): approximately 45 pictures [NORMAL] (Normal): approximately 95 pictures [ECONOMY] (low image quality): approximately 190 pictures

• The figures vary depending on the subject being photographed.

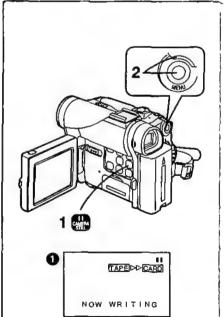

Automatically copying still pictures recorded on a cassette

The Palmcorder copies images automatically, referring to Photo Index signals.

After setting the Palmcorder to the VCR Mode (→ 29).....


- 1 Set the Palmcorder to Still Playback Mode just before the point where picture transfer is to commence.
- 2 Set [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [RECORD TO CARD] >> [YES].
 - Search starts from the current Cassette position, and images with Photo Index signals are recorded onto the Card sequentially.
 - While copying, the Indication
 appears.

To Stop the Transfer of Images

Press the [] Button,

• For other notes, see page 58.

PV-DC252/PV-DC252-K

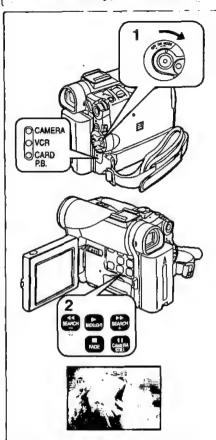


Playing Back Files from the Memory Card

It allows you to play back files recorded on a Card.

Playing back Still Pictures

- 1 Set the Palmcorder to Card Playback Mode.
 - The [CARD P.B.] Lamp lights up.
 - The still picture that was recorded last on the Card is displayed.
- 2 Start Playback.
- ➤: Starts Slide Show (The [SLIDED] Indication is displayed)
- ▶▶: Playing back the next Picture
- ◄ Playing back the previous Picture
- : Stop the slide playback
- II: Pause slide playback

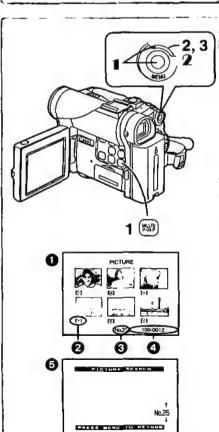


To Select a Desired File and Play it Back


After setting the Palmcorder to the Card Playback Mode.....


- 1 Press the [MULTI] Button.
 - The files recorded on the Memory Card are displayed in Multi-Picture Mode.
 - 2 Rotate the [PUSH] Dial and select a desired file.
 - The selected file is marked with a red frame.
 - When 7 or more files have been recorded, turn the [PUSH] Dial to display the next file. The [◄◄] Button or [▶▶] Button can be used instead of the [PUSH] Dial.
- 3 Press either the [PUSH] Dial or the [MULTI] Button.
 - The selected file is shown on the entire screen.
- File Size
- File Number
- Folder-File Number

Using File Search Mode

- Set [CARD FUNCTIONS] >> [CARD EDITING] >> [FILE SEARCH] >> [YES].
 - The file search screen 6 appears.
- 2 Rotate the [PUSH] Dial to select the desired number of the file and then press it.
 - The selected number's file appears.
- The same process can be performed using the short-cut menu (→ 18).
- For other notes, see page 59.

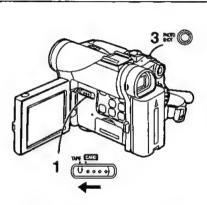

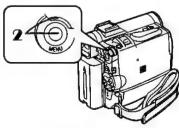



Copying pictures from a Memory Card to a Cassette

After setting the Palmcorder to the Card Playback Mode (→ 36).....


To Copy One Picture

- 1 Set the [TAPE/CARD] Selector to [TAPE].
- 2 Display a desired picture on a Memory Card.
 - Please refer to "To select a Desired File and Play it Back".
- 3 Press the [PHOTO SHOT] Button.
 - It takes approximately 7 seconds to copy a still picture to the Cassette.
 - During the copying, the Indication appears.

To Copy All the Pictures

- 1 Display the first picture.
 - If a picture other than the first one is displayed, only the subsequent pictures will be copied.
- 2 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [RECORD TO TAPE] >> [YES].
 - During the copying, the Indication appears.
 - It takes approximately 7-11 seconds for each picture to be copied to the Cassette. To stop the copying midway, press the [■] Button.
- When recording to tape, select the tape position before recording. The
 picture will be recorded to the tape position when the [PHOTO SHOT]
 button is pressed at step 3.
- When recording the Card Images on a Tape, a PhotoShot index signal is automatically recorded with a picture.
- Even if you edit the Slide Show, it is not applied to the order in copying the pictures.
- For other notes, see page 58.

PV-DC252/PV-DC252-K

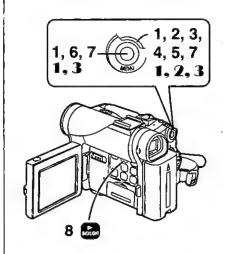









Slide Show

The recorded still pictures in the Card can be played back like a Slide Show. You can set up a Slide Show or change the content.

To Select Pictures to Play Back in Slide Show

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES].
 - Slide Show editing screen appears.
- 2 Set [EDIT] >> [YES].
- 3 Rotate the [PUSH] Dial to select a picture and then press the dial.
- 4 Rotate the [PUSH] Dial to select playback order and then press the dial.
 - This step is skipped when there are no pictures set for the Slide Show.
- 5 Rotate the [PUSH] Dial to adjust the playback time and then press the dial.
 - The Playback Order indication 1 and the Playback Time (Second) indication 2 appear.
 - The [●] indication ③ is displayed below pictures that have been selected for the Slide Show.
 - •To select the next picture, repeat Steps 3 to 5 above.
- 6 Press the [MENU] Button to end the setup.
- 7 After setting [SLIDE SHOW] >> [PRESET], press the [MENU] Button.
- 8 Press the [▶] Button.
 - The [M.SLIDE▷] Indication is displayed.

To Play Back All the Pictures Continuously

After setting the [SLIDE SHOW] to [ALL], press the [▶] Button.

- The [SLIDE▷] Indication is displayed.
- All pictures are played back for approximately 5 seconds each, from the first to the last recorded picture, and playback then stops.

To Pause the Slide Show

Press the [II] Button.

• The [(M.) SLIDE 1] Indication is displayed.

To Stop the Slide Show

Press the [■] Button.

To Verify the Selected Pictures

Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES] >> [VERIFY] >> [YES].

 Only the selected pictures are displayed in Multi-Picture Mode in the Playback order.


To Delete the Selected Pictures


- Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES].
- 2 Set [DELETE] >> [YES].
- 3 Select the picture you want to delete and press the [PUSH] Dial.

To Reset the Slide Show Setup

Set [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES] >> [RESET] >> [YES] >> [YES].

- Slide Show settings are reset.
- For other notes, see page 59.

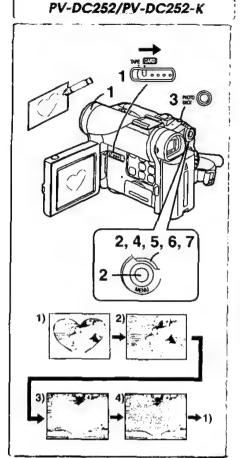

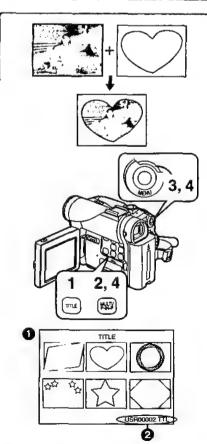

Creating a Title

You can create a title and record on a Memory Card.

1 Camera Mode:

In PV-DC252 or PV-DC252-K, slide the [TAPE/CARD] Selector to [CARD].

•The [PICTURE] indication appears.

Set the Lens to the image you want to use for creating a title. VCR Mode:

Search for the image you want to use for creating a title and set the Palmcorder to Still Playback Mode.

- 2 Set [CARD SETUP] >> [CREATE TITLE] >> [YES].
- 3 Press the [PHOTO SHOT] Button.
 - The title is stored.
 - To perform PhotoShot again, select [RETURN].
- 4 Press the [PUSH] Dial to select [LUMINANCE] and press it.
- 5 Rotate the [PUSH] Dial to adjust the title contrast and then press it.
 - The [COLOR] Indication appears.
- 6 Rotate the [PUSH] Dial to select desired color and press it.
- 7 Select [RECORD] and then press the [PUSH] Dial.

Selecting Colors

If you make color selection by rotating the [PUSH] Dial when creating a title, you can change the color as follows.

- 1) Original Color (The color of the captured image)
 - Title in the original color in which the dark portion (blackish portion) of the captured image is missing.
- 2) Preset colors (black, blue, green, cyan, red, pink, yellow, and white)
 - Title in a preset color in which the dark portion (blackish portion) of the captured image is missing.
- 3) Original color (the color of the captured image)
 - Title in the original color in which the bright portion (whitish portion) of the captured image is missing
- 4) Preset colors (black, blue, green, cyan, red, pink, yellow, and white)
 - Title in a preset color in which the bright portion (whitish portion) of the captured image is missing.

Inserting a Title

You can select one of your original titles and display it. (It can be displayed in Camera Mode, VCR Mode, and Card Playback Mode.)

- 1 Press the [TITLE] Button.
 - The title that was created last is displayed.
- 2 Press [MULTI] Button.
 - A list of titles is displayed.
- 3 Rotate the [PUSH] Dial to select a desired title.
 - The selected title is marked with a red frame.
- 4 Press the [PUSH] Dial or press the [MULTI] Button.
 - The selected title is displayed.
- 5 Using the [TAPE/CARD] Selector, select the recording target.

Camera Mode: TAPE or CARD

VCR Mode: CARD

Card Playback Mode: TAPE


- 6 Press the [PHOTO SHOT] Button.
 - · A still picture is recorded under the inserted title.
 - If you record on a Cassette in Normal Recording Mode, set the [TAPE/ CARD] Selector to [TAPE] and press the Recording Start/Stop Button.
- Pile Name

Clearing a Title Display

Press the [TITLE] Button.

- The [ACCESS] Indication appears until the titles are displayed completely.
 Perform the Recording after the Indication disappears.
- For other notes, see page 59.

PV-DC252/PV-DC252-K

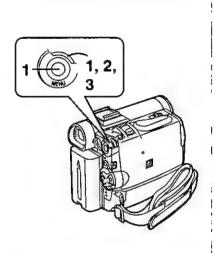



Protecting the Files on a Memory Card from Accidental Erasure (File Lock)


Precious files recorded on a Memory Card can be locked to prevent accidental erasure. (Even if files are locked, the files will be deleted when the Memory Card is formatted.)

After setting the Palmcorder to the Card Playback Mode (→ 36).....

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [FILE LOCK] >> [YES].
- Rotate the [PUSH] Dial to select [PICTURE] or [TITLE], and then press it.
 The [FILE LOCK] Menu is displayed.
- 3 Rotate the [PUSH] Dial to select the file to be locked, and then press it.
 - The [] Indication 2 is attached to the selected file.
 - Press the [PUSH] Dial again to cancel.
- The Lock Setting carried out by this Palmcorder is only effective for this Palmcorder.
- •The same setting can be performed using the short-cut menu (→ 18).

About the write protection switch of the SD Memory Card

 The SD Memory Card has a write protection switch on it. If the switch is set to the [LOCK] side, you cannot write to the Card, delete the data, or format the Card. If it is moved back, you can.

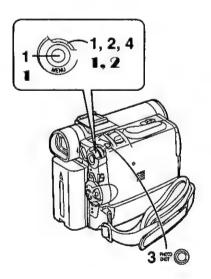

Deleting the Files recorded on a Memory Card

Using the Palmcorder, you can delete the still picture files and titles recorded on a Memory Card. After the file is deleted, it cannot be restored. In PV-DC252 or PV-DC252-K, at first, slide the [TAPE/CARD] Selector to [CARD] to select the type of data to be erased.


After setting the Palmcorder to the Card Playback Mode (→ 36).....

To Select and Delete File(s) by selection

- 1 Set [CARD FUNCTIONS] >> [DELETE CARD FILE] >> [DELETE FILE BY SELECTION] or [DELETE TITLE BY SELECTION].
- 2 Rotate the [PUSH] Dial to select the file that you want to delete, and then press it.
 - The selected file flashes.
 - To delete more than 2 files, repeat this step.
- 3 Press the [PHOTO SHOT] Button.
 - · A verification message appears.
- 4 Rotate the [PUSH] Dial to select [YES] and then press it.
 - The selected file is deleted from the Memory Card.

To Delete all Files

- 1 Set [CARD FUNCTIONS] >> [DELETE CARD FILE] >> [DELETE ALL FILES].
 - A verification message appears.
- 2 Rotate the (PUSH) Dial to select [YES] and then press it.
 - A locked file cannot be deleted.
- The same setting can be performed using the short-cut menu (→ 18).

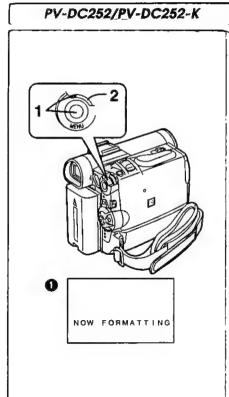


Formatting a Memory Card

If a Memory Card becomes unreadable by the Palmcorder, formatting it may make it reusable. Formatting will delete all the data recorded on a Memory Card

After setting the Palmcorder to Card Playback Mode (→ 36).....

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [CARD FORMAT] >> [YES].
- 2 Select [YES] and press the [PUSH] Dial.
- During formatting the [NOW FORMATTING] Indication 1 appears.
- When the formatting is completed, the screen becomes white.
- Even if files are locked, the files will be deleted when the Memory Card is formatted.
- •It may not be possible to use a Card which was formatted using this Palmcorder on another unit. In this case, format the Card on the unit which will be using the Card. Take steps to ensure that valuable files are stored on a personal computer, etc. as well, before proceeding.
- A Card formatted with other equipment (like a Personal Computer) might be unusable or might take more time for recording. We recommend that you use this equipment to format it.
- For other notes, see page 58.

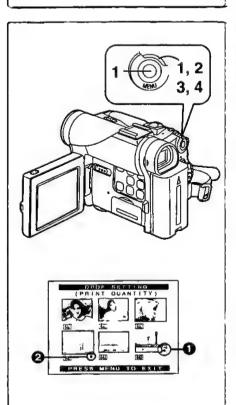

DPOF Setting

You can select the images to be printed, the number of prints, and other printrelated information (DPOF setting) on a Memory Card. "DPOF" stands for Digital Print Order Format, and since printing data can be added to images on the Memory Card, the Memory Card can be used with any system that provides DPOF.


After setting the Palmcorder to Card Playback Mode (→ 36).....

- 1 Set [CARD FUNCTIONS] >> [CARD EDITING] >> [DPOF SETTING] >> [YES].
- 2 Rotate the [PUSH] Dial to select [VARIABLE] and then press
 - When printing one each of all the pictures, select [ALL 1]; if not all the
 pictures are to be printed, select [ALL 0].
- 3 Rotate the [PUSH] Dial to select the picture and then press it.
- Rotate the [PUSH] Dial to set the number of prints 1 and then press it.
 - The framed images will be set to DPOF and the [●] mark ② will be displayed. The [●] mark indicates pictures for which 1 or more prints have been set.
- 5 Repeat Step 3–4 to set other pictures, and press the [MENU] Button when the setting is completed.

To Verify DPOF Setting

Select [VERIFY] in Step 2 above. The pictures for which 1 or more prints are set in DPOF are played back continuously.

- Print mark is based on DPOF (Digital Print Order Format).
- The same setting can be performed using the short-cut menu (→ 18).
- For other notes, see page 59.

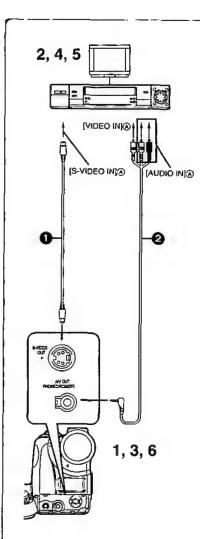

Copying your DV Cassette to an S-VHS or VHS Cassette (Dubbing)

After connecting the Palmcorder and the S-Video, Video and Audio Input Jacks A of the VCR as illustrated on the left, start the following procedure.

 Be sure to press the [OSD] Button on the Remote Controller before copying so that no indications are left visible. Otherwise, the displayed tape counter and Function indications are also copied.

[Palmcorder]

1 Insert the recorded Cassette.

[VCR]

- Insert a blank Cassette with an erasure prevention tab.
 - If various settings (such as external input, tape speed, etc.) are required, please refer to the operating instructions of your VCR.

[Palmcorder]


3 Press the [▶] Button to start playback.


[VCR]

- 4 Start recording.
- 5 Press the Pause or Stop Button to stop recording. [Palmcorder]
- 6 Press the [■] Button to stop playback.
- S-Video Cable (not supplied) 2 A/V Cable (supplied)

CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

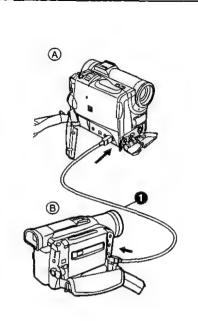

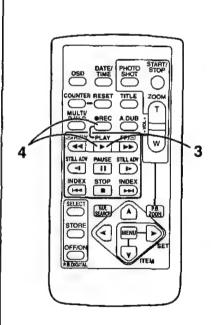

Using your Palmcorder with Digital Video Equipment (Dubbing)

By connecting this Palmcorder with other digital video equipment (such as another Palmcorder of the same format/model) that has a DV input/output terminal (i.LINK) using a 4-pin to 4-pin DV Interface cable PV-DDC9 (optional) 1, high quality image and sounds can be dubbed in the digital mode.

[Playback Unit A]

1 Insert the recorded Cassette and set the Palmcorder to the VCR Mode.

[Recording Unit (B)]

Insert a Cassette to be used for dubbing and set the Palmcorder to the VCR mode.

[Playback Unit (A)]

3 Press the [▶] Button to start playback.

[Recording Unit (B)]

While pressing the [REC] Button, press the [PLAY] Button.
 (Both Buttons are located on the Remote Controller.)
 Recording starts.

Stopping Dubbing

Press the [III] Button on the recording unit first, and then press the [III] Button on the playback unit to stop dubbing.

CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

• For other notes, see page 59.

PV-DC252/PV-DC252-K

Using the Software with a Computer

An image stored on the DV Cassette can be transferred to your Personal Computer.

 For models PV-DC152 and PV-DC152-K, PhotoShot transfer from the DV Cassette can be accomplished using the PhotoVu Link software and RS-232C cable kit (optional). Model number PV-DRS2 (→ 65)

System Requirements for ArcSoft

CD-ROM drive (for installation)

(for ArcSoft Software)

For Windows®

IBM PC/AT or compatible

Intel Pentium II Processor: 266 MHz or more

- Windows[®] XP, Windows[®] Me, Windows[®] 98, Windows[®] 95, Windows[®] 2000 Professional
- RAM: 64 MB or more
- 300 MB minimum available hard disk space
- High color (16 bit) or more
- CD-ROM drive (for installation)
- Mouse or other pointing device

For Macintosh

- Mac OS 8.6 − 9.1
- RAM: 64 MB or more
- 180 MB minimum available hard disk space
- High color (16 bit) or more

(USB Driver For SD Memory Card)

For Windows®

IBM PC/AT or compatible

- Intel Pentium II Processor: 266 MHz or more
 Microsoft Windows[®] XP, Windows[®] Me, Windows[®] 98SE, Windows[®] 2000 Professional pre-installed PC with USB port
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Computer, Inc.
- All product/brand names are trademarks or registered trademarks of the respective holders
- Please refer to page 46, regarding the system requirements of USB Driver.

Software Installation (Windows)

- Turn on Computer and start up Windows.
- Insert supplied CD-ROM into the CD-ROM drive.
 - [Setup Menu]
 appears.
- Select the software to be installed from [Setup Menu].
 - USB Driver (→ 46):

Software for USB Driver allows you to transfer images directly off of the memory card into the computer

(Please refer to page 46 to install the driver of the USB Driver.)

•G726 Decoder

Software for G726 Decoder allows you to listen to MPEG4 sound with Windows Media Player.

However, this software is not required.

ArcSoft Software (→ 45):

PhotoImpression 3.0, Photo Base 3.0, Panorama Maker 3.0 and PhotoPrinter 2000 Pro are included.

Follow the instructions on the computer screen until the installation is complete.

Setup window will disappear when the installation is complete.

Note:

If a window does not appear automatically, click the "Start" Button on your desktop and then click "Run". When the "Run" Box is open, type in "D:\InstMenu.exe" and click "OK". ("D" applies when the CD-ROM drive is drive D.)

Software Installation (Macintosh)

- Turn on Computer and start up Macintosh.
- 2 Insert supplied CD-ROM into the CD-ROM drive.
- 3 Double click the icon of a CD-ROM that appears.
- 4 Double click the software to be installed from [ArcSoft].
- 5 Follow the instructions on the computer screen until the installation is complete.







3



4.5

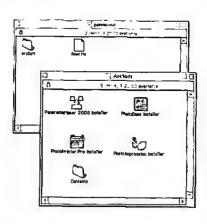

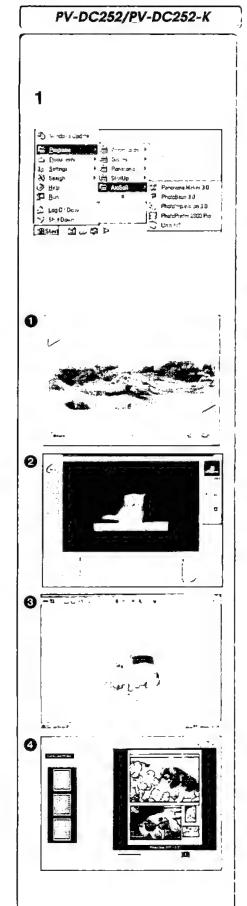

ArcSoft Software

There are 4 types of image editing software in the ArcSoft Software package.

Before you begin...

- 1 Open [Start] >> [Programs] >> [ArcSoft] >> [Panorama Maker 3.0] or [PhotoImpression 3.0] or [PhotoBase 3.0] or [PhotoPrinter 2000 Pro].
- 1 Panorama Maker 3.0 (Windows, Mac)
 - Easy-to-use photo-stitching program seamlessly combines multiple photos into a single panoramic picture.
- PhotoImpression 3.0 (Windows, Mac)
 - Easy-to-use photo editing program to edit, enhance, retouch or add special effects to any image. Also offers creative solutions for making greeting cards and calendars.
- 1 PhotoBase 3.0 (Windows), PhotoBase 2.0 (Mac)
 - Create albums of image, video, audio, and other electronic files for easy viewing, retrieval, and management.
- 4 PhotoPrinter 2000 Pro (Windows), PhotoPrinter Pro (Mac)
 - Program to layout images in multiple sizes quickly and effortlessly to create a collage or photo album, all on one page.

For Information on ArcSoft Software:

TEL: 1-510-440-9901


FAX: 1-510-440-1270
Web Site: www.arcsoft.com
E-mail: support@arcsoft.com

Refer to Help information about application operations and other Error messages.

PV-DC252/PV-DC252-K




VFA0366




LSFT0489

1 0

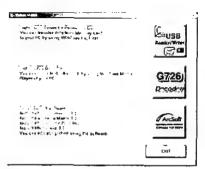

4



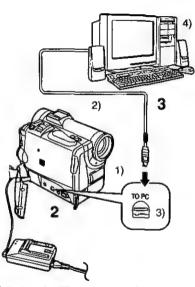

Using the Supplied USB Connection Kit

(PV-DC252/PV-DC252-K)

Operating environment

USB Driver can be installed in a PC/AT compatible personal computer which can run Microsoft Windows[®] XP, Windows[®] Me, Windows[®] 98SE, Windows[®] 2000 Professional

USB Driver

For Windows®

- ●IBM PC/AT or compatible
- •Intel Pentium II Processor: 300 MHz or higher CPU recommended
- Microsoft Windows® XP, Windows® Me, Windows® 98SE, Windows® 2000
 Professional pre-installed PC with USB port
- Video card that supports16 bit color at 800×600 monitor resolution
 RAM: 64 MB or more
- •2 MB minimum available hard disk space
- Disk drive: CD-ROM drive
- Ports: USB Terminal
- Other requirements: Mouse or other pointing device

Installing USB Driver

In order for USB Driver to be installed, the hard disk must have at least 2 MB of free space. Before proceeding with installation, check out the amount of free space on the hard disk.

- 1 Insert supplied CD-ROM into the CD-ROM drive.
 - [Setup Menu] appears.
- 2 Select the software to be installed from [Setup Menul.
 - The set up program starts running.
- 3 Finish installation by following the on-screen instructions.
 - Carefully read the license agreement on the window, and if you agree click [Yes]. Software is not installed if [No] is clicked.
- 4 Click [OK] when the [Restarting Windows] Dialog appears.
 - Reboot the computer to finish installing USB driver.
 - Installation continues after the computer reboots if you selected additional software.
- If you no longer need the driver, see page 51.
- Update the driver after upgrading the OS.

Connecting Computer and Palmcorder

Install USB Driver (above) before connecting.

Before making these connections, turn off all devices which are to be connected.


- 1 Install the supplied USB Driver. (above)
- 2 Insert memory card into Palmcorder, then set card playback mode.
- 3 Use auxiliary USB Connection Cable to connect.
 - PC connecting mode.
- 1) Palmcorder
- 2) USB Connection Cable
- 3) USB terminal
- 4) Personal computer (not supplied)
- After making the connections, turn the connected equipment on.
- Appropriate driver to recognize Palmcorder is automatically installed by Windows Plug'n Play when connected for the first time.
- When using the USB Connection Kit, use of the AC Adaptor is recommended to use as the power supply of the Palmcorder.
- After the USB Driver is installed and USB Connection Cable is connected to
 the Palmcorder, open [My computer] or [Windows Explorer] to check the
 drive is displayed as a removable disk drive (only when card is inserted into
 the Palmcorder). It enables you to operate like a floppy disk drive, and you
 can use the same drag and drop or copy methods.





Check if Palmcorder is correctly recognized

- 1 Verify [Removable Disk] icon is added in [My Computer].
 - Drive name (H: etc.) may vary depending on your computer.
- If Palmcorder is connected to the computer before the driver is installed, or you are using the driver that came with Windows, then it may not be able to correctly recognize Palmcorder.
- If it doesn't function properly, check to see if the driver was correctly installed, and update the driver if necessary.

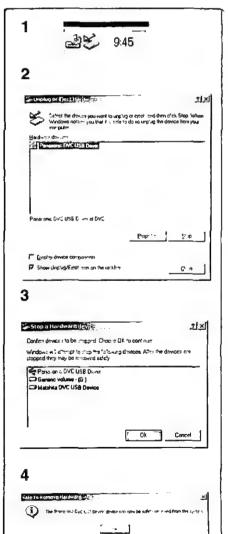


To disconnect USB cable safely

If USB cable is disconnected while computer is on, an error message may appear. In such a case click [OK] and close the dialog box. By following the steps below you can disconnect the cable safely.

- 1 Double click the 🕏 icon in task tray.
 - Hardware disconnect dialog box appears.
- 2 Select [Panasonic DVC USB Driver] and click [Stop].
- 3 Verify [Panasonic DVC USB Driver] is selected and click [OK].
- 4 Click [OK].
 - You can safely disconnect the cable.
- Some OS, such as Windows[®] 98 SE, may not show the icon indicating that you may safely disconnect in task tray. (OS may be set not to show) Make sure Palmcorder's [ACCESS] Lamp is off and disconnect the cable.

CAUTION:

If you disconnect the USB Cable while the [ACCESS] Lamp is on, it may damage the Card data.

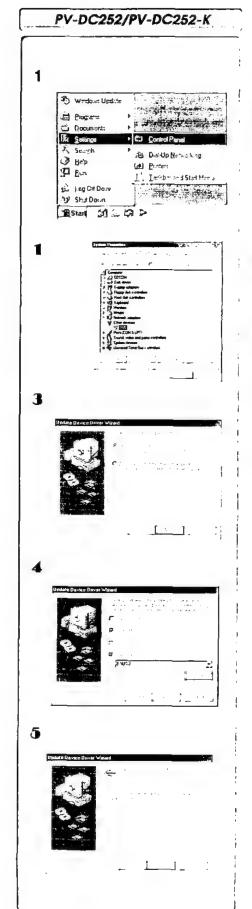

Verifying and updating driver

Windows 98 SE

Verify and update driver while Palmcorder is connected to the computer.


Verifying driver

(Palmcorder must be connected to computer.)

- Select [Start] >> [Settings] >> [Control Panel], double click [System] select device driver tab, verify [Panasonic DVC USB Driver] and [Panasonic DVC Port Driver] are displayed in [Universal Serial Bus controllers] of [Device Manager].
 - If [DVC] is displayed in [Other devices] of [Device Manager] tab, we recommend updating the driver by following the steps below:

Updating driver

- Select [DVC] in [Other devices] of [Device Manager] and click [Properties].
- 2 Select [Driver] and click [Update Driver].
- 3 Select [Search for a better driver than the one your device is using now (Recommended)] and click [Next].
- 4 Select [Specify a location], refer to the location of the driver and the driver file name, click [Next].
 - Location of the driver (folder) varies depending on the computer used.
 (e.g.: C:\\WINDOWS\INF\MTUSDV98.INF)
- When the dialog box to finish appears, click [Finish].
 - Driver update is complete.

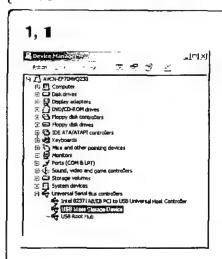







Windows 2000 Professional

Verify and update driver white Palmcorder is connected to the computer.

Verify driver


(Palmcorder must be connected to computer.)

- 1 Select [Start] >> [Settings] >> [Control Panel], double click [System] Hardware tab, Device Manager. Verify [Panasonic DVC USB Driver] and [USB Root Hub] in [Universal Serial Bus Controllers] of [Device Manager] of [Hardware].
 - If [USB Mass Storage Device] is shown in [Universal Serial Bus controllers] of [Device Manager] tab, we recommend updating the driver as described below to Panasonic DVC USB Driver.

Updating driver

- 1 Click [USB Mass Storage Device] of [Device Manager].
- 2 Select [Driver] and click [Update Driver]
- 3 Select [Search for a suitable driver for my device (recommended)] and click [Next].
- 4 Select [Specify a location], refer to the location of the driver and the driver file name, click [Next].
 - Location of the driver (folder) varies depending on the computer used.
 (e.g.: C:\\WINDOWS\INF\MTUSDV2K.INF)
- When the dialog box to finish appears, click [Finish].
 Driver update is complete.

PV-DC252/PV-DC252-K

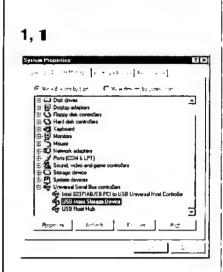

2



3



Windows Me

Verify and update driver while Palmcorder is connected to the computer.

■ Verifying driver (Palmcorder must be connected to computer.)

- 1 Select [Start] >> [Settings] >> [Control Panel], double click [System], Device Manager tab and verify [Panasonic DVC USB Driver] is displayed in [Universal Serial Bus controllers] of [Device Manager].
 - If [USB Mass Storage Device] is displayed in [Universal Serial Bus controllers] of [Device Manager] tab, we recommend updating the driver by following the steps below.

Updating driver

- Select [USB Mass Storage Device] in [Universal Serial Bus controllers] of [Device Manager] and click [Properties].
- 2 Select [Driver] and click [Update Driver].
- 3 Select [Specify the location of the driver (Advanced)] and click [Next].
- 4 Select [Specify a location] in [Search for a better driver than the one your device is using now. (Recommended)], refer to the location of the driver and the driver file name, click [Next].
 - Location of the driver (folder) varies depending on the computer used.
 (e.g.: C:\\WINDOWS\\NF\MTUSDVME.INF)
- 5 When the dialog box to finish appears, click [Finish].
 - Driver update is complete.


PV-DC252/PV-DC252-K

Verifying driver
(Palmcorder must be connected to computer)

1 Select [Start] >> [Control Panel] >> [Performance and Maintenance], double click [System], Hardware tab, Device Manager.

Please make sure that you can see the following drivers that come with Windows.

- 1. Matsushita DVC USB Device
- 2. Generic Volume
- 3. USB Mass Storage Device

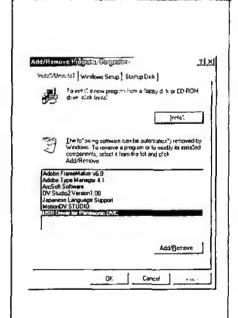

If you no longer need software or driver (uninstall)

- Uninstalling Application Software
- 1 Click [Start] >> [Settings] >> [Control Panel].
- 2 Double Click [Add/Remove Programs] in [Control Panel].
- 3 Select the application software you want to remove.
- Uninstalling Application Software (Windows XP)
- 1 Click [Start] >> [Control Panel] >> [Pick a Category].
 - 2 Click [Add or Remove Programs] in [Pick a Category].
 - 3 Select the application software you want to remove.
- Uninstalling ArcSoft Software
- 1 Select [ArcSoft Software].
- Uninstalling USB driver
- 1 Select [USB Driver for Panasonic DVC].

Uninstalling steps may vary depending on the OS. Please refer to the user manual of your OS.

Notes (PV-DC252/PV-DC252-K)

- Do not disconnect USB Connection Cable while the operation light of Palmcorder is on. It may freeze the software or destroy the data in transfer. Please refer to the user manual of Palmcorder.
- We recommend using the AC adapter as the power source for the Palmcorder when using USB Connection Kit. Data may be lost If the battery power is lost while transferring data.
- Do not delete the folders in memory card such as picture folder, DPOF folder, title folder etc. Memory card may not be recognized if folders are deleted.

~~~~~~~~~~~~~~~~~

About the SD Memory Card and MultiMediaCard

SD Memory Card

The SD Memory Card (supplied) is virtually the same size as a MultiMediaCard. It is an external memory card that is available in larger capacities. It has a write protect switch to prevent data writing and card formatting, as well as a copyright protection function.

SD Logo is a trademark.

MultiMediaCard

The MultiMediaCard is a compact, lightweight and removable external memory card.

 All other company and product names in the operating instructions are trademarks or registered trademarks of their respective corporations.

Files recorded on a SD Memory Card or MultiMediaCard It may not be possible to play back the files on this Palmcorder recorded on and created by other equipment or vice versa. For this reason, check the compatibility of the equipment in advance.


About the compatibility of the card files

Data files recorded on an "SD Memory Card" or a "MultiMediaCard" by this Palmcorder conform with DCF (Design Rules for Camera Files Systems universal standard) established by JEITA (Japan Electronics and Information Technology Industries Association).

If you attempt to play back files recorded with this Palmcorder in other equipment or to play back files recorded with other equipment in this Palmcorder, you may not be able to play them back. Please check the compatibility with the other equipment in advance.

About the folder structure when using the Memory Card in a personal computer

 When a Card with data recorded on it is inserted into a personal computer, folders will be displayed as in the figure.

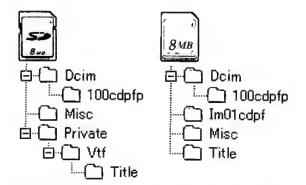

[100cdpfp]:

[Misc]:

The images (Imga0001.jpg, etc.) in this folder are recorded in the IDEC (

folder are recorded in the JPEG format.


Files in which DPOF Data has been set to

the image are in this.

[Title]: This contains the data of original titles (Usr00001.jpg, Usr00001.ttl, etc.).

- In the Card Mode, the Palmcorder automatically saves file numbers (Imga0001.jpg, etc.) along with the images. The file numbers are recorded with each image as consecutive numbers.
- The memory capacity indicated on the SD Card label corresponds to the total amount of the card's capacity. Some of the card's capacity is used to protect and manage the copyright data, and not all capacity is available as conventional memory for a Palmcorder, Personal Computer or others. Capacity that can be used as conventional memory:

8 MB Card: about 6.800.000 bytes

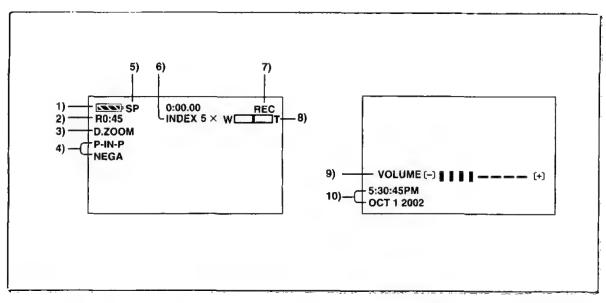

Others

Indications

Various functions and Palmcorder conditions are displayed on the screen.

1) Remaining Battery Power []

 When the battery power becomes low, the indication changes. When the battery is discharged completely, the () Indication flashes.

When you are using the AC Adaptor, the [Indication may appear, however, this has no meaning in this case.

2) Remaining Tape Time [R0:00]

 Remaining tape time is indicated in minutes. When it reaches less than 3 minutes, the indication starts flashing.

3) Digital Zoom [D.ZOOM] (→ 22) Playback Zoom [ZOOM 5×] (→ 32)

4) Digital Effects Function

•MULTi: Multi-Picture Mode (→ 28)

•P-IN-P: Picture-in-Picture Mode (→ 28)

•WIPE: Wipe Mode (→ 27, 32)
•MIX: Mix Mode (→ 27, 32)
•STROBE: Strobe Mode (→ 27, 32)
•GAIN-UP: Gain-up Mode (→ 27)

◆TRAIL: Trailing Effect Mode (→ 27, 32)
◆MOSAIC: Mosaic Mode (→ 27, 32)

• MUSAIC: Mosaic Mode (→ 27, 32)

• MIRROR: Mirror Mode (→ 27, 32)

• NEGA: Negative Mode (→ 27, 32)

• SEPIA: Sepia Mode (→ 27, 32)

• MONO: Black & White Mode (→ 27, 32)

• SOLARI: Solarization Mode (→ 27, 32)

5) Recording Speed Selector

•SP: Standard Play Mode (→ 19)
•LP: Long Play Mode (→ 19)

6) Index

 For several seconds while index signals are being recorded, the [INDEX] Indication flashes. (→ 31)

Search Number [S1] (→ 31)

 The figure indicates which number of scenes ahead from the present scene is to be played back.

7) Tape Run Indications

•REC: Recording (→ 20)•PAUSE: Recording Paused (→ 20)

◆▷: Playback/Camera Search in forward

direction (→ 29)

◆
 Camera Search in reverse direction (→ 29)

● II: Still Playback (→ 30)

►▷: Fast-forward/Cue Playback (→ 29)
►<
Rewind/Review Playback (→ 29)

ID: Slow Playback in forward direction (→ 30)
 I: Slow Playback in reverse direction (→ 30)

● ■ ■ Still Advance Playback in forward direction

(→ 30)

◆
 Still Advance Playback in reverse direction
 (→ 30)

• ▷ ▷: Index Search in forward direction (→ 31)

• ► Index Search in reverse direction (→ 31)

◆CHK: Recording Check (→ 20)
◆A.DUB ▷: Audio Dubbing (→ 33)

◆A.DUB II: Audio Dubbing Pause (→ 33)
 ◆PHOTO: PhotoShot Mode Recording (→ 21)

•BLANK: Blank Search (→ 30)
•R ▷: Repeat Playback (→ 29)
•2×▷▷: Variable Speed Search (→ 29)


8) Zoom Magnification

 When the [W/T] Zoom Lever is pushed up or down, the Zoom Magnification Indication and Zoom Gauge appear. (→ 21, 22)

9) Sound Volume

 Use this indication to adjust the volume of playback sound from the built-in speaker or headphones. (→ 29)

10) Date/Time Indication (→ 19, 55)

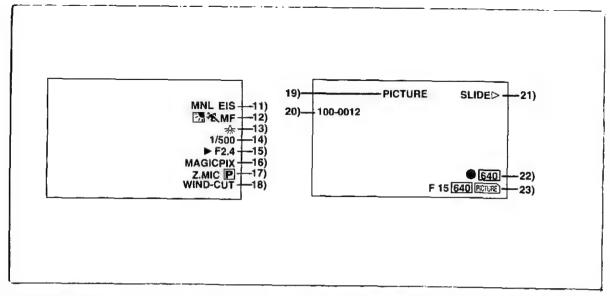

11) Recording Mode

AUTO: This appears when Mode Selector Switch is

set to [AUTO]. (→ 20)

MNL: This appears when Mode Selector Switch is

set to [MANUAL]. (→ 24, 25, 26)

Electronic Image Stabilizer [EIS] (→ 22)

Audio Dubbing Input Display [MIC/AV IN] (→ 33)

Audio Recording Mode [12bit/16bit] (→ 19)

12) Manual Focus [MF] (→ 25) Back Light Mode [汉] (→ 23)

Program AE Mode

Sports Mode (→ 24)
 Portrait Mode (→ 24)

• a: Ponrait Mode (→ 24)
• a: Low Light Mode (→ 24)

Spotlight Mode (→ 24)
Surf & Snow Mode (→ 24)

13) White Balance Mode

AWB: Automatic White Balance Mode (→ 26)

• ⊾ Last manually adjusted White Balance setting (→ 26)

• ⊞: Fluorescent light Mode (→ 26)

• ★: Outdoor Mode (→ 26)

• ★: Indoor Mode (recording under incandescent lighting) (→ 26)

14) Shutter Speed [1/500] (→ 25)

15) Iris Value [F2.4] (F number) (→ 25)

16) MAGICPIX Mode [MAGICPIX] (→ 23)

17) Progressive PhotoShot[™] Mode (Pi) (→ 21)

18) Wind Noise Reduction [WIND-CUT] (→ 24)

19) File Type Display [PICTURE/TITLE] (→ 36, 39)

20) Folder-File Number (→ 36)

21) Card File Indications 1 (CARD P.B. Mode)

•SLIDED: Slide Show Playback (→ 38)

•SLIDEII: Slide Show Playback Pause (→ 38) •M.SLIDE▷: Manual Slide Show Playback (→ 38)

M.SLIDEII: Manual Slide Show Playback Pause
 (→ 38)

22) Card File Indications 2 (CARD P.B. Mode)

• Image size [640] (→ 34, 36)

When you playback a scene recorded on a Palmcorder with a picture size specification different from the one stated above, the following indications should be displayed. If the size of the picture is from 640 pixels to 800 horizontal pixels, the [640] Indication will be displayed;

•Number set DPOF [00] (→ 41) DPOF setting & Slide Show

 (White): DPOF Setting completed (set to 1 or more picture) (→ 41)

(Green): Slide Show Settings completed (→ 38)

 ◆ (Blue): DPOF Setting (set to 1 or more picture)/ Slide Show Settings both completed
 (→ 38, 41)

23) Card File Indications 3 (Camera Mode)

Card PhotoShot picture quality [F/N/E] (→ 34)
 (Card PhotoShot Recording) [F] is Fine, [N] is Normal,
 [E] is Economy in abbreviated terms.

Recording in Card PhotoShot [PCTURE] (red) (→ 34)

•Memory Card is not inserted [RENNE] (flashing in red) (→ 34)

Card PhotoShot is ready to record [PICTURE] (cyan)
 (→ 34)

File number [No.000] (→ 36)

Remaining number of Card PhotoShot Picture [000]
 (→ 34)

Lock setting [O→] (→ 40)

Changing the Counter Display Mode

By changing [C.DISPLAY] on the [DISPLAY SETUP] Sub-Menu, you can change the Counter Display Mode to Tape Counter Indication (0:00.00), Memory Counter Indication (M0:00.00), and Time Code Indication (0h00m00s00f).

 You also can press the [COUNTER] Button of the Remote Controller repeatedly to change the Counter Indication.

Displaying Date/Time Indication

To display Date/Time Indication, set the appropriate date/ time in [DATE/TIME] on the [DISPLAY SETUP] Sub-Menu.

 You can also press the [DATE/TIME] Button on the Remote Controller repeatedly to display or change the Date/Time Indication.

Changing the Display Mode

By changing [DISPLAY] on the [DISPLAY SETUP] Sub-Menu, Counter Display Mode changes to All Function Display, Partial Display, and Minimum Display.

Warning/Alarm Indications

If any one of the following indications lights up or flashes, please check the condition of the Palmcorder.

 Some Indications may not be displayed according to the model

EJECT TAPE:

After the [DEW DETECTED]

Indication appears, eject the

Cassette.

inserted Cassette is open (that is,

set to [SAVE]).

When you are attempting to do audio dubbing on the unrecorded (blank) portion of the tape, or you are attempting to do dubbing on the Cassette whose tab is set at [SAVE].

(→ 33, 43)

國 TAPE NOT INSERTED:

No Cassette is inserted. (→ 13)

LOW BATTERY: The Battery is low. Recharge it.

(→ 12)

The internal lithium battery is low.

(→ 19)

西 END/TAPE END:

The tape ended during recording.

REMOTE/

CHECK REMOTE MODE:

Wrong Remote Controller Mode has

been selected. (→ 11)

CANNOT REC LP-MODE:

Because the original recording was done in LP Mode, audio dubbing cannot be performed. (+ 33)

INCOMPATIBLE DATA: This Cassette is incompatible or

contains copy-guard.

Because the medium is protected by a copy guard, images cannot be

recorded correctly.

!!: If this Indication appears, return the

LCD Monitor to the original position in order to check the specific content of the Warning/Alarm Indication.

AV INPUT RECORDING:

When you are attempting to record on the Memory Card during dubbing

(→ 43) on the Cassette.

NO CARD: PLEASE WAIT: There is no Memory Card inserted. When reading of the Memory Card

(playback, format, when using the Multi-Picture Function). (→ 36, 41)

CARD ERROR:

The Memory Card is not compatible

with the Palmcorder.

FILE LOCKED:

When you are attempting to delete a locked picture. The locked picture

cannot be deleted.

WRITE PROTECTED:

When you are attempting to write the data on an SD Memory Card whose write protection switch is set

at [LOCK].

NO PICTURE:

There are no pictures in the Memory

Card.

NO TITLE:

There are no titles in the Memory

Card.

NO SPACE LEFT:

When a still Picture is transferred

from a Cassette to an already full

Memory Card.

X:

Pictures of a different format or damaged pictures are being played

back. (→ 36)

DEW DETECTED:

Condensation has occurred. (→ 61) NING:
The video heads are dirty. (→ 61)

MEED HEAD CLEANING:

Notes & Precautions

Power-Related Items (→ 12)

- When the Palmcorder is used for a long time, the Camera body becomes warm, but this is not a malfunction.
- If the [CHARGE] Lamp does not light up, although the Battery is attached, detach the Battery, and reattach it.

Inserting/Ejecting the Cassette (→ 13)

- In the case of using a previously recorded Cassette, you can use the Camera Search Function to find the position where you want to continue recording.
- If a new Cassette is inserted, rewind to the beginning of the tape before starting to record.

If the Cassette Holder Does Not Go Back in:

- Press the [PUSH CLOSE] mark and close the Upper Cassette Compartment Cover firmly.
- •Turn off the Palmcorder and then turn it on again.
- Check if the Battery charge is low.

If the Cassette Holder Does Not Come Out:

- Close the Lower Cassette Compartment Cover completely. Then, open it again.
- Check if the Battery is weak.

Alarm Sounds

When [BEEP] on the [OTHER FUNCTIONS] Sub-Menu on the [CAMERA FUNCTIONS] Main-Menu is set to [ON], confirmation/alarm beeps are issued as follows.

- 1 Beep
- When you start recording
- When you switch the [OFF/ON/MODE] Switch from [OFF] to [ON]
- 2 Beeps
- When you pause recording
- 10 Beeps
- · If you perform a wrong operation before or during recording

Recording (→ 20)

 Before turning on the Palmcorder, remove the Lens Cap. If the lens cap is still attached when the Palmcorder is turned on, Automatic White Balance Adjustment may not function correctly.

Recording Check (→ 20)

 For recording check, the Palmcorder must be the same as the recording speed Modes (SP/LP) used for the recording. Otherwise the playback images will be distorted.

Camera Search (→ 20)

- In Carnera Search Mode, images may contain mosaic-like noise patterns. This is a phenomenon that is characteristic of digital video and not a malfunction.
- If the recording speed Modes (SP/LP) of previous recording and new recording are different, playback images may be distorted.

■ Progressive PhotoShotTM Function (→ 21)

- When you change to the still picture Mode, you will hear a click. This is the sound of the iris closing and not an indication of malfunction.
- If you record still pictures in Progressive PhotoShotTM Mode when your Palmcorder is set to Program AE, the brightness of the images may vary.

About [PROGRESSIVE] Setting

 When the [P] Indication is displayed, you can use the Progressive PhotoShot Function.

When [PROGRESSIVE] is set to [ON]:

You can use the Progressive PhotoShot Function at any time. In this case, however, the following functions are disabled.

- [EFFECT1] Digital Effect Modes
- Digital Zoom [D.ZOOM]
- 1/750 or faster shutter speed
- Continuous PhotoShot Function
- [REC MODE] on the [CAMERA SETUP] Sub-Menu is set to [NORMAL] ([FRAME] is not available)

When [PROGRESSIVE] is set to [AUTO]

You cannot use the Progressive PhotoShot Function in the following circumstances.

- When the zoom magnification is approximately 10x or higher
- When the shutter speed is 1/750 or faster
- When [EFFECT1] is set to [WIPE], [MIX], [STROBE], [GAIN-UP], [TRAIL], [MOSAIC], [MIRROR]
- When the pictures are displayed on a Multi screen or P-IN-P screen
- Continuous PhotoShot Function

Zoom In/Out Functions (→ 21, 22)

- By pressing the [W/T] zoom lever to [W] or to [T] in Recording Pause Mode, you can zoom 1-10x at the maximum speed of 2.1 seconds.
- During recording, you can zoom 1-10× in as short a time as approximately 2.7 seconds.
- During considerably fast zooming, the image may become out of focus temporarily.
- When you are using a high amount of zoom, a sharper focus is achieved if the recording subject is approximately 4 feet (1.2 m) or more away from the Palmcorder.

Electronic Image Stabilizer Function (→ 22)

- Under conditions of dim lighting, the Electronic Image Stabilizer Function will not operate correctly. In such a case, the [EIS] Indication will flash.
- Under fluorescent lighting, image brightness may change or colors may not look natural,
- After-images may appear.
- We recommend that you turn off the Image Stabilizer function when a Tripod is in use.
- By setting [EFFECT1] on the [DIGITAL EFFECT]
 Sub-Menu to [GAIN-UP], you can disable the Image Stabilizer function. In this Case, the [EIS] Indication flashes.
- The Image Stabilizer Function does not operate when using the MAGIC PIX. In this case, the [EIS] Indication flashes.

Fade In/Out Mode (→ 22)

Fading-in and fading-out cannot be used when recording still pictures in the PhotoShot Mode, Digital Still picture Mode, Multi-Picture Mode, and for the small still picture in the Picture-in-Picture Mode.

Cinema Function (→ 23)

- Cinema function does not operate during Card Mode. (PV-DC252/PV-DC252-K)
- Using the Cinema function does not widen the recording angle.
- If you play back tape recorded in Cinema Mode on a wide-screen (16:9) format TV, playback size is automatically adjusted to fit the TV screen format. Please refer to the TV's operating instructions for details.
- When images are displayed on a TV screen, the Date/Time Indication may be erased in some cases.
- Depending on the TV, the picture quality may be deteriorated.
- The Cinema Mode is cancelled when a Title is displayed. (PV-DC252/PV-DC252-K)

Program AE (→ 24)

- If any of the Program AE Modes is selected, you cannot adjust the shutter speed or iris.
- You cannot use Program AE with Gain-up Mode [GAIN-UP].

Sports Mode

- During normal playback, the image movement may not appear smooth.
- Because the color and brightness of the playback image may change, avoid recording under fluorescent light, mercury light, or sodium light.
- If you record a subject illuminated with strong light or a highly reflective subject, vertical lines of light may appear.
- If the light is insufficient, the [※] indication flashes.

Sports Mode/Portrait Mode

- If you record a still picture in Progressive PhotoShot Mode, the brightness of the recorded still picture may become unstable.
- If these modes are used for indoor recording, playback images may flicker.

Low Light Mode

 Extremely dark scenes may not be able to be made brighter to a satisfactory degree.

Spotlight Mode

- With this Mode, recorded images may turn out to be extremely dark.
- If the recording subject is extremely bright, its recorded image may turn out to be whitish.

Surf & Snow Mode

 If the recording subject is extremely bright, its recorded image may turn out to be whitish.

Manual Shutter Speed Adjustment (→ 25)

- You may see vertical lines of light in the playback image of a brightly shining subject or highly reflective subject.
- During Normal Playback, transition from one scene to another may not appear smooth.
- Because the color and brightness of the playback image may become unstable, avoid recording under fluorescent light, mercury light, or sodium light.
- If you are using either Gain-up Mode or Program AE Mode, you cannot adjust the shutter speed. If the shutter speed is adjusted manually, this setting will be cancelled.

Manual Iris Adjustment (→ 25)

- Depending on zoom magnification, the iris value may not be displayed correctly.
- If you are using either Gain-up Mode or Program AE Mode, you cannot adjust the iris.
- If you attempt to adjust the Shutter Speed after setting the Iris, the value set for the Iris will be cancelled.

White Balance (→ 26)

In the following cases, you cannot change White Balance:

- When you set [EFFECT1] of [DIGITAL EFFECT] Sub-Menu on the [CAMERA FUNCTIONS] Main-Menu to [GAIN-UP] or [EFFECT2] to [SEPIA] or to [MONO].
- •When you set the Zoom to 10× or higher
- During Digital Still Picture Mode
- When you display a Menu
- When you use the MAGICPIX

In the following cases, the [] indication flashes:

- The flashing indicates that the previously adjusted White Balance setting is still kept. This setting will be kept until White Balance is adjusted again.
- You may not be able to achieve correct White Balance adjustment manually under weak illumination.

Digital Effect Functions (Camera Mode) (→ 27)

- If you set [EFFECT] on [DIGITAL EFFECT] Sub-Menu to [GAIN-UP], you need to adjust the focus manually.
 However, you cannot adjust the shutter speed and iris and cannot select White Balance.
- If [EFFECT2] on the [DIGITAL EFFECT] Sub-Menu is set to [MONO] or [SEPIA], the selected White Balance Mode cannot be changed.
- You cannot use Program AE with Gain-up Mode [GAIN-UP].
- When [PROGRESSIVE] on the [CAMERA SETUP] Sub-Menu is set to [ON], it is not possible to use any of the digital modes in [EFFECT1] on the [DIGITAL EFFECT] Sub-Menu

Wipe Mode and Mix Mode (→ 27)

If either one of the following operations is carried out, stored images will be erased, and Wipe and Mix Functions cannot be used.

- Use the Camera Search Function
- Press the (CAMERA STILL) Button
- Switch the [TAPE/CARD] Selector.

(PV-DC252/PV-DC252-K)

Multi-Picture Mode (→ 28)

- When [PROGRESSIVE] on the [CAMERA SETUP]
 Sub-Menu is [ON], Multi-Picture Mode cannot be used.
- If the [MULTI] Button is pressed while self-recording Mirror mode (→ 20) is used, the still picture is displayed from the upper right corner of the screen, but, in reality, the picture is recorded from the upper left corner as usual.
- The quality of images recorded in Multi Mode deteriorates slightly.

P-IN-P Mode (→ 28)

- Pictures in P-IN-P Mode cannot be recorded with Progressive PhotoShot.
- If the Palmcorder power is turned off, the smaller picture will disappear.
- A title cannot be inserted into the smaller picture.
- If the [CAMERA STILL] Button is pressed in P-IN-P Mode, the setting is cancelled.

Index Search Functions (→ 31)

- Index Search may not be possible at the beginning of tape.
- Because PhotoShot Index Signals are not recorded on still pictures recorded in Continuous PhotoShot Mode, the PhotoShot Index Function cannot be used for these still pictures.
- Scene Index Search may not function properly if the interval between 2 scene index signals is shorter than 1 minute.

Playback Zoom Functions (→ 32)

- You cannot adjust volume with the Remote Controller in Playback Zoom Mode.
- If you turn off the Palmcorder, or if you switch from VCR Mode to Camera Mode, Playback Zoom Mode is automatically cancelled.
- Even if Playback Zoom Functions are being used, images that are output from the DV Terminal or Digital Still Picture Terminal are not enlarged.
- · As you enlarge an image, the quality of image suffers.
- You cannot use the Mirror Mode of Digital Effects and the Playback Zoom Functions simultaneously.
- During the Playback Zoom Function, the Variable Speed Search Function cannot be used with the Remote Controller.

Playback Digital Effect Functions (→ 32)

- Revised signals of images to which digital effects are added during playback cannot be output from the DV Terminal or Digital Still Picture Terminal.
- You cannot use the Wipe Function or Mix Function while playing back the non-recorded portion of tape.

■ Selecting the Sound during Playback (→ 29, 33)

You can select the sound by using the [AUDIO OUT] on the IPLAYBACK FUNCTIONSI Sub-Menu.

STEREO: Stereo Sound (main sound and subsound)
L: Left channel sound (main sound)

R: Left channel sound (main sound)
Right channel sound (sub sound)

 If you dub a tape recorded at the [12bit] selected as the [AUDIO-REC] setting, playback sound becomes stereo sound regardless of whether [AUDIO] is set to [MiX] or to [AUDIO OUT].

■ Audio Dubbing (→ 33)

- The blank section of a tape cannot be dubbed.
- Sounds sent through the DV Terminal cannot be dubbed.
- If a tape has a non-recorded portion when the tape is dubbed, images and sounds may be disturbed when this portion of the tape is played back.
- If you set the tape counter back to 0 at the position where you want to stop Audio Dubbing so as to make it possible to use the Memory Stop function (→ 63), Audio Dubbing is terminated automatically when the tape reaches this position.
- In the case of importing data recorded with Audio Dubbing to a Computer using the Computer's software program, only the original sound (ST1) may be imported, depending on the software program.

Microphone Jack

When audio dubbing is carried out through an external microphone or audio equipment, connect it to the [MIC] Jack. In this case, the built-in microphone of the Palmcorder will be turned off.

Card Functions (→ 34-41) (PV-DC252/PV-DC252-K)

- Do not touch the connector terminal located on the back of the card.
- If the Card Slot Cover is open, the card cannot be accessed
- Wide images cannot be recorded on the Memory Card.
- •A card that was formatted with this Palmcorder may not be usable in other equipment. If this happens, please format the card with the equipment with which the card is to be used. Before proceeding with this operation, we suggest that you take the precautionary measure of storing important images in your personal computer.
- In the Card PhotoShot mode, the Palmcorder automatically saves the file numbers (Imga0001.jpg, etc.) along with the pictures. A file number is recorded with each picture as a running number.

Card PhotoShot (→ 34) (PV-DC252/PV-DC252-K)

- The sound cannot be recorded.
- The Shutter Effect cannot be used.
- The Progressive Function is set to (ON).
- The shutter speed ranges from 1/30-1/500
- A Card formatted with other equipment (like a Personal Computer) might be unusable or it might take more time for recording. We recommend that you use this equipment to format it.

The following functions are not possible.

- Digital Zoom
- Cinema Mode
- Digital Effects/Functions

Recording to a Card from other equipment (→ 35) (PV-DC252/PV-DC252-K)

If you set the [TAPE/CARD] Selector to [CARD], you can use the Card PhotoShot Function for externally input signals. (Not during recording.)

- Black streaks may appear at the four edges of the image.
- When the [PHOTO SHOT] Button is pressed, the image may seem to move backward momentarily, but this does not affect the recording.
- During the recording with analog input, a Card PhotoShot Function cannot be used.

Card Playback (→ 36) (PV-DC252/PV-DC252-K)

- If a blank (nothing recorded) Card is played, the screen becomes white and the [NO FILE] indication appears.
- If you attempt to play back a file recorded in a different format or a file data is defective, the [×] Indication and the [CARD ERROR] Indication could appear as a warning.
- In the case of displaying memory images on a Multi Screen; if there are 7 or more images, they cannot be displayed all at once. Rotate the [PUSH] Dial or press the [SEARCH +1] Button to display the next 6 still pictures.
- When the pictures recorded by another Palmcorder are played back with this Palmcorder, the size of the pictures may be different from the recorded size.
- During automatic copying tape pictures onto a card, the remaining number of pictures that can still be recorded on the Card is displayed. When it becomes [0], the Tape is set to the Recording Pause Mode.

Slide Show (→ 38) (PV-DC252/PV-DC252-K)

- The playback time can be set from 5 to 99 seconds.
- Perform the Slide Show Settings with your own Palmcorder.
- Depending on the File size, playback may take longer than the set time.
- When performing the Slide Show after the Titles are displayed, the Titles disappear.

Title Functions (→ 39) (PV-DC252/PV-DC252-K)

- Even if the contrast of the Title is adjusted, the portions where there is little difference between light and dark and where the boundary between light and dark is unclear may not appear.
- The Title may not appear well if something small is used for it
- If you create an original title, the number of pictures that can be recorded on the Memory Card decreases.
- If the number of pictures that can be recorded on the Memory Card is small, you may not be able to create an original title in some cases.
- When a title is displayed in VCR Mode, the title is not output from the DV Terminal or Digital Still Picture Terminal

DPOF setting (→ 41) (PV-DC252/PV-DC252-K)

- The number of prints can be set from 0 to 99.
- Perform DPOF setting on the Palmcorder you are using.
- It may take some time to verify the DPOF setting. Please wait until the [ACCESS] Lamp goes off.

Using your Palmcorder with Digital Video Equipment (Dubbing) (→ 43)

- Regardless of the setting, dubbing is carried out automatically in the same audio recording Mode as that of the Cassette in the playback-side equipment.
- The images on the monitor of the recording side may be disturbed, but it does not affect the recorded images.
- Even if Playback Digital Effects, Playback Zoom, or Playback Title In have been used, these effects are not output from the DV Terminal.
- Even if you use a device with DV Terminals (such as i.LINK), you may not be able to perform digital dubbing in some cases

Using a Card in a Personal Computer (PV-DC252/PV-DC252-K)

- To erase pictures that you recorded on the Card by using the Palmcorder, be sure to erase them on the Palmcorder, not on the computer.
- You may not be able to properly play back or search the images on the Palmcorder after editing the recorded data or changing the image data on a personal computer.



Cautions for Use

After Use

- 1 Take out the Cassette. (→ 13)
- 2 Set the [OFF/ON/MODE] Switch to [OFF]. (→ 14)
- 3 Detach the Power Source and retract the Viewfinder. (→ 12)
- 4 To protect the Lens, attach the supplied Lens Cap. (→ 13)

Tips for using your Palmcorder

When you use your Palmcorder on a rainy or snowy day or on a beach, make sure that no water enters the Palmcorder.

- Water may cause the Palmcorder or Cassette to malfunction. (Irreparable damage may occur.)
- If sea water splashes onto the Palmcorder, wet a soft cloth with tap water, wring it well, and use it to wipe the Palmcorder body carefully. Then, wipe it again thoroughly with a soft dry cloth.

Keep the Palmcorder away from magnetically charged equipment (such as a TV, game equipment, etc.)

- If you use the Palmcorder near a TV, images or sounds may be disturbed due to electromagnetic wave radiation.
- Due to strong magnetic fields created by speakers or large motors, recording on the tape may be damaged, or images may be distorted.
- Electromagnetic wave radiation generated by a microprocessor may adversely affect the Palmcorder, causing the disturbance of images and sounds.
- If the Palmcorder is affected by magnetically charged equipment and does not function properly, turn off the Palmcorder power and detach the Battery or AC Adaptor and then connect the Battery or AC Adaptor again.
 Thereafter, turn on the Palmcorder power.

Do not use your Palmcorder near radio transmitters or high-voltage lines.

 If you record pictures near radio transmitters or highvoltage lines, recorded images or sounds may be adversely affected.

Do not use this Palmcorder for surveillance purposes or other business use.

- If you use the Palmcorder for a long period of time, the internal temperature increases and, consequently, this may cause malfunction.
- This Palmcorder is not intended for industrial use.

When you use your Palmcorder on a beach or similar place, do not let sand or fine dust get into the Palmcorder.

Sand or dust may damage the Palmcorder or Cassette.
 (Care should be taken when inserting and removing the Cassette.)

Do not spray insecticides or volatile chemicals onto the Palmcorder.

- If the Palmcorder is sprayed with such chemicals, the Palmcorder body may deform and the surface finish may peel off.
- Do not keep a rubber or plastic product in contact with the Palmcorder for a long period of time.

When cleaning the Palmcorder, do not use any solvent, such as benzine, alcohol, thinner, etc.

- The Palmcorder body may become damaged and the surface finish may peel off.
- Before cleaning, detach the Battery or pull out the AC Cable from the AC Jack.
- Wipe the Palmcorder with a soft dry cloth. To remove stubborn stains, wipe with a cloth that is soaked in a detergent diluted with water and afterward finish wiping with a dry cloth.
- For storing or transporting the Palmcorder, place it in a bag or case lined with soft pads so as to prevent the coating on the Palmcorder body from becoming worn.

After use, be sure to take the Cassette out and detach the Battery from the Palmcorder or pull out the AC Cable from the AC Jack.

- If the Cassette is left in the Palmcorder, the tape sags and deteriorates.
- If you leave the Battery attached to the Palmcorder for a long time, the voltage drops excessively, and the Battery will not function even after it is recharged.

About the AC Adaptor

- If the temperature of the Battery is extremely high or extremely low, the [CHARGE] Lamp may continue flashing, and the Battery may not charge. After the temperature of the Battery has decreased or increased sufficiently, charging starts automatically. If the [CHARGE] Lamp continues to flash even after the Battery temperature has decreased or increased sufficiently, the Battery or AC Adaptor may be faulty. In this case, please contact your dealer.
- If the Battery is warm, charging takes a longer time than normal.
- If you use the AC Adaptor near a radio, radio reception may be disturbed. Keep the AC Adaptor 1 meter or more away from radios.
- When the AC Adaptor is in use, it may generate whirring sounds. This is normal.
- After use, be sure to pull out the AC Cable from the AC Jack. (If they are left connected, a small amount of electricity is consumed.)
- Always keep the electrodes of the AC Adaptor and Battery clean.

Condensation

If excessive moisture condenses in the unit, [DEW DETECTED] Indication will flash, and the Palmcorder will automatically turn off after about 1 minute. If this happens, follow the steps below:

1 Take out the Cassette.

- None of the other functions operate. Depending on the amount of condensation, removing the Cassette may become difficult. If this happens, wait for 2 to 3 hours before taking the Cassette out.
- 2 Open the Cassette Compartment and wait for 2 to 3 hours.
 - The number of hours you should wait depends on the amount of condensation and ambient temperature.
- 3 2 to 3 hours later, turn on the Palmcorder and check to see if the [DEW DETECTED] Indication is displayed.
 - Even if the [DEW DETECTED] Indication is not displayed, as a precaution, please wait for another hour before using the Palmcorder.

Watch for Condensation Even Before the [DEW DETECTED] indication is Displayed.

- Because condensation takes place gradually, the [DEW DETECTED] Indication may not be displayed during the first 10 to 15 minutes of condensation formation inside the Palmcorder.
- In extremely cold places, condensation may freeze and form frost. In this case, the frost melts first, thus forming condensation, and then it takes another 2 to 3 hours to eliminate the condensation.

When the Lens Is Fogged:

Set the [OFF/ON/MODE] Switch to [OFF] and leave the Palmcorder in this condition for about 1 hour. When the lens temperature becomes close to the ambient temperature, the fog disappears naturally.

Digital Video Head Cleaner

If the heads (the parts that make contact with tape) are dirty, mosaic-like noise patterns may appear on the playback image, or the screen as a whole becomes black. If the heads are extremely dirty, recording performance deteriorates, and, in the worst case, the Palmcorder cannot record at all.

Causes of Digital Video Heads Becoming Dirty

- · Large quantity of dust in the air
- High-temperature and high-humidity environment
- Damaged tape
- Long operating hours

Using Mini-DV Format Digital Video Head Cleaner

- 1 Insert the Head Cleaner into the Palmcorder in the same manner as a Video Cassette.
- 2 Press the [▶] Button, and 20 seconds later, Press the [▶] Button. (Do not rewind the tape.)
- 3 Take out the head cleaner. Insert a Video Cassette and start recording. Then, play the tape back to check the recorded image.
- 4 If the image is still not clear, repeat Steps 1 to 3. (Do not use the Head Cleaner 3 times or more consecutively.)

Notes:

- Do not rewind every time you use the Head Cleaner.
 Rewind only when the tape reaches the end, and then use it again from the beginning in the same manner as before.
- If the heads become dirty soon after cleaning, the Mini DV may be damaged. In this case, immediately stop using that Cassette.
- Do not clean the heads excessively. (Excessive cleaning may cause excessive wear of the heads. If the heads are worn, images cannot be played back even after the heads are cleaned.)
- If the dirty heads cannot be cleaned with the head cleaner, the Palmcorder needs to be cleaned at a service center.
 Please consult a distributor or Panasonic Servicenter
- Video head cleaners can be purchased from service centers.
- Head cleaning due to dirty heads is not considered a malfunction of the product. It is not covered by the warranty.

Periodic Check-up

To maintain the highest image quality, we recommend replacement of worn parts, such as heads, etc., after approximately 1000 hours of use. (This, however, depends on operating conditions, such as temperature, humidity, dust, etc.)

Optimal Use of the Battery

Battery Characteristics

This Battery is a rechargeable lithium ion battery. Its ability to generate power is based upon the chemical reaction that takes place inside it. This reaction is affected by the surrounding temperature and humidity, and, if the temperature is too high or too low, the operating time of the Battery becomes shorter. If the Battery is used in an extremely cold environment, the Battery may operate only for about 5 minutes. If the Battery becomes extremely hot, a protective function may operate, and the Battery may even become unusable for awhile.

Be Sure to Detach the Battery After Use

Be sure to detach the Battery from the Palmcorder. (If it is left attached to the Palmcorder, a minute amount of current is consumed even when the Palmcorder power is off.) If the Battery is left attached to the Palmcorder for a long time, over discharge takes place. The Battery may become unusable after it is charged.

Disposing of an unusable Battery

- The Battery has a limited life.
- Do not throw the Battery into fire because it may cause an explosion.

Always Keep the Terminals of the Battery Clean

Prevent the terminals from getting clogged with dirt, dust, or other substances.

If you drop the Battery accidentally, check to see if the Battery body and terminals are damaged.

Attaching a damaged Battery to the Palmcorder or AC Adaptor may damage the Palmcorder or AC Adaptor.

Cautions for Storage

Before storing the Palmcorder, take the Cassette out and detach the Battery.

Store all the components in a dry place with a relatively stable temperature.

Recommended Temperature: 59 °F to 77 °F (15°C to 25 °C),
 Recommended Humidity: 40% to 60%

Palmcorder

- Wrap it with a soft cloth to prevent dust from getting into the Palmcorder.
- Do not leave the Palmcorder in places that expose it to high temperature.

Battery

- Extremely high temperatures or low temperatures will shorten the life of the Battery.
- If the Battery is kept in smoky or dusty places, the terminals may rust and cause malfunctions.
- Do not allow the Battery terminals to come in contact with metal objects (such as necklaces, hairpins, etc.) This can result in a short circuit or heat generation and, if you touch the Battery in this condition, you may be badly burned.
- Store the Battery in a completely discharged state. To store the Battery for a long period of time, we recommend you charge it once every year and store it again after you completely use up the charged capacity.

Cassette

- Before storing it, rewind the tape to the beginning. If the Cassette is left for more than 6 months with the tape stopped midway, the tape sags (although it depends on the storage condition.) Be sure to rewind to the beginning.
- Store the Cassette in its case. Dust, direct sunlight (ultraviolet rays), or humidity may damage the tape. Dust contains hard mineral particles, and dusty Cassettes damage the heads of the Palmcorder and other components. Develop a habit of returning the Cassette back to its case.
- Twice a year, wind the tape to the end and then rewind it to the beginning. If the Cassette is left for 1 year or longer without winding or rewinding, temperature and humidity changes may cause the Cassette to deform due to swelling, shrinking, and so forth. The wound tape may stick to itself.
- Do not place a Cassette near highly magnetic substances or equipment.
- The surface of tape is covered with extremely minute magnetic particles, upon which signals are recorded. Magnetic necklaces, toys, etc., have magnetic force that is stronger than you may normally expect, and they may erase the contents of a recording or may cause noise in images and sounds.

Card (PV-DC252/PV-DC252-K)

- When the Card is being read, do not remove the Card, turn off the power, or subject it to vibration or impact.
- Do not leave the Card in places where there is high temperature or direct sunlight, or where electromagnetic waves or static electricity are easily generated.
- Do not bend or drop the Card. The Card or the recorded content may be damaged.
- After use, be sure to remove the Card from the Palmcorder.
- After use, store the supplied SD Memory Card in the enclosed yellow bag.

LCD Monitor/Viewfinder/Lens Hood

LCD Monitor

- In a place with drastic temperature changes, condensation may take place on the LCD Monitor. Wipe it with soft dry cloth.
- If your Palmcorder is extremely cold when you turn its power on, the image on the LCD Monitor will be slightly darker than usual at first. However, as the internal temperature increases, it goes back to the normal brightness.

Extremely high precision technology is employed to produce the LCD Monitor screen featuring a total of approximately 112,000 pixels. The result is more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

Viewfinder

- Do not direct the Viewfinder or Lens to the sun. Internal components may be seriously damaged.
- When the Palmcorder is used with a large capacity Battery attached to it, it is not practical to look in the Viewfinder from behind the Battery. In this case, lift up the Viewfinder to an easy-to-see angle.

Extremely high precision technology is employed to produce the Viewfinder screen featuring a total of approximately 113,000 pixels. The result is more than 99.99% active pixels with a mere 0.01% of the pixels inactive or always lit. However, this is not a malfunction and does not affect the recorded picture.

Lens Hood

- Do not attach other conversion lenses in front of the Lens Hood; there is no mount to be used for the attachment,
- •When you want to attach the Tele Conversion Lens (not supplied) or the Wide Conversion Lens (not supplied), MC Protector (not supplied) or ND Filter (not supplied) first of all, turn the Lens Hood counterclockwise. If the MC Protector (not supplied) or ND Filter (not supplied) is used, the Lens Hood can be mounted on the filter
- If you push the [W/T] Lever toward [W] during recording
 with the filter or conversion lens attached to the
 Palmcorder, the 4 corners of the image may become dark
 (vignetting). For details, please refer to the operating
 instructions for your accessories.
- Be sure to keep the Lens Hood attached to the Palmcorder so as to shut out unnecessary light.

Explanation of Terms

Digital Video System

In a digital video system, images and sounds are converted into digital signals and recorded on a tape. This complete digital recording is capable of recording and playback with minimal image and sound deterioration.

In addition, it automatically records data, such as Time Code and date/time, as digital signals.

Compatibility with S-VHS or VHS Cassettes

Because this Palmcorder employs a digital system for recording image and sound data, the cassette is not compatible with conventional S-VHS or VHS video equipment that employs an analog recording system.

The size and shape of the Cassettes are also different,

Compatibility with Output Signals

Because AV signal output from the AV signal output jack is analog (the same as conventional video systems), this Palmcorder can be connected with S-VHS or VHS VCR or a TV for playback. (→ 42)

Focus

Auto Focus Adjustment

The Auto Focus System automatically moves the internal focusing lens forward or backward and adjusts the focus so that the subject can be seen clearly.

However, the Auto Focus System does not function properly for the following subjects or under the following recording conditions.

Please use the Manual Focus Mode instead.

- Recording a subject whose one end is located closer to the Palmcorder and the other end farther away from it
 - Because Auto Focus makes adjustments at the center of an image, it may be impossible to focus on a subject that is located in both foreground and background.
- 2) Recording a subject behind dirty or dusty glass
 - Because the focus is on the dirty glass, the subject behind the glass will not be in focus.
- 3) Recording a subject in dark surroundings
 - Because the light information that comes through the lens decreases considerably, the Palmcorder may not focus correctly.
- Recording a subject that is surrounded by objects with glossy surfaces or by highly reflective objects
 - Because the Palmcorder focuses on the objects with glossy surfaces or on highly reflective objects, the recording subject may become blurry.
- 5) Recording a fast-moving subject
 - Because the focus lens inside moves mechanically, it may not be able to keep up with the fast-moving subject.
- 6) Recording a subject with little contrast
 - Because the Palmcorder achieves focus based upon the vertical lines of an image, a subject with little contrast, such as a white wall, may become blurry.

White Balance Adjustment

Depending on the type of light source, the colors recorded by the Palmcorder may be affected. In some cases, images may be recorded with bluish or reddish hue. To minimize the effect of light on the subject's color, White Balance Adjustment becomes necessary.

White Balance Adjustment

White Balance Adjustment recognizes the color of light and makes adjustment so that the white color will become pure white.

Auto White Balance Adjustment

This Palmcorder stores settings that are optimal for several kinds of general light sources. The Palmcorder determines the hue of light that it receives through the lens and White Balance Sensor, thereby judging the recording condition, and selects the closest hue setting. This function is called Auto White Balance Adjustment.

However, since white balance settings for only certain kinds of light sources are stored, the Auto White Balance function does not operate properly when recording occurs under light that is out of the range of the setting values.

Time Code

Time Code signals are data that indicate time measured in hours, minutes, seconds, and frames (30 frames per second.) If this data is included in a recording, an address is assigned to each image on the tape.

- The Time Code is automatically recorded as a part of the sub-code at each recording.
- When a new (previously unrecorded) Cassette is inserted, the Time Code automatically starts from zero. If a recorded Cassette is inserted, the Time Code picks up from the point where the last scene was recorded. (In this case, when the Cassette is inserted, the zero display [0h00m00s00f] may appear, but the Time Code starts from the previous value.)
- The Time Code cannot be reset to zero.
- Unless the Time Code is continuously recorded from the beginning of a tape, accurate editing may not be possible. To ensure that the Time Code will be recorded with no breaks, we recommend the use of the Camera Search Function (→ 20) or the Blank Search Function (→ 30) before recording a new scene.

Memory Stop Function

The Memory Stop Function is useful for the following operations.

Rewinding or fast-forwarding a tape to a desired position

- 1 Set [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].
- 2 Reset the Tape Counter to zero at the tape position from which you want to play it back later. (→ 10, 16)
- 3 Start playback or recording.
- 4 When playback or recording is over: slide the [OFF/ON/MODE] Switch from [ON] to put the Palmcorder in the VCR Mode.
 - •The [VCR] Lamp lights up.
- 5 Rewind the tape.
 - The tape automatically stops approximately at the position where the counter was set to zero.

Stopping editing automatically during audio dubbing

- 1 Set [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].
- 2 Reset the Tape Counter to zero at the position where you want to stop editing.
- 3 Play back the still pictures where you want to start audio dubbing.
- 4 Start audio dubbing. (→ 33)
 - Audio dubbing automatically stops at the position where the counter was set to zero.

Specifications

Digital Palmcorder

Information for your safety

Power Source: Power Consumption: Recording

Recording Format:

Tape Used: Recording/Playback Time:

Video

Recording System: Television System:

Recording System:

Image Sensor:

Lens:

Filter Diameter: Zoom: Monitor:

Finder: Microphone: Speaker

Standard Illumination: Minimum Required Illumination:

Video Output Level: S-Video Output Level:

Audio Output Level: Mic Input:

Digital Still Picture:

RS-232C serial output

(PV-DC152/PV-DC152-K):

USB (PV-DC252/PV-DC252-K):

Digital Interface:

Dimensions:

Weight:

Operating Temperature: Operating Humidity:

(without Battery and DV cassette) 32 °F -104 °F (0 °C-40 °C)

10% -80%

DC 7.8/7.2 V 5.5 W

Mini DV (Consumer-use Digital Video SD Format)

6.35 mm digital video tape SP: 80 min.: LP: 120 min. (with DVM80)

Digital Component

EIA Standard: 525 lines 60 Fields NTSC color signal

PCM Digital Recording 16 bit (48 kHz/2 track). 12 bit (32 kHz/4 track)

1/4-inch CCD Image Sensor (680,000 pixels) Auto Iris, F1.8.

Focal Length; 3.15-31.5 mm, Macro (Full Range AF) 30.5 mm

10:1 Power Zoom 2.5-inch LCD

Color Electronic Viewfinder Stereo

1 round speaker 20 mm 1,400 lx

12 ly

1.0 Vp-p, 75 ohm Y Output: 1.0 Vp-p, 75 ohm

C Output: 0.286 Vp-p, 75 ohm 316 mV, 600 ohm

Mic sensitivity -50 dB (0 dB = 1 V/Pa, 1 kHz) (Stereo mini jack)

Digital Still Picture Output, Control Signal Input/Output (Transfer rate: max. 115 kbps)

RS-232 output terminal for transfer

from tape. PhotoVu Link software and RS-232C

cable optional (PV-DR\$2)

Card reader/writer function. USB 2,0 compliant (max. 12 Mbps) No copyright protection support

DV Input/Output Terminal (i.LINK, 4-pin) 2-11/16 (W) ×3-1/2 (H) ×4-1/2 (D) inch

68 (W) × 89 (H) × 114 (D) mm 1.04 lbs. (0.47 kg)

Card Memory Functions (PV-DC252/PV-DC252-K)

Recording Media: SD Memory Card, MultiMediaCard Image Compression: JPFG.

Maximum Number of pictures that can be recorded on the supplied SD Memory Card

FINE: approx. 45 pictures NORMAL . approx. 95 pictures ECONOMY: approx. 190 pictures

• When you record in one Memory Card using various modes (FINE, NORMAL, ECONOMY), the maximum number of images available will not exceed the indications stated above.

 The indicated Maximum Number of pictures that can be recorded is an approximate calculation. The number of recordable still pictures on the SD Memory Card may differ depending on the subject.

AC Adaptor Information for your safety

Power Source: AC 110-240 V, 50/60 Hz **Power Consumption:** 18 W

1 W (When not in use.) DC 7.8 V, 1.4 A DC Output:

(Palmcorder Operation) DC 8.4 V, 1.2 A (Battery Charging)

Dimensions: 2-3/4 (W) × 1-3/4 (H) × 4-9/16 (D) inch 70 (W) × 45 (H) × 116 (D) mm

Weight: 0.363lbs. (0.165 kg)

Weight and dimensions shown are approximate. Designs and specifications are subject to change without prior notice.

| Accessory# | Figure | Description |
|--|---------|---|
| PV-DAC11A (For USA) PV-DAC11A-K (For Canada) | | AC Adaptor with AC Cable and DC Cable |
| *CGR-D08A/1B (Replaces *CGR-D120A/1B) | | 800mAH/ Rechargeable Lithium Ion Battery Pack |
| *CGR-D16A/1B (Replaces *CGR-D220A/1B) | | 1600mAH/ Rechargeable Lithium Ion Battery Pack |
| *CGP-D28A/1B | | 2800mAH/Rechargeable Lithium Ion Battery Pack |
| *CGR-D53A/1K (Replaces *CGR-D815A/1B) | | 5300mAH/Rechargeable Lithium Ion Battery Pack |
| PV-DDC9 (For USA) PV-DDC9-K (For Canada) | | DV Interface Cable (i.LINK) (4-pin to 4-pin) |
| PV-DRC9 (For USA) PV-DRC9-K (For Canada) | | IR Remote Control |
| PV-H150 (USA only) | | Carrying Case |
| PV-H210 (USA only) | | Leather Carrying Case |
| RP-SD064BPPA RP-SD032BPPA RP-SD016BPPA | | 64 MB SD Memory Card 32 MB SD Memory Card 16 MB SD Memory Card |
| BN-SDCAPE/1B (For USA) BN-SDCAPU/1B (For Canada) | 4: | USB Reader/Writer for SD Memory Card (compatible with MultiMediaCard) |
| BN-SDABPE/1B (For USA) BN-SDABPU/1B (For Canada) | // a II | SD PCMCIA Adaptor (compatible with MultiMediaCard) |
| PV-PD2100 (USA only) | | Digital Video Printer |
| PV-DRS2 | | PC Connection Unit (Includes RS-232C connection cables and PHOTOVU LINK Software) |

^{*}Please refer to page 12, concerning the battery charging time and available recording time.

^{*}NOTE: Accesories and/or model numbers may vary by country. Please consult you local dealer.

Palmcorder Accessory Order Form (For USA Customers)

| Please | e photocopy | this form when p | lacing an order. | | |
|----------|--------------------------|--------------------|---|------------------------------------|--------------|
| | mcorder Mo ns Ordered | odel # | | | |
| Acc | essory # | Description | Price Each | Quantity | Total Price |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | - | |
| | | | <u> </u> | Subtotal | |
| | | | Your State & | Local Sales Tax | |
| | | | | | 6.05 |
| | | | 311 | ipping & Handling | 6.95 |
| 3. Me | thod of pavi | ment (check one) | | Total Enclosed | |
| | | | osed (NO C.O.D.S | SHIPMENTS) | |
| | VISA | | • | | |
| | MasterCa | | | | |
| | Discover | | | | |
| | Discover | | _ | | |
| /DI | | | heck or Money O | rder to: PANASONIC | CACCESSORIES |
| | se do not se | | | 1-1 | |
| | | nation (UPS delive | ery requires comp | lete street address) | |
| Mr | nip To: : | | | | |
| Mr Ms | - | | | | |
| IAIS | First | Last | | Phone#: | |
| | Chan ah A alala | | | Day () | |
| | Street Addr | ess | | Night () | |
| | City | | State Zip | | |
| | TO OBTAI | | LMCORDER ACCE THE FOLLOWING JR LOCAL PANASO | | O ANY OF |
| | CAL | L PANASONIC'S A | OR | R LINE AT 1-800-332- | 5260 |
| | OAL | | F, 6 AM-10:30 AM S OR | | JJUG |
| MA | AIL THIS ORI | | | IPANY ACCESSORY C nt, WA. 98032 | ORDER OFFICE |

In CANADA, please contact your local Dealer for more information on Accessories.

(Problems and Solutions)

If you are experiencing one of the following problems with your Digital Palmcorder, it may be something you can correct yourself. Check the list below for symptoms and corrections.

| Problems | Solutions |
|---|--|
| The Palmcorder power cannot be turned on. | Is the power source connected correctly? |
| The Palmcorder power turned off automatically. | If you leave the Palmcorder in Recording Pause Mode for more than 5 minutes, the power is turned off automatically to protect the tape and to save the Battery power. |
| The Palmcorder power does not stay on long enough. | Is the Battery low? Charge the Battery or attach a fully charged Battery. |
| Something is wrong with the Palmcorder's operation. The Palmcorder is turned on but no functions operate. | Press the [RESET] Button on the Palmcorder with a pointed object. If this does not solve the problem, first disconnect the power supply and wait for a minute or so, and then reconnect the power supply to turn the power back on. (If the above operation is performed when the [ACCESS] Lamp of the Card Slot is lit, the data on the Card may be damaged.) |
| Battery runs down quickly. | Is the Battery fully charged? Charge it with the AC Adaptor. Are you using the Battery in an extremely cold place? In cold places, the operating time of the Battery becomes shorter. Has the Battery worn out? If the operating time is still too short even after the Battery is fully charged, the Battery has worn out. |
| The Battery cannot be charged. | If the DC Cable is connected to the AC Adaptor, charging cannot be performed. Disconnect the DC Cable. |
| Recording does not start although power is supplied to the Palmcorder and the Cassette is correctly Inserted. | Is the accidental erasure protection tab on the Cassette open? If it is open (set to [SAVE]), recording cannot be performed. Is the tape wound to the end? Insert a new Cassette. Is the Palmcorder power turned on? Is the [CAMERA] Lamp on? If the [CAMERA] Lamp is not on, no recording function can be operated. Has condensation occurred? Wait until the [DEW DETECTED] Indication disappears. |
| Audio dubbing cannot be performed. | Is the accidental erasure prevention slider on the Cassette open? If it is open (set to [SAVE]), recording cannot be performed. Are you attempting to edit a tape portion that was recorded in LP Mode? LP Mode does not allow audio dubbing to operate. |
| The Time Code becomes inaccurate. | The Time Code Indication counter may not be constant in the reverse direction in Slow Motion Playback Mode, but this is not a malfunction. |
| The Remaining Tape Time Indication disappears. | When you record still pictures in PhotoShot Mode, the Remaining Tape Time Indication may disappear temporarily. However, it reappears when the Palmcorder is set back to Normal Recording Mode. |

If you are experiencing one of the following problems with your Digital Palmcorder, it may be something you can correct yourself. Check the list below for symptoms and corrections.

| Problems | Solutions |
|---|---|
| The Remaining Tape Time Indication does not match the actual remaining tape time. | If scenes of less than 15 seconds are continuously recorded, the remaining tape time cannot be displayed correctly. In some cases, the Remaining Tape Time Indication may show remaining tape time that is 2 to 3 minutes shorter than the actual remaining tape time. |
| Video cannot be played back even when the [▶] Button is pressed. | Is the [VCR] Lamp on? If the [VCR] Lamp is not on, the playback function cannot be used. |
| Mosaic-like noise patterns appear on images during Cue, Review or Slow Motion Playback. | This phenomenon is characteristic of digital video systems. It is not a malfunction. |
| Although the Palmcorder is correctly connected to a TV, playback images cannot be seen. | Have you selected Video Input on the TV? Please read the operating instructions of your TV and select the input that matches the input jacks used for the connection. |
| Playback image is not clear. | Are the heads of the Palmcorder dirty? If the heads are dirty, playback image will not be clear. |
| No sound is played back from the built-in speaker or headphones of the Palmcorder. | Is the volume too low? During playback, continue pressing the [PUSH] Dial until the [VOLUME] Indication appears. Then, rotate the [PUSH] Dial to adjust the volume. |
| Different sounds are reproduced at the same time. | [AUDIO] on the [PLAYBACK FUNCTIONS] Sub-Menu of the [VCR FUNCTIONS] Main-Menu has been set to [MIX]. As a result, the original sound and sound that was recorded by audio dubbing are played back together. It is possible to reproduce the sounds separately. |
| The original sound was erased when audio dubbing was performed. | If you perform audio dubbing on a recording done in [16bit] Mode, the original sound will be erased. If you want to preserve the original sound, be sure to select [12bit] Mode at the time of recording. |
| Sounds cannot be played back. | Although a Cassette with no audio dubbing is being played, is [AUDIO] on the [PLAYBACK FUNCTIONS] Sub-Menu of the [VCR FUNCTIONS] Main-Menu set to [ST2]? To play back a Cassette with no audio dubbing, [AUDIO] must be set to [ST1]. Is the Variable Speed Search Function working? Press the [▶] Button to cancel the Variable Speed Search Function. |
| The recorded picture on the Memory Card is not clear. (PV-DC252/PV-DC252-K) | Do you have [PICTURE QUALITY] on the [CARD SETUP] Sub-Menu set to [ECONOMY]? If recording is made when it is set to [ECONOMY], a detailed image may show a mosaic pattern. Set the [PICTURE QUALITY] to [NORMAL] or [FINE]. (→ 35) |
| Card PhotoShot playback pictures do not look normal. (PV-DC252/PV-DC252-K) | There is a possibility that the images are damaged. To prevent the loss of image data, we recommend that you back images up on a Cassette or personal computer. (→ 37, 46) |
| Even if a Card is formatted, it cannot be used. (PV-DC252/PV-DC252-K) | There is a possibility of damage to either the Palmcorder or the Card. Please contact Panasonic Call Center. |

Request for Service Notice

here.

Please photocopy this form when making a request for service notice.

In the unlikely event this product needs service.

Please include your proof of purchase.
(Failure to due so will delay your repair.)

To further speed your repair, please provide an explanation of what wrong with the unit and any symptom it is exhibiting.

Mail this completed form and your Proof of Purchase along with your unit to:
Panasonic Services Company
1705 N. Randall Road
Elgin, IL. 60123-7847

Attn: Camcorder Repair

Please write the displayed above Self Diagnostic number

Limited Warranty

(For USA Customers)

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION OF MATSUSHITA ELECTRICCORPORATION OF AMERICA One Panasonic Way Secaucus, New Jersey 07094 PANASONIC SALES COMPANY, DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC., AVE. 65 de Infantería, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic/Quasar Video Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

| Product | Parts | Labor | Service | Contact Number |
|--|---|--------------------------------------|---|----------------------|
| Camcorder | One (1) Year (except CCD image Sensor) CCD Image Sensor - 6 (Six) Months | Ninety (90) Days Ninety (90) Days | Carry-In or Mail-In | 1-800-211-PANA(7262) |
| DVD/VCR Deck, A/V Mixer | One (1) Year | Ninety (90) Days | Carry-In or Mail-In | 1-800-211-PANA(7262) |
| TV/VCR, TV/DVD, TV/DVD/VCR Combination | One (1) Year (except CRT) CRT - Two (2) Years | Ninety (90) Days Ninety (90) Days | Carry-in: 21" CRTand Smaller In-Home or Carry-in: 22" CRT and Larger | 1-800-211-PANA(7262) |
| TV/HDR Combination | One (1) Year (except CRT) CRT - Two (2) Years | Ninety (90) Days Ninety (90) Days | In-Home or Carry-In | 1-888-843-9788 |
| Rechargeable Batteries (in exchange for defective item) | . Теп (10) Days | Not Applicable | Carry-In or Mail-In | 1-800-211-PANA(7262) |
| Tape (in exchange for defective item) | Five (5) Days | Not Applicable | Carry-In or Mail-In | 1-800-211-PANA(7262) |
| Memory Cards (in exchange for defective item) | Ninety (90) Days | Not Applicable | Carry-In or Mail-In | 1-800-211-PANA(7262) |

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product or arrange for in-home service, as applicable, during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

Carry-In, Mail-in or In-Home Service

For Carry-In, Mail-In or In-HomeService (as applicable) in the United States call toll free contact number listed above or visit Panasonic Web Site: http://www.panasonic.com

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANYBREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer, loss of media or images, data or other memory or recorded content. The items listed are not exclusive, butare for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OFMERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

For Product Information, Operating Assistance, Literature Request, Dealer Locations. and all Customer Service inquiries please contact: 1-800-211-PANA (7262), Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST. or send e-mail to : consumerproducts@panasonic.com

Web Site: http://www.panasonic.com You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only) Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032 (Monday - Friday 6 am-5 pm; Saturday 6 am-10:30 am, PST) (Visa, MasterCard, Discover Card, American Express, Check)

Product Repairs

Centralized Factory Servicenter

MAIL TO:

Panasonic Services Company

1705 N. Randall Road. Elgin, IL 60123-7847

Attention: Camcorder Repair

Please carefully pack and ship, prepaid and insured, to the Elgin Centralized Factory Servicenter Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter; Ave. 65 de Infantería. Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985 Phone (787) 750-4300 Fax (787) 768-2910

As of February 2002

Service in Canada: As per Sevicenter listed in Canadian warranty information on page 72.



Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect for a period as stated below from the date of original purchase.

Camcorder Product - One (1) year, parts and labour

LIMITATIONS AND EXCLUSIONS

This warranty does not apply to products purchased outside Canada or to any product which has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during shipping, or which has been altered or repaired in any way that affects the reliability or detracts from the performance, nor does it cover any product which is used commercially. Dry cell batteries are also excluded from coverage under this warranty.

This warranty is extended to the original end user purchaser only. A purchase receipt or other proof of date of original purchase is required before warranty service is performed.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, EXCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES.

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

WARRANTY SERVICE

For product operation and information assistance, please contact your Dealer or our Customer Care Centre at:

Telephone #: (905) 624-5505

Fax #: (905) 238-2360

Web: www.panasonic.ca

For product repairs, please contact one of the following:

- Your Dealer who will inform you of an authorized Servicentre nearest you.
- Our Customer Care Centre at (905) 624-5505 or www.panasonic.ca
- A Panasonic Factory Servicentre listed below:

Richmond, British Columbia Panasonic Canada Inc. 12111 Riverside Way Richmond, BC V6W 1K8 Tel: (604) 278-4211 Fax: (604) 278-5627 Calgary, Alberta
Panasonic Canada Inc.
6835-8th St. N. E.
Calgary, AB T2E 7H7
Tel: (403) 295-3955
Fax: (403) 274-5493

Mississauga, Ontario
Panasonic Canada Inc.
5770 Ambler Dr.
Mississauga, ON L4W 2T3
Tel: (905) 624-8447
Fax: (905) 238-2418

Lachine, Québec Panasonic Canada Inc. 3075, rue Louis A. Amos Lachine, QC H8T 1C4 Tel: (514) 633-8684 Fax: (514) 633-8020

| CUSTOMER'S RECORD | | |
|-------------------|--------------|--|
| | | |
| Customer Name: | | |
| Serial Number: | | |
| Date of Purchase: | | |
| Dealer's Name: | | |
| Address: | Phone Number | |

IF YOU SHIP THE PRODUCT TO A SERVICENTRE


Carefully pack and send prepaid, adequately insured and preferably in the original carton.

Include details of the defect claimed, and proof of date of original purchase.

Index

| AC Adaptor | |
|--|--|
| 70 Adaptor | 1: |
| ArcSoft | |
| Audio Dubbing | |
| Auto Focus | |
| Auto White Balance Adjustment | 63 |
| ■B | |
| Backlight Compensation | 2: |
| Before Requesting Service | |
| Black & White Mode | |
| Blank Search | |
| E C | • |
| Camera Search | 20 |
| Card PhotoShot | |
| Card Playback | |
| Charging the Battery | |
| Cinema Mode | |
| Color Temperature | |
| Condensation | |
| Continuous PhotoShot | |
| Cue Playback | |
| ■ D | |
| Date/Time Indication | - |
| Date/Time Setting | |
| Digital Effect | 18 |
| Digital Electronic Image Stabilizer | |
| Digital Still Picture | |
| Digital Zoom | 25 |
| DPOF Setting | |
| Dubbing | |
| | , 40 |
| E Comment of Children | 4. |
| Erasure Prevention Slider | 13 |
| F | |
| F Number | |
| Fade | 22 |
| | |
| File Lock Setting | . 40 |
| File Search Mode | . 40 36 |
| File Search Mode | 40 36 52 |
| File Search Mode | 40 36 52 |
| File Search Mode | 40 36 52 41 |
| File Search Mode | 40 36 52 41 |
| File Search Mode Folder Structure Formatting G Gain-up Mode | 40 36 52 41 |
| File Search Mode Folder Structure Formatting G Gain-up Mode | 40 36 52 41 |
| File Search Mode Folder Structure Formatting G Gain-up Mode | 40 36 52 41 |
| File Search Mode Folder Structure Formatting G Gain-up Mode | 40 36 52 41 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris. | 40 36 52 41 27 |
| File Search Mode Folder Structure Formatting G Gain-up Mode I I Index Search Iris J Jog Playback | 40 36 52 41 27 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback | 40 36 52 41 27 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor | 40 36 52 41 27 25 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty | 40 36 52 41 27 30 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode | 40 36 52 41 27 30 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode | 40 36 52 41 27 25 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode M Macro Close-up Function | 40 36 52 41 27 25 30 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode M Macro Close-up Function Manual Focus | 40 36 52 41 25 30 14 70 24 |
| File Search Mode Folder Structure Formatting G Gain-up Mode II Index Search Iris. J Jog Playback L LCD Monitor Limited Warranty Low Light Mode IM Macro Close-up Function Manual Focus Memory Card. | 40 36 52 41 27 25 30 14 25 |
| File Search Mode Folder Structure Formatting G Gain-up Mode II Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode IM Macro Close-up Function Manual Focus Memory Card Memory Stop Function | 40 36 52 41 27 25 30 14 25 24 24 25 34 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode IM Macro Close-up Function Manual Focus Memory Card Memory Stop Function Menu Screen | 40 36 52 41 27 25 30 14 25 24 25 24 25 24 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode IM Macro Close-up Function Manual Focus Memory Card Memory Stop Function Menu Screen Microphone 21 | 40 36 41 27 31 25 30 14 24 24 25 34 35 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode M Macro Close-up Function Manual Focus Memory Card Memory Stop Function Menu Screen Microphone Mic | 40 36 52 31 25 30 14 25 24 25 34 35 36 36 36 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode M Macro Close-up Function Manual Focus Memory Card Memory Stop Function Menu Screen Microphone Mic | 40 36 52 41 25 30 14 25 25 30 25 34 25 34 25 34 35 36 |
| File Search Mode Folder Structure Formatting G Gain-up Mode Index Search Iris J Jog Playback L LCD Monitor Limited Warranty Low Light Mode M Macro Close-up Function Manual Focus Memory Card Memory Stop Function Menu Screen Microphone Mic | 40 36 52 41 25 30 24 25 30 25 34 25 34 25 35 36 |

| • N | |
|-----------------------------------|------|
| Negative Mode27, | 3 |
| P | |
| Palmcorder Accessory | . 6 |
| PhotoShot | |
| Picture-in-Picture Mode | . 2 |
| Playback Digital Effect Functions | |
| Playback Zoom | |
| Portrait Mode | . 24 |
| Program AE | .24 |
| Progressive PhotoShot | .2 |
| Ř | |
| Recording Check | .20 |
| Recording Pause Mode | |
| Recording Speed | |
| Remote Controller10, | |
| Review Playback | |
| S | |
| SD Memory Card | 52 |
| Self-Recording | |
| Sepia Mode27, | |
| Shutter Speed | |
| Slide Show | |
| Slow Motion Playback | |
| Solarization Mode27, | |
| Sound Volume | 29 |
| SP/LP Mode | |
| Sports Mode | |
| Spotlight Mode | 24 |
| Still Advance Playback | 30 |
| Strobe Mode27, | 32 |
| Sub-Code | 63 |
| Surf & Snow Mode | 24 |
| Swing Mode | 28 |
| T | |
| Time Code | 63 |
| Title | 39 |
| Trailing Effect Mode27, | 32 |
| U | |
| USB Connection Kit | 46 |
| V | |
| Variable Speed Search | 29 |
| Video Head Clogging | |
| Viewfinder | |
| T W | |
| Warranty | 72 |
| White Balance 26, | |
| Wind Noise Reduction | |
| Wipe Mode27, | |
| BZ | |
| Zoom21, | 20 |
| Zoom Microphone21, | |
| coom iviicroptione | 21 |

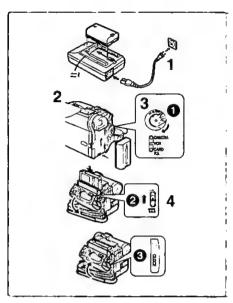


Spanish Quick Use Guide/Guía española para el uso rápido

Para iniciar


1 Carque la batería.

- Conecte el cable eléctrico de CA en el adaptador de CA y en la toma de corriente de CA.
- Coloque la batería con el adaptador de CA. (Eso hará empezar la carga).
- La batería estará cargada enteramente cuando se apague la luz de carga (CHARGE),.
- Como la batería no se carga cuando el cable de CC. está conectado con el adaptador de CA, desconéctelo.
- 2 Acople la batería cargada con la videocámara.
- 3 Active la videocámera.
 - Desplace el interruptor 1 a [ON]. (Se enciende la luz [CAMERA].)
- 4 Introduzca la cassette.
 - Lleve la palanca 2 a la derecha y tire hacia abajo para abrir la tapa.
 Introduzca la cassette.
 - Oprima (PUSH CLOSE) 3 para cargar la cassette.
 - Cierre la tapa del asiento inferior.

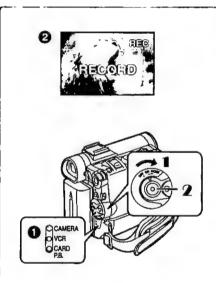


Para grabar

- Ajuste el [OFF/ON/MODE] y ponga a [ON].
 - Se enciende la luz [CAMERA].
- 2 Oprima el pulsador de Inicio/Parada para grabar.
 - Inicia la grabación.
 - Después de que esté visualizado [RECORD], cambia a [REC].

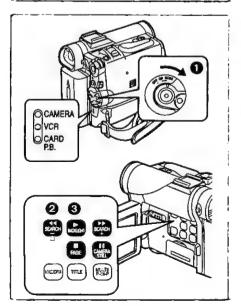

Para comprobar lo que ha sido grabado


- Active el modo VCR, rebobine la cinta, ponga la cinta en playback.
 - Desplace el interruptor 1. (Se enciende la luz [VCR].)
 - Oprima el pulsador para rebobinar 2.
 - Oprima el pulsador de actuación 3. (Empezará el playback)
- 2 Desactive la videocámara.
 - Lieve el interruptor 1 a [OFF].

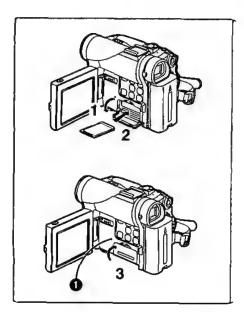


Para introducir una tarjeta de memoria.

Antes de introducir una tarjeta de memoria, asegúrese de que esté desactivada la videocámara.

- 1 Empuje la palanca [OPEN] hacia la derecha y abra el asiento de la tarjeta de memoria.
- 2 Manteniendo la tarjeta de memoria con su ángulo cortado hacia la derecha, introdúzcala en la ranura de tarjeta.
- 3 Cierre el asiento de la tarjeta.
- Mientras que está encendida la luz [ACCESS] 1. nunca trate de abrir el asiento de la tarjeta, ya que eso podría dañar la tarjeta y originar un funcionamiento defectuoso a la videocámara.

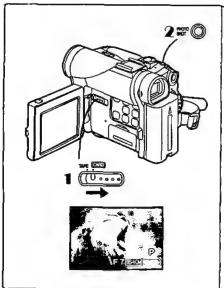

- Para grabar en una tarjeta de memoria.
- 1 Lleve el selector [TAPE/CARD] a [CARD].
- 2 Oprima el pulsador [PHOTO SHOT].

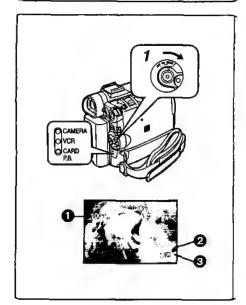

- Para reproducir la imagen en la tarjeta de memoria.
- 1 Ajuste la videocámara según el modo de playback de tarjeta.
 - •Se enciende la luz [CARD P.B].
- Nombre del fichero
- Dimensiones de la imagen
- 3 El número de la imagen

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America

Executive Office:

One Panasonic Way, Secaucus, NJ 07094 (201) 348-7000

Panasonic Company East: 6749 Baymeadow Drive, Glen Burnie, MD 21060 Panasonic Company Central: 1707 North Randall Road, Elgin, IL 60123 Panasonic Company West: 6550 Katella Avenue, Cypress, CA 90630

Division of Matsushita Electric Corporation of America

Panasonic Sales Company ("PSC")
Division of Matsushita Electric of Puerto Rico, Inc.
San Gabriel Industrial Park, Ave. 65 de Infanteria, Km. 9.5, Carolina, PR 00984

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, ON, L4W2T3



LSQT0559A F0202Nm0 (10500 (A))

Caméscope numérique Palmcorder" MultiCam

Panasonic'

Caméscope numérique Manuel d'utilisation



PV-DC152 PV-DC252 PV-DC152-K PV-DC252-K



MultiMediaCard™



MiniTN



il est recommandé de lire attentivement de manuel avant d'utiliser l'appareil.

"Pour de l'aide, composes le 1 900 565 3505 ou dates notre du fillement avenueur paraseur la ce

LSQT0559A

Renseignements

Merci d'avoir choisi Panasonic!

Vous avez acheté l'un des appareils les plus perfectionnés et les plus fiables actuellement sur le marché. Utilisé selon les directives, il vous apportera ainsi qu'à votre famille des années de plaisir. Veuillez prendre le temps de remplir la case cidessous. Le numéro de série se trouve sur l'étiquette située sur le dessous de votre caméscope. Conservez le présent manuel afin de pouvoir le consulter au besoin.

| Date d'achat | |
|--------------------------------|--|
| Vendeur | |
| Adresse du vendeur | |
| Numéro de téléphone du vendeur | |
| Numéro de modèle | |
| Numéro de série | |

Mesures de sécurité

Mise en garde: Afin de prévenir tout risque d'incendie ou de chocs électriques, éviter d'exposer cet appareil à la pluie ou à une humidité excessive.

Votre caméscope ""¡N" est conçu pour faire l'enregistrement et la lecture en modes standard (SP) et longue durée (LP).

Il est recommandé de n'utiliser que des cassettes portant la mention *** IX .

Attention:

Pour éviter un incendie, des chocs électriques ou de l'interférence, n'utiliser que les accessoires

recommandés.

Attention:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne

correspondante de la prise et pousser jusqu'au fond.

Mise en garde:

Afin de prévenir tout risque d'explosion, ne remplacer le bloc-batterie qu'avec un bloc-batterie

identique ou équivalent.



Attention: Afin de prévenir des risques de chocs électriques, ne pas retirer les vis. Toute réparation devrait être confiée à un personnel qualifié.



Le symbole de l'éclair dans un triangle équilatéral indique la présence d'une tension suffisamment élevée pour engendrer un risque de chocs électriques. Il est dangereux de toucher à une pièce interne de l'appareil.



Le point d'exclamation dans un triangle équilatéral indique que le manuel d'utilisation inclus avec l'appareil contient d'importantes recommandations quant au fonctionnement et à l'entretien de ce dernier. Il faut donc le lire attentivement afin d'éviter toute difficulté.

Les informations ci-dessus se trouvent sur le dessous de l'appareil.

 Comme cet appareil émet de la chaleur lors de son utilisation, le faire fonctionner dans un endroit bien aéré. Ne pas l'installer dans une bibliothèque ou sur des étagères à moins qu'une ventilation adéquate ne soit assurée.


Directives importantes

- Lire les instructions Les instructions concernant la sécurité et le fonctionnement de l'appareil doivent être lues avant l'utilisation.
- Conserver les instructions Le manuel d'utilisation devrait être conservé pour consultation ultérieure.
- Tenir compte des avertissements Tous les avertissements figurant sur l'appareil et dans le manuel d'utilisation doivent être respectés.
- Suivre les instructions Toutes les instructions de fonctionnement et d'entretien doivent être suivies.
- Nettoyage Débrancher l'appareil avant de le nettoyer.
 Ne pas utiliser de nettoyant liquide ou en aérosol.
 N'utiliser qu'un chiffon sec.
- Accessoires Ne pas utiliser d'accessoires qui ne sont pas recommandés par le fabricant, car cela pourrait être dangereux.
- Eau et humidité Ne pas utiliser cet appareil vidéo en présence d'eau, notamment près d'une baignoire ou d'un évier, dans un sous-sol humide ou près d'une piscine.
- 8) Accessoires Ne pas placer cet appareil sur un support instable. Il pourrait alors tomber et blesser gravement un enfant ou un adulte et être sérieusement endommagé. Ne placer l'appareil que sur un support recommandé par le fabricant ou vendu avec l'appareil. Le montage de l'appareil doit être effectué selon les directives du fabricant en utilisant les accessoires recommandés par ce dernier. Le chariot sur lequel
 - ce dernier. Le chariot sur lequel se trouve l'appareil doit être déplacé avec soin. Des arrêts brusques, l'utilisation d'une force excessive et des surfaces inégales peuvent entraîner la chute du chariot.



- 9) Ventilation Le boîtier de l'appareil comprend des ouvertures visant à assurer une bonne ventilation afin de garantir le fonctionnement fiable de l'appareil et de le protéger contre la surchauffe. Ces ouvertures ne doivent pas être bloquées. Ne jamais placer l'appareil sur un lit, un divan, un tapis ou une surface semblable, ni près d'un radiateur ou d'une source de chaleur. Cet appareil vidéo ne doit pas être placé dans une bibliothèque ou sur des étagères à moins qu'une ventilation suffisante ne soit assurée ou que les directives du fabricant ne soient respectées.
- 10) Alimentation Cet appareil vidéo doit être alimenté selon les indications figurant sur l'étiquette. Si la nature de l'alimentation est inconnue, consulter le vendeur de l'appareil ou la compagnie d'électricité. Pour les appareils fonctionnant à batterie ou alimentés par d'autres sources, consulter le manuel d'utilisation.
- 11) Mise à la terre ou polarisation Cet appareil vidéo peut être muni d'un fil d'alimentation comportant une fiche polarisée (à lames de largeur différente) ou une fiche avec lame de mise à la terre. La fiche polarisée ne peut être insérée dans la prise de courant que dans un sens. Il s'agit là d'une mesure de sécurité. S'il est impossible d'insérer la fiche complètement dans la prise, essayer de l'insérer dans l'autre sens. Si le branchement demeure impossible, communiquer avec un électricien pour remplacer la prise. Ne pas essayer d'insérer la fiche quand même.

- 12) Protection du fil d'alimentation Ne pas marcher sur le fil d'alimentation ou placer des objets dessus. Porter une attention particulière à la fiche, aux prises de courant de l'appareil et au point où le fil d'alimentation est rattaché à l'appareil.
- 13) Mise à la terre d'une antenne extérieure Si une antenne extérieure ou un câble de câblodistribution est branché à l'appareil vidéo, s'assurer de le mettre à la terre pour protéger l'appareil contre les pointes de tension et l'électricité statique. La partie 1 du Code canadien de l'électricité contient des renseignements sur les méthodes appropriées de mise à la terre du mât et de la structure de soutien, le branchement du fil d'entrée à un dispositif de mise à la terre de l'antenne, les dimensions des conducteurs de terre, l'emplacement du dispositif de mise à la terre de l'antenne, le raccordement à des électrodes de mise à la terre et les exigences relatives à ces électrodes.

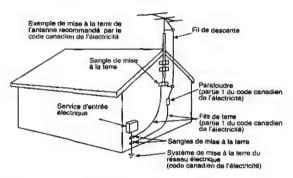

- 14) Orages Pour mieux protéger cet appareil vidéo pendant un orage, ou dans le cas où cet appareil ne sera pas utilisé pendant une longue période, le débrancher du secteur et débrancher le câble de l'antenne ou de la câblodistribution. L'appareil ne pourra ainsi être endommagé par un éclair ou des pointes de courant.
- 15) Lignes de transmission d'électricité L'antenne extérieure ne doit pas être située près de lignes de transmission d'électricité ou de circuits d'éclairage ou d'alimentation, ou à un endroit où elle pourrait tomber sur des lignes ou circuits. Au moment de l'installation de l'antenne extérieure, il faut s'assurer d'éviter tout contact avec ces lignes de transmission ou ces circuits, car cela pourrait causer une décharge électrique fatale.
- 16) Surcharge Éviter de surcharger les prises de courant et les rallonges, car cela pourrait causer un incendie ou des chocs électriques.
- 17) Objets et liquides Ne jamais insérer des objets dans cet appareil vidéo, car ils pourraient entrer en contact avec des pièces à haute tension ou court-circuiter des pièces et ainsi causer un incendie ou des chocs électriques. Ne jamais verser de liquide sur l'appareil.
- 18) Service après-vente Ne pas essayer de réparer cet appareil vidéo soi-même, car des pièces internes sont sous tension élevée. Confier l'appareil à des techniciens qualifiés.

Directives importantes

- 19) Réparation Débrancher l'appareil du secteur et le faire réparer par du personnel qualifié dans les cas suivants:
 - a. Le fil d'alimentation ou la fiche est endommagé.
 - b. Un liquide a été renversé sur l'appareil ou des objets y ont été insérés.
 - c. L'appareil a été exposé à la pluie ou à de l'eau.
 - d. L'appareil ne fonctionne pas normalement lorsque les directives sont respectées. Ne régler que les commandes mentionnées dans le manuel d'utilisation, car le réglage inadéquat d'autres commandes pourrait causer des dommages qui pourraient nécessiter des réparations importantes par un technicien qualifié.
 - e. L'appareil est tombé ou son boîtier a été endommagé,
 f. L'appareil fonctionne mal.
- 20) Pièces de rechange S'assurer que le technicien utilise les pièces de rechange recommandées par le fabricant ou dont les caractéristiques sont les mêmes. L'utilisation de pièces de rechange non autorisées peut causer un incendie, des chocs électriques ou d'autres dangers.
- 21) Vérification de sécurité Demander au technicien qui a réparé l'appareil de soumettre ce dernier à des vérifications pour s'assurer qu'il peut être utilisé en toute sécurité.

Précautions

Utilisation et emplacement

- Pour éviter les chocs électriques ... Le caméscope et son bloc d'alimentation ne doivent pas être exposés à la pluie ou à une humidité excessive. Ne pas brancher le bloc d'alimentation ou faire fonctionner le caméscope s'ils sont mouillés. Le caméscope a été conçu pour être utilisé à l'extérieur dans toutes les conditions météorologiques, mais il serait probablement endommagé, et ce de façon irrémédiable, par le contact direct avec l'eau, la pluie, la neige, la poussière, le sable, des éclaboussures d'une piscine ou même du café. Ne pas tenter de démonter l'appareil; il ne contient aucune pièce pouvant être réparée par l'utilisateur. Débrancher le caméscope du bloc d'alimentation avant de le nettoyer.
- Ne pas orienter le caméscope vers le soleil ou d'autres sources de lumière intense.
- Afin de prévenir tout dommage au viseur, ne pas laisser le caméscope avec le viseur orienté directement vers le soleil.
- Ne pas exposer le caméscope à des températures élevées pendant de longues périodes ... Ne pas l'exposer à la lumière directe du soleil, le laisser dans une voiture stationnée toutes vitres fermées, près d'un radiateur, etc. La chaleur pourrait endommager irrémédiablement les pièces internes du caméscope.
- Éviter les changements subits de température ... Si l'appareil est amené d'un endroit froid à un endroit chaud, de la condensation pourrait se former sur la bande magnétoscopique et à l'intérieur de l'appareil.
- Ne pas laisser le caméscope ou le bloc d'alimentation en marche lorsqu'il n'est pas utilisé.
- Rangement du caméscope ... Ranger et manipuler le caméscope de façon à éviter des mouvements inutiles (chocs et vibrations). Le caméscope est muni d'un dispositif sensible qui pourrait être endommagé par une manutention ou un rangement inadéquat.

Entretien

- Nettoyage ... Ne pas utiliser de détersif fort ou abrasif pour nettoyer le caméscope.
- Protection de l'objectif ... Ne pas toucher la surface de l'objectif. Utiliser un liquide et un papier de nettoyage pour caméscope pour nettoyer l'objectif. Un nettoyage inadéquat pourrait rayer la surface de l'objectif.
- Boîtier du caméscope ... Avant d'utiliser le caméscope, se laver le visage et les mains pour éviter que des produits chimiques tels que de la lotion de bronzage n'endommagent le fini de l'appareil.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du CANADA.

Cet appareil incorpore des lampes fluorescentes qui contiennent une faible quantité de mercure. Certains de ses composants contiennent aussi du plomb. L'élimination de ces matériaux peut faire l'objet de réglementation dans votre localité. Aussi, pour plus de détails sur les modes d'élimination ou de recyclage, est-il recommandé de communiquer avec les autorités locales.

ATTENTION: -



L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion/lithium-polymère. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

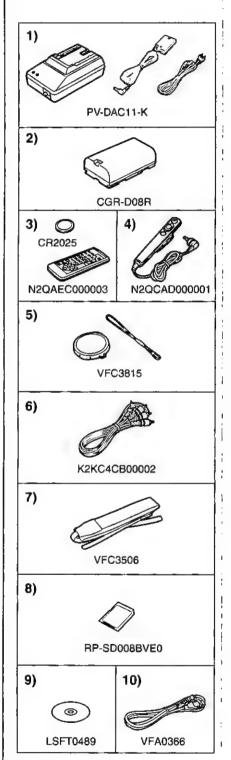

Préface

Remarques préliminaires

Le présent manuel s'applique aux modèles PV-DC152/PV-DC152-K et PV-DC252/PV-DC252-K. Les illustrations peuvent être quelque peu différentes des appareils en tant que tels.

- Les illustrations du présent manuel montrent le modèle PV-DC252 bien que les instructions aient trait à divers modèles.
- Certaines fonctions pourraient ne pas être disponibles sur certains modèles.
- Il est donc conseillé de lire attentivement les instructions.

Accessoires standard

À gauche, figurent les accessoires fournis avec le caméscope.

Adaptateur secteur, câble c.c. et câble c.a. (→ 12)
 Alimente le caméscope.


ATTENTION:

Ce caméscope peut fonctionner sur 110/120/220/240 V courant alternatif (c.a.). Un adaptateur secteur est disponible pour les tensions autres que 120 V c.a.. Contacter un distributeur d'articles électriques pour le choix d'une prise de courant (c.a.) alternative. Nous vous recommandons l'adaptateur accessoire de prise de courant (VJSS0070) pour les zones qui utilisent des prises c.a. spéciales.

- 2) Bloc-batterie (→ 12)
 - Alimente le caméscope.
- Télécommande et pile de type bouton (→ 10, 11)
- 4) Télécommande câblée
- 5) Capuchon d'objectif et cordon du capuchon d'objectif (→ 13)
- 6) Fil A/V (→ 33)
- 7) Bandoulière (→ 13)
- 8) Carte mémoire SD (→ 52) (PV-DC252/PV-DC252-K)
- 9) CD-ROM (PV-DC252/PV-DC252-K); Pilote USB pour caméscope numérique Panasonic (→ 46) Décodeur G726 (→ 44) Logiciel ArcSoft (→ 44, 45)

Microsoft^{MD} et Windows^{MD} sont des marques déposées de Microsoft aux États-Unis et dans les autres pays.

- Macintosh est une marque déposée de Apple Computer, Inc. 2001. ArcSoft, le logo ArcSoft, ArcSoft PhotoImpression 3.0, ArcSoft PhotoPrinter 2000 Pro, ArcSoft Photo Base 3.0 et ArcSoft Panorama Maker 3.0 sont des marques de commerce de ArcSoft, Inc.
- Tous les noms de produits et de marques sont des marques commerciales ou déposées de leur propriétaire respectif.
- ●Intel^{MD} Pentium^{MD} est une marque déposée.
- ●i.LINK et "i" sont des marques commerciales.
- IBM est une marque déposée de IBM Company.
- MultiMediaCard est une marque déposée.
- •SD est une marque commerciale.
- 10) Câble USB (→ 46) (PV-DC252/PV-DC252-K)

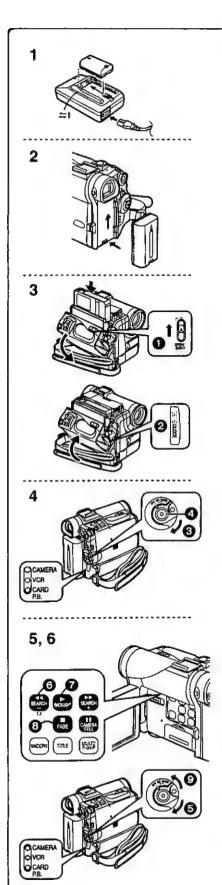

Guide sommaire

1 Recharge de la batterie. (→ 12)

- Insérer le câble c.a. dans l'adaptateur secteur et brancher la fiche dans la prise.
- Raccorder la batterie à l'adaptateur secteur. (Ceci activera le chargement.)
- Les voyants d'alimentation [POWER] et de charge [CHARGE] s'allument, puis la recharge s'amorce.
- •Lorsque le voyant de charge [CHARGE] s'éteint, la recharge est terminée
- Débrancher le câble c.c., puisque la batterie ne sera pas chargée s'il est branché à l'adaptateur secteur.

2 Fixer la batterie rechargée au caméscope. (→ 12)

3 Insérer la cassette. (→ 13)

- Glisser le bouton [OPEN/EJECT] ① vers le devant et le presser vers le bas pour ouvrir le couvercle du logement de la cassette.
- Introduire la cassette.
- Appuyer sur [PUSH CLOSE] 2 pour la charger.
- Refermer le couvercle.

4 Commencer l'enregistrement. (→ 20)

- Mettre le caméscope en marche. (→ 14)
- Régler l'interrupteur à [ON] 3. (Le voyant [CAMERA] s'allume.)
- Appuyer sur la touche 4. (L'enregistrement démarre.)
- Appuyer une nouvelle fois sur la touche 4 pour l'arrêt momentané de l'enregistrement.


Visionnement de l'enregistrement


5 Passer au mode magnétoscope, rebobiner la bande pour la lecture. (→ 29)


- Glisser l'interrupteur au mode magnétoscope.
 (Le voyant [VCR] s'allume.)
- Appuyer sur la touche 6. (Rebobinage)
- Appuyer sur la touche ?. (Lancement de la lecture)
- Appuyer sur la touche 3. (Arrêt de la lecture)


6 Éteindre le caméscope. (→ 14)

• Placer (9) l'interrupteur sur [OFF].

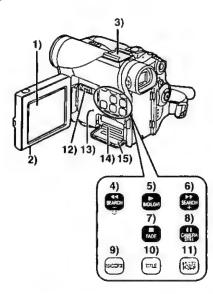

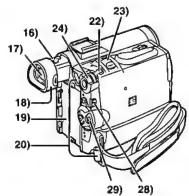

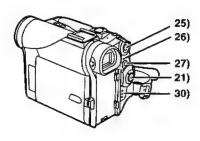

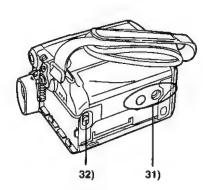

Nomenclature (Commandes et accessoires)

1) Écran à cristaux liquides (LCD) (→ 14)

La technologie de production de cristaux liquides ayant ses limites, il
peut y avoir de petites taches claires ou foncées sur l'écran à cristaux
liquides. Ceci ne constitue pas un mauvais fonctionnement et
n'affecte pas la qualité de l'image enregistrée.

 Loquet d'ouverture de l'écran à cristaux liquides [OPEN ▼] (→ 14, 62)

3) Porte-accessoires

 Des accessoires, tel qu'un micro stéréophonique (non fourni) peuvent être raccordés ici.

4) Touche de rebobinage/rétrospective [◄◄] (→ 29) Touche de recherche arrière [SEARCH—] (→ 20) Touche de contrôle de l'enregistrement [⇐] (→ 20)

Touche de lecture (Play) [►] (→ 29, 36, 38)
 Touche d'éclairage en contre-jour [BACKLIGHT] (→ 23)

Touche d'avance accélérée/repérage [►►] (→ 29)
 Touche de recherche en avant [SEARCH+] (→ 20)

7) Touche d'arrêt (STOP) [■] (→ 29, 36, 38) Touche de fondu [FADE] (→ 22)

Touche de pause [II] (→ 30, 36) Touche d'image fixe [CAMERA STILL] (→ 21)

9) Touche MAGICPIX [MAGICPIX] (→ 23)

10) Touche de titre [TITLE] (PV-DC252/PV-DC252-K) (→ 39)

11) Touche d'écran multiple [MULTI] (→ 28, 39) Touche d'image sur image [P-IN-P] (→ 28)

12) Sélecteur Cassette/Carte [TAPE/CARD] (PV-DC252/PV-DC252-K) (→ 34)

13) Voyant d'accès de la carte [ACCESS] (PV-DC252/PV-DC252-K) (→ 34)

14) Fente de la carte (PV-DC252/PV-DC252-K) (→ 34)

15) Couvercle de la fente de la carte (PV-DC252/PV-DC252-K) (→ 34)

16) Bouton de correction du viseur (→ 14)

17) Viseur (→ 14, 62)

La technologie de production de cristaux liquides ayant ses limites, il
peut y avoir de petites taches claires ou foncées sur l'écran du viseur.
 Ceci ne constitue pas un mauvais fonctionnement et n'affecte pas la
qualité de l'image enregistrée.

18) Oeilleton

19) Support de batterie (→ 12)

20) Supports de la bandoulière (→ 13)

Touche de marche/arrêt d'enregistrement (→ 20, 27, 28)

22) Touche PhotoShot [PHOTO SHOT] (→ 21, 34, 35)

23) Touche de zoom [W/T] (→ 21, 22)

24) Cadran multi-fonction [PUSH] (+ 15, 19, 25, 26, 29, 30)

25) Touche du menu [MENU] (→ 15)

26) Voyant d'enregistrement – activation rapide (→ 24)

27) Touche d'enregistrement – activation rapide [QUICK START] (+ 24)

28) Commutateur de sélection de mode marche/arrêt [AUTO/MANUAL/FOCUS] (→ 20, 24, 25, 26)


29) Commutateur de sélection de mode [OFF/ON/MODE]


30) Voyants du mode de fonctionnement [CAMERA/VCR/CARD P.B.] (PV-DC252/PV-DC252-K) (→ 14, 20, 29, 36)/[CAMERA/VCR] (PV-DC152/PV-DC152-K) (→ 14, 20, 29)


31) Emplacement pour fixation du trépied

Utilisé pour la fixation du caméscope sur un trépied en option.

32) Levier d'éjection de la batterie [BATT] (→ 12)

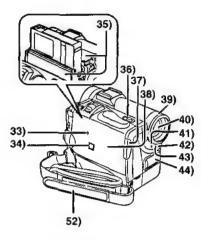

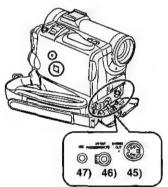

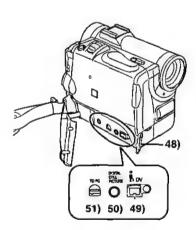


- 33) Touche de réinitialisation [RESET] (→ 66)
- 34) Haut-parleur
- 35) Support de la cassette
- 36) Bouton d'éjection de la cassette [OPEN/EJECT] (→ 13)
- 37) Touche de fermeture du couvercle de la cassette [PUSH CLOSE] (→ 13)
- 38) Couvercle du compartiment de la cassette (→ 13)
- 39) Parasoleil (→ 62)
- 40) Objectif
- 41) Voyant d'enregsitrement (→ 20)
- 42) Capteur d'équilibre du blanc (→ 26, 63)
- 43) Capteur de la télécommande (→ 11)
- 44) Microphone (incorporé, stéréo) (→ 21)
- 45) Prise de sortie S-Vidéo [S-VIDEO OUT] (→ 33) 46) Prise de sortie Audio-Vidéo [A/V OUT] (→ 33)
 - Prise de casque [PHONES]


Prise de la télécommande câblée [REMOTE]


- Le raccordement d'un câble AV ou de la télécommande câblée dans cette prise a pour effet de mettre le haut-parleur intégré en circuit. Par contre, le fait d'y brancher un casque d'écoute désactive le haut-parleur.
- Lors du raccordement du câble AV dans la prise de sortie AV, insérer la prise à fond.

47) Prise de microphone [MIC]

- Connecter à un microphone externe ou à un équipement audio.
 (Lorsque la prise est utilisée, le micro incorporé ne fonctionne pas.)
 (→ 21)
- 48) Fixation de la courrole de la poignée/fixation du cordon du capuchon de l'objectif (→ 13)
- 49) Prise d'entrée/sortie DV (i.LINK) [i] (→ 43)
 - Connecter à l'appareil vidéo numérique.
 - "i.LINK" désigne les connecteurs conformes à la norme IEEE1394-1995. "i," est le logo inscrit sur les produits conformes aux spécifications "i.LINK".
- 50) Prise d'image fixe numérique [DIGITAL STILL PICTURE]
- 51) Prise USB [TO PC] (PV-DC252/PV-DC252-K) (→ 46)
- 52) Courrole de la poignée (→ 13)

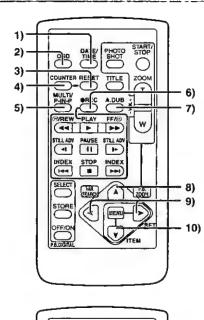

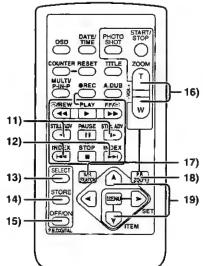

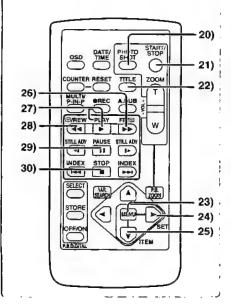

Télécommande

À l'aide de la télécommande sans fil, fournie avec le caméscope, il est possible de commander à distance la plupart des fonctions du caméscope.

Touches de la télécommande

- 1) Touche de date/heure [DATE/TIME] (→ 55)
- 2) Touche d'indication de sortie [OSD] (Affichage à l'écran) (→ 33)
- 3) Touche de réinitialisation du compteur [RESET] (→ 63)
- 4) Touche d'indication du compteur [COUNTER] (→ 55)
- 5) Touche d'écran multiple/image sur image [MULTI/P-IN-P] (→ 28, 36)
- 6) Touche d'enregistrement [REC] (→ 43)
- 7) Touche de doublage audio [A.DUB] (→ 33)
- Touche de direction vers le haut [▲] (pour fonction zoom de lecture)
 (→ 32)
- Touches de direction droite/gauche [◄, ▶] (pour fonction zoom de lecture) (→ 32)
- Touche de direction vers le bas [¥] (pour fonction zoom de lecture) (→ 32)
- Touches de mode ralenti/image fixe [◄, ►]
 (◄: direction vers l'arrière, ►: direction normale) (→ 30)
- 12) Touches de repérage par index [I◄◄, ▶►I] (I◄◄: direction vers l'arrière, ▶►I: direction normale) (→ 31)
- 13) Touche de sélection [SELECT] (→ 32)
- 14) Touche de mémoire [STORE] (→ 32)
- 15) Touche de marche/arrêt [OFF/ON] (→ 32)
- 16) Touche de zoom/volume [ZOOM/VOL] (→ 21, 22, 29, 32)
- 17) Touche de recherche à vitesse variable [VAR.SEARCH] (→ 29)
- 18) Touche de lecture zoom [P.B. ZOOM] (→ 32)
- 19) Touches de sélection de la vitesse [A, ▼] (pour la fonction de recherche à vitesse variable) (→ 29)

Les touches suivantes fonctionnent de la même manière que les touches correspondantes du caméscope.

- 20) Touche PhotoShot [PHOTO SHOT] (→ 21, 34)
- 21) Touche de marche/arrêt d'enregistrement [START/STOP] (→ 20)
- 22) Touche de titre [TITLE] (→ 39)
- 23) Touche de menu [MENU] (→ 15)
- 24) Touche de réglage d'une rubrique [SET] (→ 15)
- 25) Touche de sélection d'une rubrique [ITEM] (→ 15)
- 26) Touche d'avance accélérée/repérage [►►] (→ 29)
- 27) Touche de lecture (PLAY) [▶] (→ 29, 36)
- 28) Touche de rebobinage/rétrospective [◄◄] (→ 29)
- 29) Touche de pause [11] (→ 30, 36)
- 30) Touche d'arrêt (STOP) [■] (→ 29, 36)


Télécommande câblée


Cette unité de commande permet des prises de vue sous différents angles ; elle est également utile lorsque le caméscope est monté sur un trépied. Lorsque cette télécommande n'est pas utilisée, en fixer l'attache à la courroie de la poignée.


Il est à noter que la télécommande facilite l'utilisation du caméscope par les gauchers.

- Lors de l'utilisation de la télécommande câblée, s'assurer de la brancher à fond.
- Touche d'enregistrement [●]
- 2 Touche du zoom [W/T]
- 3 Touche photo [PHOTO SHOT]

Lorsque détachée du caméscope, la courroie de la poignée peut être enroulée autour du poignet comme le montre l'illustration à droite.

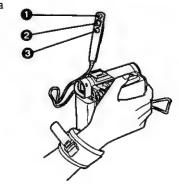

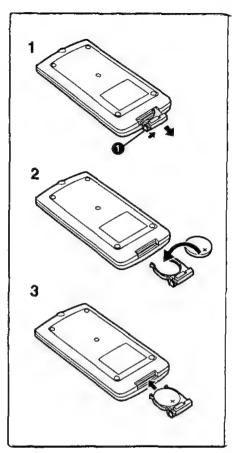

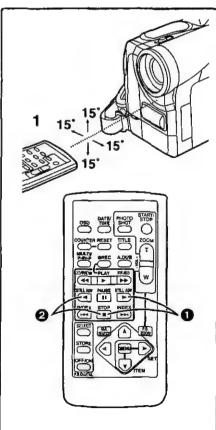

Mise en place d'une pile de type bouton

Avant d'utiliser la télécommande, mettre en place la pile de type bouton fournie.

- 1 Tout en appuyant sur le butoir 1, retirer le support de la pile.
- 2 Installer la pile de type bouton en dirigeant sa face (+) vers le haut.
- 3 Remettre le support de la pile dans la télécommande.
- Lorsque la pile de type bouton est faible, la remplacer avec une nouvelle pile modèle CR2025. (Une pile dure en moyenne environ un an. Cela dépend toutefois de la fréquence de son utilisation.)
- Lors de la mise en place de la pile, s'assurer de bien respecter les pôles.

Avertissement

Danger d'explosion si la pile est remplacée de façon incorrecte. Remplacer uniquement par le même type ou équivalent recommandé par le fabricant. Se débarrasser des piles usagées selon les instructions du fabricant.

Risque d'incendie, d'explosion et de brûlures. Ne pas la recharger, démonter, la chauffer au-delà de 100°C (212°F) ou la jeter dans le feu. Tenir la pile de type bouton hors de la portée des enfants. Ne jamais mettre une pile de type bouton dans la bouche. Si elle était avalée, consulter immédiatement un médecin.

N'utiliser qu'une pile de rechange Panasonic (pièce numéro VSBW0004 (CR2025)). L'utilisation d'une autre pile peut entraîner un risque d'incendie ou d'explosion.

Attention - La pile risque d'exploser si elle n'est pas manipulée avec précaution. Disposer promptement de toute pile usagée. Garder hors de la portée des enfants. Ne pas la recharger, la démonter ou la jeter au feu.

En utilisant la télécommande

- Diriger la télécommande vers le capteur de télécommande du caméscope et appuyer sur une touche adéquate.
 - Distance du caméscope: Environ 5 mètres (15 pieds)
 - Angle: Approximativement 15 degrés dans les positions verticales et horizontales à partir de l'axe central
- Les paramètres de fonctionnement donnés ci-dessus sont pour l'intérieur.
 À l'extérieur ou sous une forte luminosité, l'appareil peut ne pas fonctionner correctement même dans les paramètres indiqués ci-dessus.
- À 1 mètre (3 pieds) de distance, il est possible d'utiliser la télécommande sur le côté (côté de l'écran à cristaux liquides) du caméscope.

Sélection des modes de la télécommande

Lorsque 2 caméscopes sont utilisés simultanément, ils peuvent être manipulés individuellement en sélectionnant les différents modes de la télécommande.

 Si le mode télécommande du caméscope et celui de la télécommande ne correspondent pas, [REMOTE] s'affiche.


Réglage du caméscope:

Régler (REMOTE) du sous-menu (OTHER FUNCTIONS) sur le mode télécommande désiré.

Réglage sur la télécommande:

[VCR1]: Appuyer sur la touche [▶] et sur la touche [■] en même temps. [VCR2]: Appuyer sur la touche [◄] et sur la touche [■] en même temps. ②


 Lorsque la pile est remplacée dans la télécommande, le mode est automatiquement rétablit en mode [VCR1].

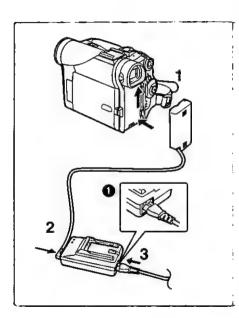

Source d'alimentation

Utilisation de l'adaptateur secteur

- 1 Mettre dans le support de batterie du caméscope le câble c.c. en forme de batterie.
- 2 Brancher à la prise [DC OUT] de l'adaptateur secteur la fiche du connecteur munie du câble c.c..
- 3 Brancher l'adaptateur secteur et câble c.a..
- La fiche du câble d'alimentation secteur ne peut être insérée à fond dans la prise de l'adaptateur secteur. Un jeu demeure comme le montre la vue détaillée .
- Avant de débrancher la source d'alimentation, placer le commutateur [OFF/ON/MODE] du caméscope sur [OFF].
- La recharge n'est pas possible si le cordon c.c. est branché dans l'adaptateur secteur.

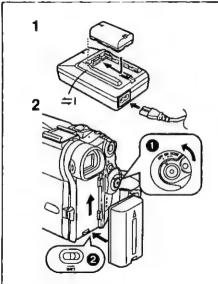

Utilisation de la batterie

Recharger complètement la batterie avant de l'utiliser.

- 1 Fixer la batterie à l'adaptateur secteur et la recharger.
 - Débrancher le câble c.c., puisque la batterie ne sera pas chargée s'il est branché à l'adaptateur secteur.
 - Les voyants d'alimentation [POWER] et de charge [CHARGE] s'allument, puis la recharge s'amorce.
 - •Lorsque le voyant [CHARGE] s'éteint, la recharge est terminée.
- 2 Fixer la batterie rechargée au caméscope.

Débranchement de la source d'alimentation


Régler le commutateur [OFF/ON/MODE] ① sur [OFF], glisser le levier d'éjection de la batterie [BATT] vers la droite ②, puis faire glisser la batterie pour la retirer de son logement.

- Lors de la mise en place ou du retrait de la batterie, régler le commutateur [OFF/ON/MODE] à [OFF] et s'assurer que le voyant du mode de fonctionnement est éteint.
- Pour d'autres notes, voir à la page 56.

| CGR-D08A/18 | A | 1 h |
|-------------|-----|------------------------------|
| | B | 2 h 10 min (1 h 35 min) |
| CGR-D16A/1B | A | 2 h |
| | B | 4 h 20 min (3 h 10 min) |
| CGP-D28A/1B | A | 3 h 15 min |
| | B | 7 h 40 min (5 h 35 min) |
| CGR-D53A/1K | (A) | 5 h 20 min |
| | B | 14 h 10 min (10 h 25 min) |

Temps de recharge et autonomie d'enregistrement

- (A) Temps de recharge
- (B) Temps d'enregistrement continu maximum
- "1 h 20 min" indique 1 heure et 20 minutes.
- La batterie CGR-D08R est fournie.
- Les heures indiquées dans le tableau sont les durées approximatives. Les chiffres entre parenthèses indiquent la durée de l'enregistrement lorsque l'écran à cristaux liquides est utilisé. Dans le mode d'utilisation actuel, la durée d'enregistrement disponible peut dans certains cas être plus courte.
- Les heures indiquées dans le tableau correspondent à un enregistrement continu à une température de 20°C (68°F) et à une humidité de 60%. Si la batterie est rechargée à une température plus élevée ou plus basse, le temps de recharge peut-être plus long.

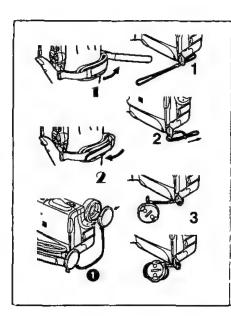

Capuchon de l'objectif et courroie de la poignée

Fixer le capuchon

Pour protéger la surface de l'objectif, fixer le capuchon.


1 Faire passer le cordon du capuchon de l'objectif dans la fixation.

- 2 Faire passer l'autre extrémité du cordon dans la boucle formée par le cordon et la tirer dans le sens de la flèche.
- 3 Attacher le capuchon de l'objectif au cordon.
- Lorsqu'il est retiré, le capuchon de l'objectif peut être fixé sur la courroie de la poignée 1. (Lorsque vous n'enregistrez pas, veiller à ce que le capuchon de l'objectif soit fixé à l'objectif pour le protéger.)

Ajustement de la courroie de la poignée

Ajuster la courroie à votre main.


- 1 Détacher la pointe de la courroie et en ajuster la longueur.
- 2 Rattacher la courroie.

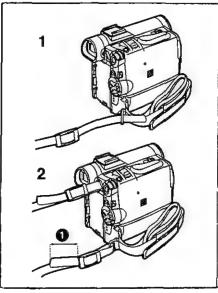

Fixation de la bandoulière

Il est conseillé de fixer la bandoulière avant de sortir à l'extérieur pour éviter de faire tomber le caméscope.

- 1 Enfiler l'extrémité de la bandoulière dans le support de la bandoulière situé sur le caméscope et tirer la bandoulière.
- 2 Rabattre l'extrémité de la bandoulière, l'enfiler dans la sangle de réglage de la longueur et tirer.
 - La tirer à plus de 2 cm (1 po) ① de la sangle de réglage de longueur de la bandoulière de façon à ce qu'elle ne puisse pas glisser.

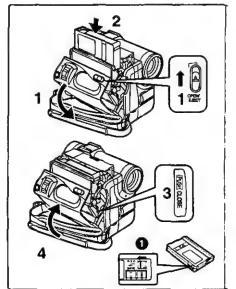


Mise en place d'une cassette


Lorsque le caméscope est sous tension, la cassette peut être retirée sans mettre le caméscope en marche.


- 1 Glisser le bouton d'éjection de la cassette [OPEN/EJECT] vers le devant et appuyer vers le bas pour ouvrir le logement de la cassette.
- 2 Introduire une cassette.
- 3 Refermer le compartiment de la cassette en appuyant sur l'indication [PUSH CLOSE].
- 4 Fermer le couvercle du compartiment inférieur de la cassette.
- Pour d'autres notes, voir à la page 56.


Prévention d'effacements accidentels

Ouvrir la languette de protection anti-effacement accidentel ① sur la cassette (en la glissant dans la direction de la flèche [SAVE]) pour empêcher tout enregistrement. Pour permettre l'enregistrement, fermer la languette de protection (en la faisant glisser dans la direction de la flèche [REC]).

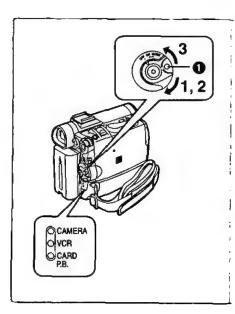



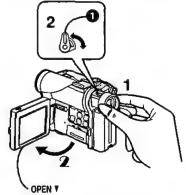





Mise en marche/arrêt du caméscope et sélection des modes

Mettre sous tension d'abord et sélectionner les modes ensuite.

- Comment mettre le caméscope en marche
- 1 Régler le commutateur [OFF/ON/MODE] sur [ON] tout en appuyant sur la touche centrale 1.
 - Le voyant [CAMERA] s'allume.
- Comment passer d'un mode à l'autre
- 2 Tourner le commutateur [OFF/ON/MODE].
 - Chaque fois que le commutateur est déplacé, le mode passe successivement du mode caméra en mode magnétoscope et en mode carte mémoire. (PV-DC252/PV-DC252-K)
 - •Le voyant adéquat s'allume.
- Comment mettre en arrêt
- 3 Régler le commutateur [OFF/ON/MODE] sur [OFF] tout en appuyant sur la touche centrale 1.

Utilisation du viseur

Avant d'utiliser le viseur, régler le champ de vision de façon à ce que les indications dans le viseur soient claires et faciles à lire.

- Extraire le viseur.
- 2 Effectuer le réglage en tournant le bouton de correction du viseur 1.

Utilisation de l'écran à cristaux liquides

Lorsque l'écran à cristaux liquides est ouvert, il est également possible d'enregistrer l'image tout en la regardant.

- 1 Régler le commutateur [OFF/ON/MODE] sur [ON].
- 2 Appuyer sur le loquet d'ouverture [OPEN] et sortir l'écran à cristaux liquides à environ 90° dans le sens de la flèche.

 •Le viseur s'éteint.
- 3 Régler l'angle de l'écran à cristaux liquides selon l'angle d'enregistrement souhaité.
 - L'écran à cristaux liquides peut pivoter jusqu'à 180° max. ② à partir de la position verticale vers une direction orientée vers le haut et jusqu'à 90° max. ③ dans une direction orientée vers le bas. Faire pivoter l'écran à cristaux liquides au-delà de ces limites endommagera le caméscope.

Refermer l'écran à cristaux liquides

Appuyer sur l'écran jusqu'à ce qu'il soit parfaitement verrouillé.

Niveau de la luminosité et de la couleur

Lorsque la rubrique [LCD/EVF SET] du sous-menu [DISPLAY SETUP] est réglée sur [YES], les indications suivantes sont affichées: Luminosité DCL [LCD BRIGHTNESS]

Règle la luminosité de l'image sur l'écran à cristaux liquides.

Niveau de la couleur DCL [LCD COLOR LEVEL]


Règle la saturation de la couleur de l'image sur l'écran à cristaux liquides. Luminosité du viseur [EVF BRIGHTNESS]

Règle la luminosité de l'image sur le viseur.

- Appuyer sur le cadran [PUSH] et sélectionner la rubrique à mettre au point.
- 2 Tourner le cadran [PUSH] et augmenter ou diminuer le nombre de barres verticales qui figurent sur la barre d'indication.
 - La barre d'indication contient 8 échelons. Un nombre supérieur de barres indique une luminosité plus forte ou la saturation de la couleur.

Augmentation de la luminosité sur l'écran à cristaux liquides en entier Régler la rubrique [LCD MODE] du sous-menu [DISPLAY SETUP] sur [BRIGHT].


- Ces réglages n'affectent en rien les images de l'enregistrement.
- Pour d'autres notes, voir à la page 62.

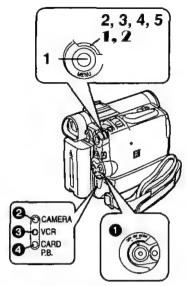








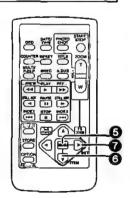



Utilisation du menu

Pour faciliter la sélection d'une fonction ou d'un réglage désirés, ce caméscope affiche différentes fonctions de réglage sur les menus.

- 1 Appuyer sur la touche [MENU].
 - Le menu correspondant au mode sélectionné avec le commutateur de mode [OFF/ON/MODE] î s'affiche.
 - Lorsque le voyant [CAMERA] est allumé, le menu caméra est affiché.
 - Lorsque le voyant [VCR] est allumé, le menu magnétoscope est affiché.
 - Lorsque le voyant [CARD P.B.] est allumé, le menu carte est affiché.
 (PV-DC252/PV-DC252-K)
- 2 Tourner le cadran [PUSH] pour sélectionner un sous-menu désiré.
 - Tourner le cadran [PUSH] pour afficher les rubriques sélectionnées.
- 3 Appuyer sur le cadran [PUSH] pour afficher le sous-menu sélectionné.
- 4 Tourner le cadran [PUSH] pour sélectionner la rubrique qui doit être réglée.
- 5 Appuyer sur le cadran [PUSH] pour régler la rubrique sélectionnée dans le mode désiré.
 - ◆ Sur chaque pression du cadran [PUSH], le curseur [▶] s'aligne sur le mode subséquent. Les rubriques du menu qui ne peuvent pas être utilisées en association avec la rubrique sélectionnée sont affichées en bleu foncé.
- Lorsqu'un menu est affiché, l'enregistrement et la lecture ne sont pas possibles. Les menus peuvent être affichés pendant la lecture mais pas pendant l'enregistrement.
- Ces opérations peuvent être effectuées à partir de la télécommande.
 (→ 10)
 - Pour afficher le menu, appuyer sur la touche [MENU] de la télécommande.
 - Pour sélectionner les rubriques sur le menu, appuyer sur la touche [ITEM] (i) de la télécommande.

Pour quitter le menu

Appuyer sur la touche [MENU] une nouvelle fois.

À propos du réglage du menu

Le réglage sélectionné sur le menu sera maintenu même lorsque le caméscope sera éteint. Cependant, si la batterie ou l'adaptateur secteur sont débranchés avant la coupure du contact du caméscope, le réglage sélectionné peut ne pas être maintenu.


(Mais le paramétrage du mode [EFFECT2] (→ 27) n'est pas maintenu.)

•Le défilement des menus est indiqué avec les flèches (>>).

Sélection de fichier dans le mode lecture de la carte (PV-DC252/PV-DC252-K)

Il pourrait être nécessaire de procéder à une sélection de fichiers lors de l'utilisation du menu. Pour ce faire, procéder comme suit:

- Tourner le cadran [PUSH], puis sélectionner un fichier.
 Le fichier sélectionné est identifié par un cadre 3.
- 2 Appuyer sur le cadran [PUSH] pour confirmer la sélection du fichier.
- Une fois le fichier sélectionné, procéder aux opérations voulues dans le menu. (La marche à suivre décrite ici ne sera pas répétée dans les instructions décrites plus avant dans le présent manuel.)

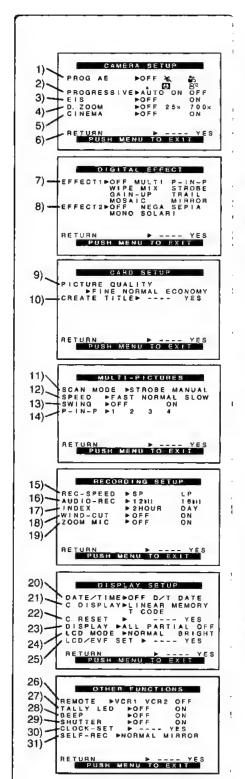

Liste des menus

Les illustrations des menus sont données à titre d'explication uniquement et sont différentes des menus actuels.

Menu principal du mode caméra [CAMERA FUNCTIONS]

Sous-menu [CAMERA SETUP]

- 1) Mode d'exposition automatique [PROG.AE] (→ 24)
- Mode PhotoShot progressif [PROGRESSIVE] (→ 21)
- 3) Stabilisateur électronumérique d'image [EIS] (→ 22)
- 4) Zoom numérique [D.ZOOM] (→ 22)
- 5) Enregistrement au format cinématographique [CINEMA] (→ 23)
- 6) Retour au menu principal [RETURN]

Sous-menu [DIGITAL EFFECT]

- 7) Effets numériques 1 [EFFECT1] (→ 27)
- 8) Effets numériques 2 [EFFECT2] (→ 27)

Sous-menu [CARD SETUP] (PV-DC252/PV-DC252-K)

- 9) Qualité de l'image [PICTURE QUALITY] (→ 35)
- 10) Création d'un titre [CREATE TITLE] (→ 39)

Sous-menu [MULTI-PICTURES]

- 11) Mode d'écran multiple [SCAN MODE] (→ 28)
- 12) Vitesse d'écran multiple stroboscopique [SPEED] (→ 28)
- 13) Oscillation [SWING] (→ 28)
- 14) Position d'une petite image à l'intérieur d'un ficher normale [P-IN-P] (→ 28)

Sous-menu [RECORDING SETUP]


- 15) Mode vitesse d'enregistrement [REC-SPEED] (→ 19)
- 16) Mode enregistrement audio (AUDIO-REC) (→ 19, 33)
- 17) Mode index [INDEX] (→ 31)
- 18) Atténuation bruit du vent [WIND-CUT] (→ 24)
 - Si cette fonction est réglée sur [ON], le bruit du vent qui bat sur le micro peut être réduit lors de l'enregistrement.
- 19) Microphone zoom [ZOOM MIC] (→ 21)

Sous-menu [DISPLAY SETUP]

- 20) Indication de la date et de l'heure [DATE/TIME] (→ 55)
- 21) Mode affichage compteur [C.DISPLAY] (→ 55)
- 22) Réinitialisation du compteur [C.RESET] (→ 63)
 - Il met le compteur à zéro. Il ne peut cependant pas réinitialiser le code de l'heure.
- 23) Mode affichage [DISPLAY] (→ 55)
- 24) Mode luminosité de l'écran DCL [LCD MODE] (→ 14)
- 25) Réglage écran/viseur [LCD/EVF SET] (→ 14)

Sous-menu [OTHER FUNCTIONS]

- 26) Mode télécommande [REMOTE] (+ 11)
- 27) Voyant d'enregistrement [TALLY LED] (→ 20)
- 28) Bip sonore [BEEP] (→ 56)
- 29) Obturateur [SHUTTER] (→ 21)
- 30) Réglage de la date et de l'heure [CLOCK-SET] (→ 19)
- 31) Enregistrement automatique [SELF-REC] (→ 20)

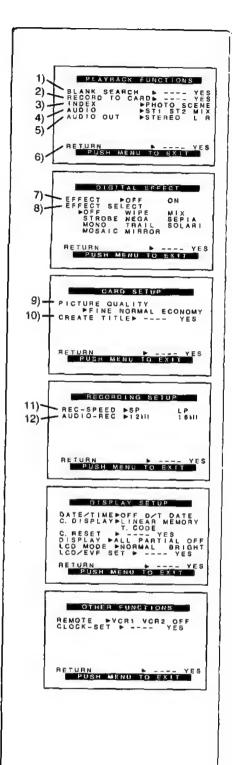

Menu principal du mode magnétoscope [VCR FUNCTIONS] Sous-menu [PLAYBACK FUNCTIONS]

- 1) Recherche des blancs [BLANK SEARCH] (→ 30)
- 2) Enregistrement sur carte [RECORD TO CARD] (PV-DC252/PV-DC252-K) (→ 35)
- 3) Mode recherche index [INDEX] (→ 31)
- 4) Sélecteur audio [AUDIO] (→ 33)
- 5) Mode sortie audio [AUDIO OUT] (→ 58)
- 6) Retour au menu principal [RETURN]

Sous-menu [DIGITAL EFFECT]

- 7) Effet numérique marche/arrêt (On/Off) [EFFECT] (+ 32)
- 8) Sélection effet numérique [EFFECT SELECT] (+ 32)

Sous-menu [CARD SETUP] (PV-DC252/PV-DC252-K)

- 9) Qualité d'image [PICTURE QUALITY] (→ 35)
- 10) Création d'un titre [CREATE TITLE] (→ 39)

Sous-menu [RECORDING SETUP]

- 11) Mode vitesse d'enregistrement [REC-SPEED] (→ 19)
- 12) Mode enregistrement audio [AUDIO-REC] (→ 19, 33)

Sous-menu [DISPLAY SETUP]

Comme décrit à la page 16.


Sous-menu [OTHER FUNCTIONS]


Comme décrit à la page 16.









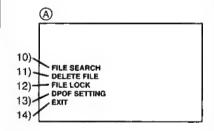

Menu principal du mode lecture de carte [CARD FUNCTIONS] (PV-DC252/PV-DC252-K)

Sous-menu [DELETE CARD FILE]

- Sélection et effacement d'un fichier [DELETE FILE BY SELECTION]
 (→ 40)
- 2) Effacement de toutes les images [DELETE ALL FILES] (→ 40)
- Sélection et effacement d'un titre [DELETE TITLE BY SELECTION]
 (→ 40)

Sous-menu (CARD EDITING)

- 4) Enregistrement sur cassette [RECORD TO TAPE] (→ 37)
- Recherche d'un ficher [FILE SEARCH] (→ 36)
- 6) Réglage du verrouillage [FILE LOCK] (→ 40)
- 7) Réglage d'un diaporama [SLIDE SHOW] (→ 38)
- 8) Réglage DPOF [DPOF SETTING] (→ 41)
- 9) Formatage d'une carte [CARD FORMAT] (→ 41)

Sous-menu [DISPLAY SETUP]

•Comme décrit à la page 16.

Sous-menu [OTHER FUNCTIONS]

Comme décrit à la page 16.

Menu d'accès rapide au mode de lecture de carte (PV-DC252/PV-DC252-K) (A)

En utilisant ce menu d'accès rapide, le menu du mode lecture de carte peut être reproduit instantanément. En appuyant sur le cadran [PUSH], le menu d'accès rapide sera appelé. Tourner le cadran [PUSH] et sélectionner le menu de votre choix.

10) [FILE SEARCH]:

Le menu [FILE SEARCH] est destiné à la recherche de fichier par son numéro. (→ 36)

11) [DELETE FILE]:

Le menu d'effacement [DELETE FILE] du fichier affiché apparaît à l'écran. (→ 40) Utiliser ce menu après l'affichage du fichier devant être effacé.

12) (FILE LOCK):


Le menu [FILE LOCK] est destiné à prévenir l'effacement accidentel d'une image affichée (Verrouillage de fichier). (→ 40) Utiliser ce menu seulement lorsque l'image à être verrouillée est affichée.


13) [DPOF SETTING]:


Le menu [DPOF SETTING] est destiné au réglage DPOF d'une image déterminée. (→ 41) Utiliser ce menu après que l'image pour réglage DPOF s'affiche.

14) [EXIT]:

Pour sortir du menu d'accès rapide,

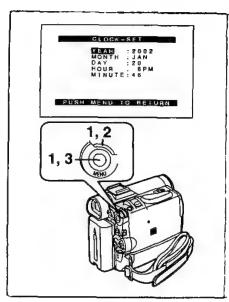

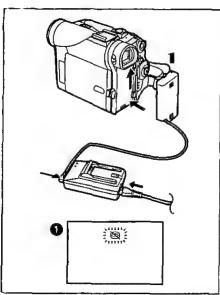

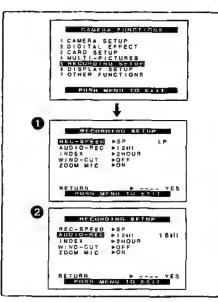

Réglage de la date et de l'heure

- 1 Appuyer sur la touche [MENU] et tourner le cadran [PUSH] pour sélectionner [OTHER FUNCTIONS] >> [CLOCK-SET] >> [YES].
- 2 Tourner et appuyer sur le cadran [PUSH] pour sélectionner [YEAR]/[MONTH]/[DAY]/[HOUR]/[MINUTE] et insérer les valeurs désirées.
 - L'année défilera dans l'ordre indiqué ci-dessous.
 2000→ 2001→ ...→ 2089→ 2000→ ...
- 3 Appuyer sur la touche [MENU] pour terminer le réglage de la date et de l'heure.
 - L'horloge commence à [00] secondes.
 - Le menu disparaîtra lorsque la touche [MENU] sera pressée une nouvelle fois.
- Il est possible que l'horloge du caméscope se dérègle, par conséquent s'assurer de l'heure avant l'enregistrement. Si l'indication [
) clignote, recharger la pile au lithium et régler à nouveau l'heure et la date.

Recharge de la pile incorporée au lithium

La pile incorporée au lithium assure le fonctionnement de l'horloge. Si l'indication [😂] 🜒 apparaît, la pile incorporée au lithium est presque épuisée.

- Brancher l'adaptateur secteur au caméscope hors contact, puis brancher à la prise c.a..
 - Après une recharge de 4 heures, la pile incorporée au lithium devrait pouvoir assurer le fonctionnement de l'horloge pendant environ 3 mois.

Mode longue durée (LP)

La vitesse d'enregistrement désirée peut être sélectionnée avec [REC-SPEED] à partir du sous-menu [RECORDING SETUP].

Si le mode longue durée est sélectionné, le temps d'enregistrement sera 1 fois ½ plus long que pour le mode courte durée (SP). Bien que la qualité de l'image ne diminue pas en mode enregistrement longue durée (LP), des parasites de type mosaïque peuvent apparaître lors de la lecture de l'image ou peut restreindre certaines fonctions standard.

- Les contenus qui sont enregistrés en mode LP ne sont pas forcément compatibles avec d'autres équipements.
- Le doublage audio est impossible en mode longue durée (LP). (→ 33)

Mode enregistrement audio

La qualité du son enregistré peut être sélectionnée avec [AUDIO-REC] à partir du sous-menu [RECORDING SETUP]. 2

Un enregistrement de haute qualité sonore est possible en mode "16bit 48kHz 2 pistes". En mode "12bit 32kHz 4 pistes", le son original peut être enregistré sur 2 pistes en stéréo tandis que les 2 autres pistes peuvent être utilisées pour ré-enregistrer.

CAMERA O VCR O CARD 2 (U...) 0

7000

m

Mode caméra

Enregistrement

- 1 Régler le commutateur [OFF/ON/MODE] sur [ON].
 - •Le voyant [CAMERA] s'allume.
- 2 Glisser le sélecteur [TAPE/CARD] dans la direction [TAPE]. (PV-DC252/PV-DC252-K)
- 3 Appuyer sur la touche d'enregistrement.
 - Démarrage de l'enregistrement.
 - Après que [RECORD] ait été affiché, il passe sur [REC]. 2
 - Le voyant d'enregistrement 3 s'allume pendant l'enregistrement et avertit que l'enregistrement se poursuit. Le voyant d'enregistrement ne s'allume pas si [TALLY LED] du sous-menu [OTHER FUNCTIONS] est sur [OFF].
- 4 Pour interrompre momentanément l'enregistrement, appuyer à nouveau sur la touche d'enregistrement.
 - [PAUSE] s'affiche. 4
- Si le mode pause d'enregistrement est activé pendant plus de 5 minutes, l'alimentation est coupée automatiquement pour préserver la cassette et pour économiser l'énergie. Pour reprendre l'enregistrement, établir le contact à nouveau sur le caméscope.
- Pendant l'enregistrement, lorsque le commutateur de sélecteur de mode est réglé sur [AUTO] ⑤, le caméscope règle la mise au point et l'équilibre du blanc automatiquement. (Dans certains cas, ils ne peuvent pas être réglés automatiquement mais uniquement manuellement.) (→ 25, 26)

Vérification de l'enregistrement

En appuyant sur la touche [a la scène enregistrement, il est possible de visionner quelques secondes de la scène enregistrée.

- [CHK] s'affiche. Après vérification, le caméscope se remet en mode pause d'enregistrement.
- Visionnement de la scène enregistrée lorsque l'enregistrement est en pause (Recherche caméra)

La scène enregistrée peut être visionnée en appuyant sur la touche [SEARCH-] 6 ou [SEARCH+] 7 en mode pause d'enregistrement. La fonction recherche caméra est utilisée pour repérer le point de départ d'une nouvelle scène afin de créer une transition douce entre deux scènes.

- Lorsqu'on appuie sur la touche [SEARCH-], les images sont lues dans la direction opposée.
- Lorsqu'on appuie sur la touche [SEARCH+], les images sont lues vers l'avant.

Enregistrement automatique


En ouvrant l'écran à cristaux liquides et en le tournant de face (du côté de l'objectif), il est possible de laisser le sujet devant l'écran du caméscope pendant que le tournage progresse.


- Lorsque l'écran à cristaux liquides est ouvert, le viseur est automatiquement désactivé. Cependant, lorsque l'écran à cristaux liquides est tourné devant, il est également possible de voir l'image dans le viseur.
- Si vous préférez avoir l'image sur l'écran à cristaux liquides comme une image dans un miroir, régler [SELF-REC] à partir du sous-menu [OTHER FUNCTIONS] sur [MIRROR] (mode miroir).
 Les images sont enregistrées normalement et aucune inversion gauche ou droite ne se produit.
- Si [MIRROR] est sélectionné seules les indications pour l'enregistrement
 [♠], la pause [♠II], carte PhotoShot [☐] (PV-DC252/PV-DC252-K) et le temps de batterie restant [☑☑] s'affichent ⑥.
- Lorsqu'une indication avertissement/alarme générale [1]] apparaît, faire revenir l'écran à cristaux liquides à la position initiale de façon à vérifier les indications spécifiques d'avertissement/alarme.

Pour terminer l'enregistrement

Régler le commutateur [OFF/ON/MODE] sur [OFF].

◆Pour d'autres notes, voir à la page 56.

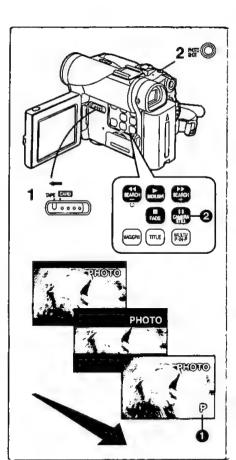

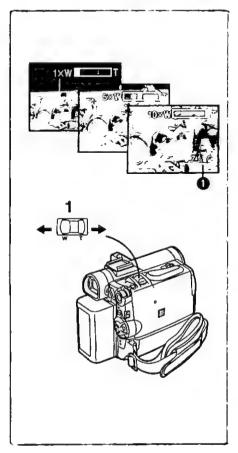

Enregistrement PhotoShot sur la cassette DV

Ce caméscope peut prendre environ 7 secondes chacune d'images fixes sonores

- Régler le sélecteur [TAPE/CARD] sur [TAPE]. (PV-DC252/PV-DC252-K)
- 2 Appuyer sur la touche [PHOTO SHOT] en mode pause d'enregistrement.
 - Le caméscope enregistre une image fixe pendant environ 7 secondes et se replace ensuite en mode pause d'enregistrement.
- Les enregistrements en mode PhotoShot ont une qualité d'image légèrement inférieure.

Mode PhotoShot progressif

Avec la fonction PhotoShot progressif, il est possible d'enregistrer des images fixes avec une résolution plus élevée qu'avec la fonction PhotoShot standard

- Après avoir réglé [PROGRESSIVE] à partir du sous-menu [CAMERA SETUP] sur [ON] ou [AUTO], appuyer sur la touche [PHOTO SHOT] en mode pause d'enregistrement. [P] s'affiche.
- Cette fonction peut ne pas fonctionner avec certains réglages de fonction.
- Si le mode carte est sélectionné. [PROGRESSIVE] est activé [ON].

PhotoShot continu

Après avoir réglé [SHUTTER] du sous-menu [OTHER FUNCTIONS] sur [ON], si la touche [PHOTO SHOT] est maintenue enfoncée, le caméscope enregistrera des images fixes chaque 0,7 seconde, sans interruption, jusqu'à ce que la touche soit relâchée.

L'écran clignote et en même temps, le clic de l'obturateur est enregistré.
 (Cependant, lorsque PhotoShot progressif est réglé sur [ON] ou [AUTO], cette fonction n'est pas activée.)

Image fixe numérique

Lorsqu'on appuie sur la touche [CAMERA STILL] ②, les images deviennent des images fixes. Lorsqu'on appuie à nouveau sur la touche, le mode image fixe est annulé

- Nous vous recommandons d'appuyer sur la touche [CAMERA STILL] d'abord à l'endroit où vous désirez enregistrer l'image de façon à entrer dans le mode image fixe numérique et appuyer ensuite sur la touche IPHOTO SHOTI.
- Pour les images fixes prises en mode continu PhotoShot ou les images fixes en mode numérique, les signaux de l'index PhotoShot ne sont pas enregistrés.

Fonction zoom avant/arrière

Elle permet au caméscope de créer des effets spéciaux en enregistrant des objets proches ou des prises de vue grand angle,

- 1 Pour des prises de vue grand angle (zoom arrière): Appuyer sur la touche zoom [W/T] vers [W]. Pour gros-plans (zoom avant): Appuyer sur la touche du zoom [W/T] vers [T].
- •Le grossissement du zoom est affiché pendant quelques secondes.
- En général, lorsque la touche [W/T] est pressée vers [W] ou [T], la vitesse de zoom augmente graduellement.


Faire des gros-plans de petits objets (Fonction gros-plan macro)
Lorsque le grossissement du zoom est égal à 1 x, le caméscope peut mettre
au point un sujet qui se trouve à environ 35 mm (1,5 po) de l'objectif. Avec
celui-ci, de petits sujets tels que des insectes peuvent être enregistrés.


Pour utiliser la fonction de microphone zoom


De pair avec la fonction de zoom, l'angle directionnel du microph

De pair avec la fonction de zoom, l'angle directionnel du microphone et la sensibilité sont variés lors d'un enregistrement sonore.

- Régler [CAMERA FUNCTIONS] >> [RECORDING SETUP] >> [ZOOM MIC] >> [ON]. (L'indication [Z.MiC] apparaît. (1))
- Cette fonction pourrait ne pas fonctionner adéquatement dans un environnement trop bruyant.
- Lorsque le sélecteur [TAPE/CARD] est à la position [CARD], la fonction de microphone zoom ne peut pas fonctionner. (PV-DC252/PV-DC252-K)
- Pour d'autres notes, voir à la page 56.

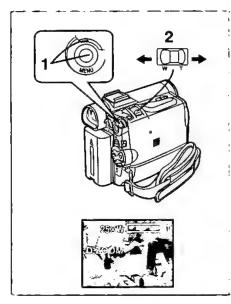

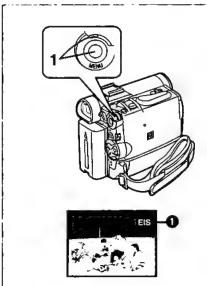

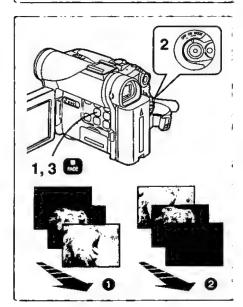

Fonction zoom numérique

Cette fonction est utile lorsque vous souhaitez réaliser des gros-plans de sujets situés au-delà du champ de zoom normal avec grossissement allant de 1× à 10×. À l'aide de la fonction zoom numérique, vous pouvez choisir un grossissement de 25× ou même de 700×.

- 1 Régler [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [D.ZOOM] >> [25x] ou [700x].
 - •25×: zoom numérique à 25×
 - ●700×: zoom numérique à 700×
- 2 Pour utiliser le zoom avant et arrière, appuyer sur la touche [W/T] en direction [W] ou en direction [T].
- Alors que le grossissement du zoom numérique augmente, la qualité de l'image risque de se détériorer.

Arrêt de la fonction zoom numérique

Régler [D.ZOOM] du sous-menu [CAMERA SETUP] sur [OFF].

• Pour d'autres notes, voir à la page 56.

Fonction de stabilisation électronumérique de l'image

Lorsque vous filmez dans des situations instables et que le caméscope tremble, il est possible d'utiliser cette fonction pour corriger la déformation de ces images.

- Si le caméscope vibre trop, cette fonction peut ne pas être en mesure de stabiliser les images.
- 1 Régler [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [EIS] >> [ON].
 - L'indication [EIS] 1 apparaît.

Annulation de la stabilisation électronumérique de l'Image Régler [EIS] du sous-menu [CAMERA SETUP] sur [OFF].

Cette fonction peut ne pas fonctionner dans les conditions suivantes...

- · Mouvements exagérés du caméscope.
- Prise de vues sur le sujet comportant des rayures verticales ou horizontales.
- Prise de vues sous un éclairage insuffisant.
- Prise de vues sous un éclairage puissant provenant d'une lampe fluorescente.
- Prise de vues comportant des mouvements rapides.
- Pour d'autres notes, voir à la page 56.

Fonctions fondu à l'entrée et fondu en sortie

Fondu à l'entrée 1


Une entrée en fondu fait apparaître peu à peu les images et les sons à partir du noir au début d'une scène.

- 1 Continuer d'appuyer sur la touche [FADE] lorsque le caméscope est réglé sur le mode pause d'enregistrement.
 - ·L'image disparaît vers le noir graduellement.
- 2 Lorsque l'image a complètement disparu, appuyer sur la touche d'enregistrement pour commencer l'enregistrement.
- 3 Relâcher la touche [FADE] 3 secondes après le début de l'enregistrement.
 - L'image réapparaît graduellement.

Fondu en sortie 2

La sortie en fondu fait disparaître peu à peu les images et les sons vers le noir à la fin d'une scène.

- Continuer d'appuyer sur la touche [FADE] tout en enregistrant.
 - L'image disparaît graduellement.
- 2 Environ 3 secondes après la disparition totale de l'image, appuyer sur la touche d'enregistrement pour arrêter l'enregistrement.
- 3 Relâcher la touche [FADE].
- Pour d'autres notes, voir à la page 57.

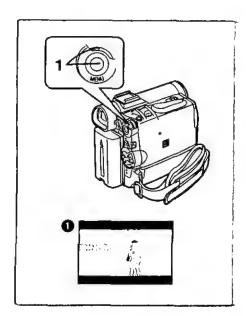

Fonction cinéma

Cette fonction permet d'enregistrer des images au format grand écran.


- 1 Régler [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> [ON].
 - Une bande noire apparaît dans le haut et le bas de l'écran.



Désactivation du mode cinéma

Régler [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [CINEMA] >> (OFF).

• Pour d'autres notes, voir à la page 57.

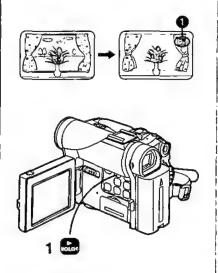

Fonction compensation de contre-jour

Ceci évite à un sujet d'enregistrement d'être filmé de manière encore plus sombre en contre-jour. (Le contre-jour est la lumière qui brille derrière un sujet qui est filmé.)

- Appuyer sur la touche [BACKLIGHT].
 - L'indication [] 1 clignote et s'affiche ensuite.

Pour continuer l'enregistrement normal


Appuyer sur la touche [BACKLIGHT].


- Lorsqu'on appuie sur la touche [BACKLIGHT] l'écran tout entier s'éclaircit.
- En utilisant le commutateur [OFF/ON/MODE], la fonction compensation de contre-jour est annulée.
- Cette fonction ne peut être utilisée de concert avec le réglage de l'iris.


Fonction MAGICPIX

Le caméscope règle automatiquement la vitesse de pose en fonction de la quantité de lumière ambiante. Les objets peuvent être clairement isolés de l'arrière-plan avec une luminance de seulement un lux (avec vitesse de pose de 1/2 seconde).

- Appuyer sur la touche [MAGICPIX].
 - L'indication [MAGICPIX] s'affiche.
- Sous un éclairage plus que suffisant, le mode d'enregistrement ordinaire est provisoirement rétabli.
- L'image enregistrée est présentée comme s'il s'agissait d'un enregistrement à temps échelonné.
- La mise au point doit être réglée manuellement.
- N'utiliser cette fonction que dans les situations de faible éclairage. Ne pas l'utiliser dans un endroit où l'éclairage est intense ni orienter le caméscope vers le soleil ; cela pourrait causer des dommages irrémédiables au caméscope.
- La fonction progressive est automatiquement désactivée.
- La fonction PhotoShot continu ne peut être utilisée de pair avec la fonction MAGICPIX
- Il n'est pas possible de procéder au réglage de l'équilibre du blanc.
- L'obturateur électronique ne peut faire l'objet d'aucun réglage.
- Ni le réglage automatique de l'exposition ni les effets numériques ne sont disponibles.
- Le stabilisateur de l'image ne peut être utilisé.

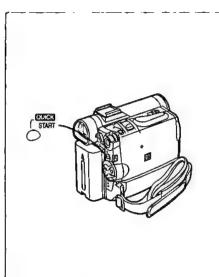

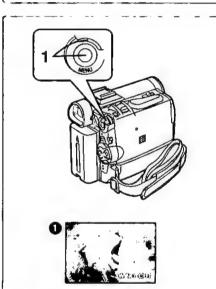

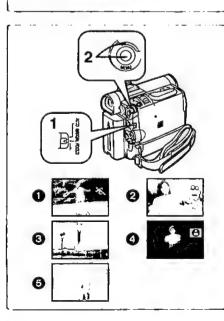

Activation rapide

Cette fonction permet de poursuivre l'enregistrement promptement même si le caméscope passe en mode attente (lorsque le caméscope est laissé inactif pendant 5 minutes). Lorsque le commutateur est réglé à [OFF] puis à [ON]. le caméscope sera alors prêt pour un enregistrement dans un délai de 1,5 seconde. Pour activer cette fonction, appuyer sur la touche [QUICK START] de manière que le voyant d'activation rapide s'allume.

Toutefois, dans les conditions suivantes, cette fonction ne fonctionnera pas même si le voyant d'activation rapide est allumé:

- Absence de bande dans le mode enregistrement sur bande.
- Absence de carte dans le mode enregistrement sur carte mémoire.
 Si, alors que le voyant d'activation rapide est allumé, la touche
 IQUICK STARTI est maintenue enfoncée pendant 2 secondes, le voyant

[QUICK START] est maintenue enfoncée pendant 2 secondes, le voyant s'éteint et le caméscope est mis hors marche.

Si, alors que le voyant d'activation rapide est allumé, le caméscope demeure inactif pendant 30 secondes, le voyant s'éteint et l'appareil est mis hors marche.

Si la batterie est remplacée alors que l'appareil se trouve dans le mode activation rapide, ce mode est rétabli au moment de la mise en marche. Pendant le réglage automatique de l'équilibre du blanc, le rendu chromatique des premières séquences enregistrées pourrait laisser à désirer. Le taux d'agrandissement (zoom) effectif à l'enregistrement est différent de ce qu'il était dans le mode attente.

Fonction atténuation bruit du vent

Cette fonction réduit le bruit du vent frappant le microphone pendant un enregistrement sonore.

- 1 Régler[CAMERA FUNCTIONS] >> [RECORDING SETUP] >> [WIND-CUT] >> [ON].
 - L'indication [WIND-CUT] s'affiche.

Enregistrement dans des situations

particulières (Réglage automatique de l'exposition)

Il sélectionne les expositions optimales automatiquement lors de situations d'enregistrement particulières.

- Régler le commutateur du sélecteur de mode sur [MANUAL].
 L'indication (MNL) apparaît.
- 2 Régler [CAMERA FUNCTIONS] >> [CAMERA SETUP] >> [PROG.AE] >> dans le mode désiré [→,], [♣], [♠], [♠], [♠].
 - L'indication du mode sélectionné est affichée.

[🦎] Mode sports 🕦

Pour enregistrer des scènes qui impliquent des actions rapides telles que des scènes de sport.

[🛂] Mode portrait 🙆

Les sujets en premier-plan apparaissent plus clairement que ceux en arrièreplan.

[ஓ] Mode éclairage faible ❸

Conserve l'ambiance d'une scène sombre sans altérer la luminosité.

[] Mode projecteur 4

Neutralise l'excédent de luminosité créé par l'éclairage d'un projecteur.


[84] Mode mer et neige 6


Permet l'équilibre de l'éclairage dans des environnements éblouissants pour procurer une image claire.

Annulation du réglage automatique de l'exposition

Régler [PROG.AE] du sous-menu [CAMERA SETUP] sur [OFF]. Ou bien régler le commutateur de sélecteur de mode sur [AUTO].

Pour d'autres notes, voir à la page 57.

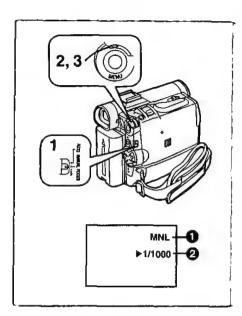



Utile pour enregistrer les scènes à action rapide.

- 2 Appuyer sur le cadran [PUSH] jusqu'à ce que l'affichage de la vitesse d'obturation 2 apparaisse.
- 3 Tourner le cadran [PUSH] pour régler la vitesse d'obturation. Réglage de la portée de la vitesse d'obturation.

1/60-1/8000

La vitesse standard d'obturation est de 1/60.


Sélectionner une vitesse plus proche de [1/8000] entraîne une vitesse d'obturation plus rapide. Ceci permet la prise de vue plus claire de sujets en mouvement à une luminosité plus faible.

 Lorsque la fonction progressive est activée [ON], une vitesse jusqu'à seulement 1/500e peut être utilisée.

Pour continuer le réglage automatique

Régler le commutateur du sélecteur de mode sur [AUTO].

• Pour d'autres notes, voir à la page 57.

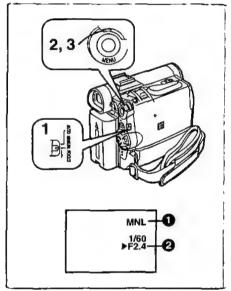

Réglage manuel de l'iris (Nombre F)

Il est possible d'utiliser cette fonction lorsque l'écran est trop clair ou trop foncé.

- Régler le commutateur du sélecteur de mode sur [MANUAL].
 L'indication [MNL] apparaît.
- 2 Appuyer sur le cadran [PUSH] jusqu'à ce qu'apparaisse l'indication d'iris 2.
- 3 Tourner le cadran [PUSH] pour régler l'iris.

Portée de l'iris réglable

CLOSE (Fermé), F16, ..., F1.7,

OPEN (Ouvert) 0dB, ..., 18dB

Lorsqu'une valeur plus proche de [CLOSE] est sélectionnée, l'image devient plus foncée.


Lorsque une valeur plus proche de [OP+18dB] est sélectionnée, l'image devient plus claire.

La valeur associée à +dB indique un accroissement du grain. Si cette valeur est trop grande, la qualité de l'image s'altère.

Pour continuer le réglage automatique

Régler le commutateur du sélecteur de mode sur [AUTO].

• Pour d'autres notes, voir à la page 57.

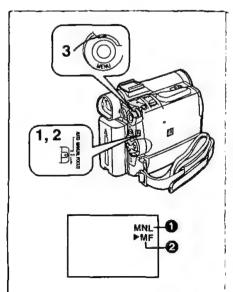


Réglage manuel de la mise au point


La mise au point peut être ajustée manuellement lors d'un enregistrement où la mise au point automatique ne fonctionne pas correctement.


- Régler le commutateur du sélecteur de mode sur [MANUAL].
 L'indication [MNL] apparaît.
- 2 Glisser le commutateur du sélecteur de mode vers [FOCUS].
 L'indication [►MF] ② apparaît.
- 3 Tourner le cadran [PUSH] pour régler la mise au point.

Pour continuer le réglage automatique

Régler le commutateur du sélecteur de mode sur [AUTO].

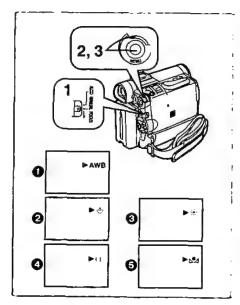

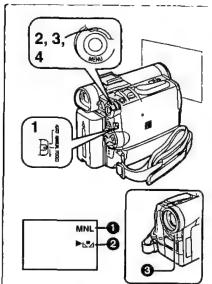

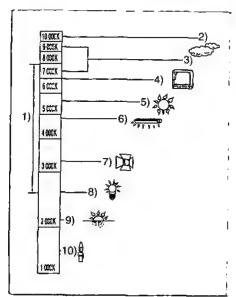

Enregistrement avec des couleurs naturelles

(Équilibre du blanc) En fonction de la scène ou des conditions d'éclairage, le réglage de l'équilibre du blanc automatique peut ne pas reproduire les couleurs naturelles. Dans ce cas, l'équilibre du blanc peut être réglé manuellement.

Régler le commutateur du sélecteur de mode sur [MANUAL].

L'indication [MNL] apparaît.

Appuyer sur le cadran [PUSH].

L'indication [AWB] apparaît.

Tourner le cadran [PUSH] pour régler le mode l'équilibre du blanc desiré.

Réglage automatique [AWB]

4 Mode lumière fluorescente [語]

6 Le réglage qui avait été précédemment réglé manuellement [№]

Pour continuer le réglage automatique

Tourner le cadran [PUSH] jusqu'à ce que [AWB] apparaisse. Ou régler le commutateur du sélecteur de mode sur [AUTO].

- Si le caméscope est mis en marche alors que le capuchon de l'objectif est encore en place, le réglage automatique de l'équilibre du blanc pourrait ne pas fonctionner convenablement. Toujours enlever le capuchon de l'objectif avant de mettre l'appareil en marche.
- Pour d'autres notes, voir à la page 57.

Réglage manuel de l'équilibre du blanc

Lorsque l'enregistrement se déroule sous des conditions d'éclairage où le réglage de l'équilibre du blanc automatique ne fonctionne pas, utiliser alors le mode manuel de l'équilibre du blanc.

Régler le commutateur du sélecteur de mode sur [MANUAL].

 L'indication [MNL] 1 apparaît. Appuyer sur le cadran [PUSH].

- L'indication [AWB] apparaît.
- 3 Tourner le cadran [PUSH] jusqu'à ce que l'indication [N■] 2 s'affiche.
- 4 En projetant un sujet blanc sur tout l'écran, maintenir pressé le cadran [PUSH] jusqu'à ce que l'indication [№] cesse de clignoter.
 - Lorsque l'indication [┗型] clignote après la mise sous tension du caméscope, le réglage précédent de l'équilibre du blanc est encore conservé.

Pour continuer le réglage automatique

Tourner le cadran [PUSH] jusqu'à ce que l'indication [AWB] soit affichée. Ou régler le commutateur du sélecteur de mode sur [AUTO].

A propos du capteur d'équilibre du blanc


Le capteur d'équilibre du blanc 3 détermine la nature de la source de lumière pendant l'enregistrement.

 Ne pas couvrir le capteur d'équilibre du blanc avec la main pendant l'enregistrement, car cela peut entraîner le fonctionnement anormal de cette

L'utilisation du réglage automatique de l'équilibre du blanc dans des conditions d'éclairage non appropriées peut provoquer la formation d'images rougeâtres ou bleuâtres, et le réglage automatique de l'équilibre du blanc peut ne pas fonctionner de manière correcte. Dans un tel cas, nous vous conseillons de régler l'équilibre du blanc.

- La portée de ce que le mode automatique de l'équilibre du blanc contrôle sur ce caméscope
- 2) Ciel bleu
- 3) Ciel nuageux (Pluie)
- 4) Écran télé
- 5) Lumière du soleil
- 6) Lumière blanche fluorescente
- 7) Ampoule halogène
- Ampoule de lumière incandescente 8)
- Lever et coucher de soleil
- 10) Lumière de bougie
- Pour d'autres notes, voir à la page 57.









5) STROBE



6) GAIN-LIP



8) MOSAIC



9) MIRROR



10) NEGA



11) SEPIA




12) MONO



13) SOLARI



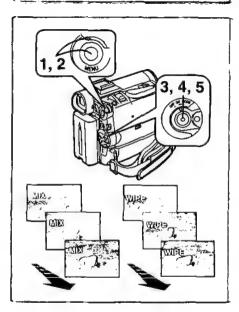

Effets et fonctions numériques

Ce caméscope est muni de fonctions et d'effets numériques qui permettent la création d'effets spéciaux à la scène

Effets numériques 1 [EFFECT1]

- 1) [MULTI] Mode d'écran multiple
- 2) [P-IN-P] Mode image sur image
- 3) [WIPE] Mode votet
- 4) [MIX] Mode mixage
- 5) ISTROBEI Mode stroboscopique
 - •Il enregistre des images avec un effet stroboscopique.
- 6) [GAIN-UP] Mode accroissement du gain
 - Il éclaircit les images électroniquement.
 - En utilisant ce mode, la mise au point est manuelle.
- TRAILI Mode effet traînée
- •Il enregistre les images avec un effet de traînée.
- 8) [MOSAIC] Mode mosaïque
 - L'image est présentée dans un motif en mosaïque.
- 9) [MIRROR] Mode miroir
 - •La moitié droite de l'image devient une image miroir sur le côté gauche (image symétrique).

Effets numériques 2 [EFFECT2]

- 10) [NEGA] Mode négatif
 - •Les couleurs de l'image enregistrée sont inversées comme sur un négatif.
- 11) [SEPIA] Mode sépia
 - •Il enregistre une scène en conférant un teint sépia, semblable à la couleur de vieilles photos.
- 12) [MONO] Mode noir et blanc
 - •Il enregistre une image en noir et blanc.
- 13) [SOLARI] Mode solarisation
 - •Il enregistre l'image avec un effet de peinture.

Sélection d'un effet numérique désiré

Réaler [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT] ou [EFFECT2] >> selon l'effet numérique désiré.

Annulation de l'effet numérique

Régier [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] ou [EFFECT2] >>[OFF].

Pour d'autres notes, voir à la page 57.

Mode volet et mode mixage


Mode volet:


Tel un rideau qui est tiré, l'image fixe de la dernière scène enregistrée passe peu à peu à l'image en mouvement d'une nouvelle scène.

Mode mixage:

Alors que l'image en mouvement d'une nouvelle scène apparaît en fondu. l'image fixe de la dernière scène enregistrée s'évanouit en fondu.

- Régler [DIGITAL EFFECT] >> [EFFECT1] >> [WIPE] ou [MIX].
- 2 Sortir du menu en appuyant sur la touche [MENU].
 - L'indication [WIPE] ou [MIX] apparaît.
- 3 Appuyer sur la touche d'enregistrement pour commencer l'enregistrement.
- 4 Appuyer sur la touche d'enregistrement pour interrompre l'enregistrement.
 - •La dernière scène est mise en mémoire. L'indication [WIPE] ou [MIX] change en [WIPE] ou [MIX].
- 5 Appuyer sur la touche d'enregistrement pour reprendre l'enregistrement.
 - La dernière image de la scène précédente passe graduellement à la nouvelle scène.
- Pour d'autres notes, voir à la page 58.

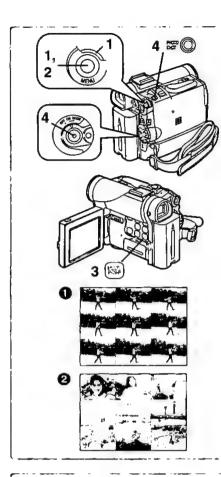

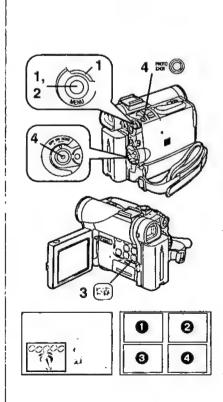

Mode d'écran multiple

Mode stroboscopique d'écran multiple 1:

Il est possible de capturer et enregistrer une séquence de 9 petites images fixes

Mode manuel d'écran multiple 2:

Il est possible de capturer et enregistrer manuellement une séquence de 9 petites images fixes.

Après avoir réglé [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] >> [MULTI].....

1 Régler [MULTI-PICTURES] >> [SCAN MODE] >> [STROBE] ou [MANUAL].

Lorsque la fonction [STROBE] est sélectionnée:

• Régler [SPEED] à la vitesse stroboscopique désirée.

[FAST]: Vous pouvez capturer 9 images fixes consécutives en

1 seconde environ

[NORMAL]: Vous pouvez capturer 9 images fixes consécutives en

1.5 seconde environ

[SLOW]: Vous pouvez capturer 9 images fixes consécutives en

2 secondes environ

 Si vous réglez l'oscillation [SWING] du sous-menu [MULTI-PICTURES] sur [ON], les intervalles avec lesquels sont reproduits les 9 images fixes sont plus longs au début et à la fin qu'en milieu de la période stroboscopique d'oscillation, ceci est très utile pour analyser le mouvement d'oscillation, etc., des sports.

Lorsque la fonction [MANUAL] est sélectionnée:

- Vous pouvez sélectionner les scènes désirées une à la fois, parmi un maximum de 9 petites images.
- 2 Sortir du menu en appuyant sur la touche [MENU].
- 3 Appuyer sur la touche [MULTI].
 - Si [MANUAL] est sélectionné, appuyer sur la touche [MULTI] à chaque scène que l'on souhaite capturer.
- 4 Appuyer sur la touche d'enregistrement ou sur [PHOTO SHOT] pour enregistrer sur la cassette.

Effacer tous les multi-écrans capturés

Lorsque les 9 multi-images sont affichées, appuyer sur la touche [MULTI].

 Si [MANUAL] a été sélectionné, appuyer sur la touche [MULTI] après que les 9 images aient été affichées.

Pour afficher les multi-écrans à nouveau

Appuyer sur la touche [MULTI] pendant 1 seconde ou plus.

Pour effacer les images multiples une par une (Lorsque les images étaient capturées dans (MANUALI)

Quand on appuie sur la touche [MULTI] pendant 1 seconde ou plus, lorsque les images fixes sont affichées, l'image capturée en dernier est effacée. Si vous continuez d'appuyer sur la touche [MULTI], les images sont effacées sans interruption.


- Après que les images fixes aient été effacées une par une, elles ne peuvent plus être affichées.
- Pour d'autres notes, voir à la page 58.


Mode image sur image

Il est possible d'afficher un sous-écran (image fixe) à l'intérieur de l'écran.

Après avoir réglé [CAMERA FUNCTIONS] >> [DIGITAL EFFECT] >> [EFFECT1] >> [P-IN-P].....

- 1 Sélectionner [P-IN-P] du sous-menu [MULTI-PICTURES] et régler la position (1234) où vous souhaitez insérer une une petite image fixe.
- 2 Sortir du menu en appuyant sur la touche [MENU].
- 3 Orienter le caméscope en direction de la scène à capturer et appuyer sur la touche [P-IN-P] pour insérer une petite image.
 - Une petite image fixe est affichée à l'intérieur d'une image standard.
 - Si on appuie à nouveau sur la touche [P-IN-P] la petite image est effacée.
- 4 Appuyer sur la touche d'enregistrement ou sur [PHOTO SHOT] pour enregistrer sur la cassette.
- Pour d'autres notes, voir à la page 58.

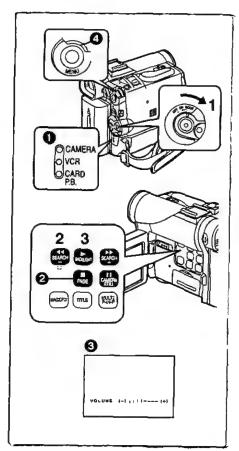

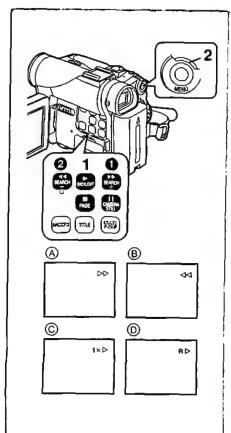

Mode magnétoscope

Lecture

La scène enregistrée peut être visionnée immédiatement après l'enregistrement.

- Glisser le commutateur [OFF/ON/MODE] et régler le caméscope en mode magnétoscope.
 - •Le voyant [VCR] s'allume.
- 2 Appuyer sur la touche [◀◀] pour rebobiner la cassette.
 - Rebobiner la cassette au point où vous souhaitez commencer la lecture.
 - Lorsque la cassette arrive au début, le rebobinage s'arrête automatiquement.
- 3 Appuyer sur la touche [▶] pour commencer la lecture.

Pour arrêter la lecture

Appuyer sur la touche [■] 2.

 Lors de la lecture d'une cassette qui comporte des signaux de protection des droits d'auteur, l'écran devient bleu ou recouvert de motifs de parasites mosaïques.

Réglage du volume du son

Jusqu'à ce que l'indication [VOLUME] apparaisse, continuer d'appuyer sur le cadran [PUSH] . Ensuite, tourner le cadran [PUSH] pour régler le volume. Après le réglage, appuyer sur le cadran [PUSH] pour faire disparaître l'indication [VOLUME].

Pour régler le volume à partir de la télécommande, appuyer sur la touche [T] ou [W] pour afficher l'indication [VOLUME]. Appuyer sur la touche [T] pour augmenter le volume ou appuyer sur la touche [W] pour le baisser. L'indication [VOLUME] s'efface 2 ou 3 secondes après que le réglage soit terminé.

- Lorsque la fonction lecture zoom est utilisée, le volume du son ne peut pas être réglé.
- Pour d'autres notes, voir à la page 58.

Repérage d'une scène pour la lecture

Lecture de repérage/rétrospective

Lecture de repérage (A)

Appuyer sur la touche de recherche en avant [►►] pendant la lecture. Lecture de rétrospective (B)

Appuyer sur la touche de recherche arrière [◄◄] 2 pendant la lecture.

 Lorsque la touche est maintenue enfoncée, le repérage ou la rétrospective se poursuit jusqu'à ce que la touche soit relâchée.

 Lorsque la touche n'est enfoncée que brièvement, le repérage ou la rétrospective se poursuit même après que la touche ait été relâchée.

Fonction de vérification rapide

Lorsque la touche [▶▶] est pressée lors de l'avance accélérée de la bande ou la touche [◀◀] lors du rebobinage, la lecture de repérage ou de rétrospective continue aussi longtemps que la touche est maintenue enfoncée.

Fonction de recherche à vitesse variable

La vitesse de lecture ou de la recherche d'image peut varier.

- Pendant la lecture, appuyer sur la touche [▶].
 - L'indication [1×▷] apparaît. (C)

2 Tourner le cadran [PUSH] et sélectionner la vitesse de recherche désirée.

Les 6 vitesses de lecture suivantes sont disponibles pour la fonction de recherche à vitesse variable dans les directions de défilement rapide et de rebobinage. 1/5× (Lecture lente, mode SP uniquement), 1/3× (Lecture lente, mode LP uniquement), 1×, 2×, 5×, 10×, et 20×.

Le même réglage peut être effectué à l'aide des touches [VAR.SEARCH],
 [▲] et [▼] de la télécommande.


Retour à la lecture normale

Appuyer sur la touche [▶].

- Pendant le repérage ou la rétrospective, les images en mouvement rapide peuvent présenter des parasites de type mosaïque. Veuillez noter que ceci n'est pas le signe d'un mauvais fonctionnement.
- Le son est coupé pendant la recherche.

Lecture en reprise

Si vous continuez d'appuyer sur la touche sélecteur de fonctions vers l'indication [▶] pendant 5 secondes, le caméscope passe en mode de lecture en reprise, et l'indication [R ▷] apparaît (D). (Pour annuler le mode de lecture en reprise, régler le commutateur [OFF/ON/MODE] sur [OFF].)

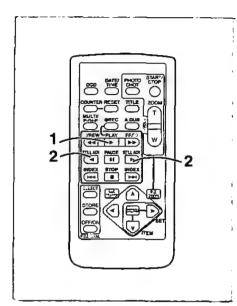

Lecture au ralenti

Ce caméscope peut lire à une vitesse lente.


- Appuyer sur la touche [▶].
- 2 Appuyer sur la touche [◄] ou la touche [▶] sur la télécommande.
 - Lorsqu'on appuie sur la touche [◄], la lecture au ralenti s'effectue en direction inverse, tandis qu'en appuyant sur la touche [▮►] la lecture au ralenti commence en direction marche avant.

Les scènes enregistrées en mode standard (SP) sont reproduites à une vitesse normale de 1/5e environ.

Les scènes enregistrées en mode LP sont reproduites à environ 1/3e de la vitesse standard.

Retour à la lecture normale

Appuyer sur la touche [▶].

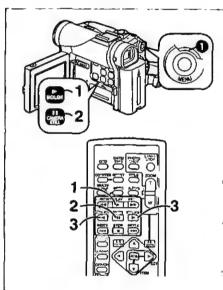

Lecture fixe/Lecture avance fixe

Ce caméscope peut reproduire des images fixes.

- 1 Appuyer sur la touche [▶].
- 2 Appuyer sur la touche [II].
 - •La lecture de l'image s'arrête en mode lecture fixe.
- 3 Appuyer sur la touche [◄1] ou la touche [▶] sur la télécommande.
 - ◆ Chaque fois qu'on appuie sur la touche [◄I], les images fixes avancent dans la direction inverse. Chaque fois qu'on appuie sur la touche [I►], les images fixes avancent vers l'avant. Si on continue d'appuyer sur l'une ou l'autre de ces touches, les images fixes avancent sans interruption, une image à la fois, jusqu'à ce que la touche soit relâchée.


Retour à la lecture normale

Appuyer sur la touche [▶] ou la touche [▮].

Lecture avec molette (Jog)

En tournant la molette (Cadran [PUSH]) ① du caméscope en mode lecture fixe, il est possible de faire avancer les images fixes, une image après l'autre, en avant ou en arrière.

 Si le caméscope est laissé en mode image fixe pendant plus de 5 minutes, le caméscope passe en mode arrêt pour protéger les têtes de lecture contre l'usure.

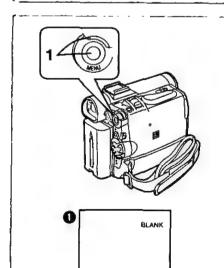

Repérage de la fin de l'enregistrement


(Fonction recherche des blancs)


La fonction recherche des blancs aide à localiser rapidement la fin de l'enregistrement sur la cassette.

- 1 Régler [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [BLANK SEARCH] >> [YES].
 - L'indication [BLANK] 1 apparaît.
 - 1 seconde environ avant la fin de la dernière scène enregistrée, le caméscope passe en mode lecture fixe.
 - S'il ne reste plus aucune partie blanche sur la cassette, le caméscope s'arrête à la fin de la cassette.

Annulation de la recherche des blancs avant la fin

Appuyer sur la touche [1].

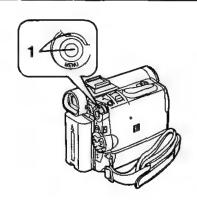

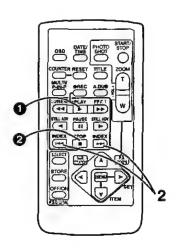





Fonctions de recherche de l'index

Afin de faciliter la recherche d'une scène, ce caméscope enregistre automatiquement les signaux de l'index lors de l'enregistrement, comme expliqué ci-après.

Signaux de l'index PhotoShot

Ces signaux sont automatiquement enregistrés lorsque les images fixes sont captées en mode PhotoShot (+> 21).

Lors de l'enregistrement d'images fixes en utilisant le mode PhotoShot continu (→ 21), le signal de l'index n'est pas enregistré.

Signal index de scène

Les signaux de l'index de la scène sont automatiquement enregistrés lorsque l'enregistrement commence, après avoir inséré une cassette.

Cependant, si le caméscope passe du mode magnétoscope au mode caméra ou si la date et l'heure sont réglées avant que ne commence

l'enregistrement, le signal de l'index n'est pas enregistré.

Si [INDEX] du sous-menu [RECORDING SETUP] sur le menu principal [CAMERA FUNCTIONS] est réglé sur [2HOUR], un signal d'index est enregistré lorsque l'enregistrement est réactivé après un laps de temps de 2 heures ou plus. S'il est réglé sur [DAY], un signal d'index est enregistré lorsque l'enregistrement est relancé après avoir changé la date depuis le dernier enregistrement. (Lorsque le signal de l'index est enregistré, l'indication [INDEX] (A) clignote pendant quelques secondes.)

Recherche de l'index PhotoShot

- 1 Régler [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [INDEX] >> [PHOTO].
- 2 Appuyer sur la touche [▶▶I] ou sur la touche [◄◄] de la télécommande.
- À chaque pression de la touche correspondante, les images fixes enregistrées en mode PhotoShot sont recherchées.
- Après la lecture des images avec son pendant 4 secondes, le caméscope passe en mode lecture fixe.


Recherche de l'index de scène


- 1 Régler [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [INDEX] >> [SCENE].
- 2 Appuyer sur la touche [►►] ou la touche [◄◄] de la télécommande.
- ◆Lorsque la touche correspondante est pressée une fois, l'indication [S 1] (B) apparaît, et la recherche de la scène suivante marquée par le signal d'index commence. Chaque fois qu'on appuie sur la touche après l'envoi de recherche d'index de scène, l'indication passe de [S 2] à [S 9], et le début de la scène correspondant au numéro sélectionné sera recherchée. Une fois la scène désirée trouvée, la lecture commence automatiquement.
- Il est possible de sélectionner jusqu'à 9 numéros maximum de scènes.


Balayage de débuts

Si on continue d'appuyer sur la touche [▶►] ou sur la touche [◄◄] pendant 2 secondes ou plus, la recherche se poursuit et la lecture du début de chaque scène commence. (Pour annuler, appuyer sur la touche [▶] ① ou sur la touche [▶] ②.)

●Pour d'autres notes, voir à la page 58.

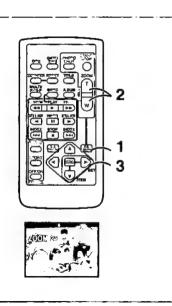

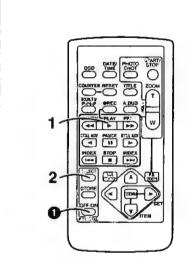

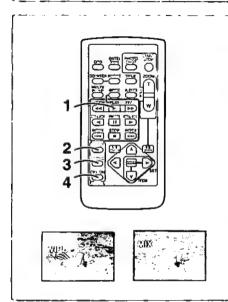

Fonction de lecture zoom

Une partie de l'image peut être agrandie jusqu'à 10 fois au cours de la lecture.

- 1 Pendant la lecture, appuyer sur la touche [P.B. ZOOM] de la télécommande.
 - Le centre de l'image double.

Changement de l'incrément du zoom

- 2 Changer l'incrément du zoom en appuyant sur la touche [W] ou [T] de la télécommande.
 - Vous pouvez augmenter l'incrément jusqu'à 10x.

Changement de la zone agrandie d'une image

- 3 Appuyer sur la touche fléchée (▲, ◄, ➤, ▼) de la télécommande qui pointe sur la zone que vous voulez agrandir.
 - Lorsque la lecture est arrêtée, la position de l'image agrandie est automatiquement replacée au centre.

Annulation de la fonction de lecture zoom

Appuyer sur la touche [P.B. ZOOM] de la télécommande.

Pour d'autres notes, voir à la page 58.

Lecture avec effets numériques

Pendant la lecture, les effets spéciaux numériques peuvent être ajoutés à l'enregistrement. Ce sont les mêmes que ceux utilisés au cours de l'enregistrement (sauf en mode image sur image).

- 1 Appuyer sur la touche [▶].
- 2 Appuyer plusieurs fois sur la touche [SELECT] de la télécommande jusqu'à ce que l'indication de l'effet numérique désiré apparaisse.
 - Lorsqu'on appuie de manière répétée sur la touche [SELECT], la sélection de l'effet numérique change.
 WIPE→MIX→STROBE→NEGA→SEPIA→MONO→TRAIL→ SOLARI→ MOSAIC→ MIRROR
 - Le même réglage peut également être effectué en utilisant [DIGITAL EFFECT] du menu principal [VCR FUNCTIONS].

Arrêt temporaire de l'effet numérique à la lecture

Appuyer sur la touche [OFF/ON]
pour effacer ou relancer l'effet numérique. Lorsque l'effet numérique est interrompu momentanément, l'indication de l'effet sélectionné cliquote.


Annulation de l'effet numérique

Appuyer sur la touche [SELECT] de la télécommande plusieurs fois jusqu'à ce que l'indication d'effet numérique s'efface.

• Pour d'autres notes, voir à la page 58.

Lecture en mode volet et mode mixage

- 1 Appuyer sur la touche [▶].
- 2 Appuyer sur la touche [SELECT] de la télécommande et sélectionner [WIPE] ou [MIX].
- 3 Appuyer sur la touche [STORE] au moment où vous souhaitez sauvegarder une image fixe.
 - La dernière scène est sauvegardée en mémoire. L'indication [WIPE] ou [MIX] change pour [WIPE] ou [MIX].
- 4 Appuyer sur la touche [OFF/ON] de la scène dans laquelle vous souhaitez utiliser l'effet volet ou mixage.
 - •La scène change suite à l'effet volet ou mixage.
- Les fonctions volet et mixage peuvent être utilisées uniquement à partir de la télécommande lors de la lecture.
- Si on appuie sur la touche [OFF/ON] lorsque la fonction volet ou mixage est utilisée, l'effet s'arrêtera momentanément à ce niveau. En appuyant à nouveau sur la touche [OFF/ON], l'effet revient.

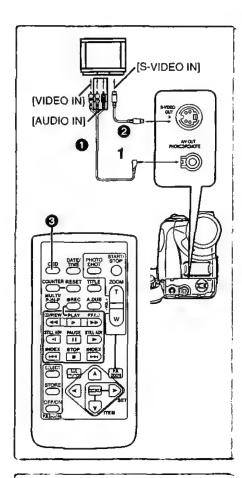


Lecture sur téléviseur

En branchant votre caméscope à un téléviseur, les scènes enregistrées peuvent être visionnées sur l'écran du téléviseur.

- Avant de les connecter, mettre le caméscope et le téléviseur hors marche.
- 1 Effectuer le branchement de la fiche [A/V OUT] du caméscope avec les prises d'entrée audio et vidéo du téléviseur.
 - En utilisant le fil AV 1 (fourni), effectuer le branchement avec le téléviseur. Si le téléviseur a une prise de raccordement S-vidéo, brancher le fil S-vidéo 2 (non fourni), aussi.

Affichage des indications sur l'écran télé
Appuyer sur la touche [OSD] 3 de la télécommande.

- Assurez-vous d'avoir sélectionné l'entrée appropriée sur le téléviseur. (Si nécessaire, référez-vous au mode d'emploi du téléviseur.)
- Lors de la lecture d'une cassette enregistrée protégée par des signaux de droits d'auteurs, l'écran devient bleu ou en mosaïque.

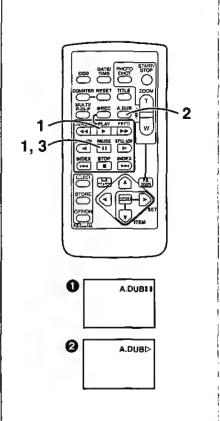

Doublage audio

Il est possible d'ajouter de la musique ou un texte sur la bande enregistrée.

- Si vous effectuez un doublage audio, sur une bande qui a été enregistrée avec [AUDIO-REC] réglé sur [16bit] dans le sous-menu [RECORDING SETUP] du menu principal [CAMERA FUNCTIONS], le son d'origine est effacé. (Si vous souhaitez conserver le son original, utilisez le mode [12bit] lors de l'enregistrement.)
- Les doublages audio ne peuvent pas être exécutés sur les enregistrements effectués en mode LP. (→ 19)
- 1 Appuyer sur la touche [▶] puis sur la touche [♣] au point désiré pour commencer le doublage.
- 2 Appuyer sur la touche [A.DUB] de la télécommande.
- 3 Pour commencer le doublage audio, appuyer sur la touche [11] de la télécommande.
 - •L'indication [A.DUB▷] apparaît. 2

Annulation du doublage audio

Appuyer sur la touche [■] de la télécommande. Le caméscope est alors à nouveau en mode lecture fixe,

Reproduction du son enregistré en doublage audio (Pour l'enregistrement audio 12 bits)

Régler [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [AUDIO] >> [ST2] ou [MIX].


ST1: Reproduit le son original uniquement.


ST2: Reproduit uniquement le son ajouté lors du doublage audio.

MIX: Reproduit le son original et le son ajouté par le doublage audio en

simultané.

• Pour d'autres notes, voir à la page 58.

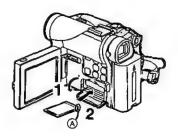

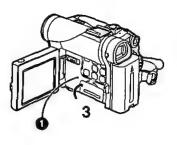

2 50 Q



Caractéristiques particulières

Les modèles PV-DC252 et PV-CD252-K acceptent une carte mémoire.

Utilisation d'une carte mémoire

Il est possible de recourir à une carte mémoire pour l'enregistrement et la lecture de fichiers.

 N'utiliser qu'une carte mémoire SD ou une carte MultiMediaCard^{MC} authentique, compatible avec l'appareil.

Mise en place de la carte mémoire

Avant de mettre la carte mémoire en place, s'assurer de mettre le caméscope hors marche.

- Ouvrir le couvercle de la fente de la carte.
- 2 Tout en tenant la carte mémoire avec le coin rogné (A) face vers la droite, l'insérer dans la fente.
- 3 Refermer le couvercle de la fente de façon sécuritaire.

Retrait de la carte mémoire

Ouvrir le couvercle de la fente, exercer une petite pression sur le centre de la carte, puis la tirer vers soi pour la retirer de la fente.

- Après avoir retiré la carte, refermer le couvercle de la fente.
- Forcer la sortie d'une carte insérée à fond peut endommager le caméscope.

■ Voyant [ACCESS]

Lorsque le caméscope accède à la carte (lecture, enregistrement, reproduction, effacement, déplacement des images), le voyant [ACCESS]
s'allume.

 Lorsque le voyant [ACCESS] est allumé, ne jamais essayer, de tirer la carte vers l'extérieur, d'éteindre le caméscope ou de commuter le sélecteur [TAPE/CARD]. De tels actes endommageraient la carte et provoqueraient un mauvais fonctionnement du caméscope.


Enregistrement sur une carte mémoire

- Si le commutateur [TAPE/CARD] est sur [CARD], le caméscope est automatiquement mis hors marche après un délai d'inactivité d'environ 5 minutes.
- Si le commutateur [TAPE/CARD] est sur [CARD], il ne sera pas possible d'enregistrer sur la bande magnétoscopique.

Carte PhotoShot

Enregistrement d'une image à travers l'objectif du caméscope (mode caméra)

- 1 Régler le sélecteur [TAPE/CARD] sur [CARD].
 - L'indication [PICTURE] s'affiche.
- 2 Appuyer sur la touche [PHOTO SHOT].
 - L'indication [FCTRE] s'allume en rouge.
- Le contact est coupé automatiquement après 5 minutes lorsqu'une carte est insérée.
- Avec la fonction PhotoShot progressif, la définition de l'image est plus élevée que dans le mode PhotoShot ordinaire (+> 21).

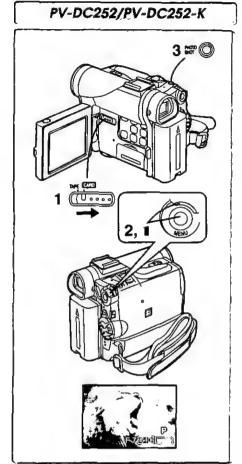

Carte PhotoShot (suite)

Enregistrement à partir d'une cassette (mode magnétoscope)

- 1 Régler le sélecteur [TAPE/CARD] sur [CARD].
- 2 Régler [VCR FUNCTIONS] >> [CARD SETUP] >> [PICTURE QUALITY] >> une qualité d'image désirée.
- 3 Commencer la lecture et appuyer sur la touche [PHOTO SHOT] sur la scène que vous souhaitez enregistrer.
 - Lorsque l'image est enregistrée, elle reste fixe pendant quelques secondes.


Sélection de la qualité des images de la carte PhotoShot

Régler [CAMERA FUNCTIONS] ou [VCR FUNCTIONS] >> [CARD SETUP] >> [PICTURE QUALITY] >> une qualité d'image désirée.

Nombre maximum d'images pouvant être enregistrées sur la carte mémoire fournie (8 Mo)

Images de haute qualité [FINE]: environ 45 images Images de qualité normale [NORMAL]: environ 95 images Images de faible qualité [ECONOMY]: environ 190 images

•Les données peuvent varier selon le sujet.

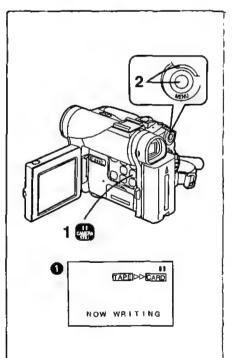

Copie automatique des images fixes qui ont déjà été enregistrées sur cassette

Le caméscope copie les images automatiquement en se reportant aux signaux de l'index Photo.

Après avoir réglé le caméscope en mode magnétoscope (→ 29)....


- 1 Régler le caméscope en mode lecture fixe juste avant le point où commencera le transfert d'image.
- 2 Régler [VCR FUNCTIONS] >> [PLAYBACK FUNCTIONS] >> [RECORD TO CARD] >> [YES].
 - La recherche commence à partir de la position actuelle de la cassette et les images portant les signaux de l'index Photo sont enregistrées sur la carte séquentiellement.
 - Lors de la copie, l'indication

 apparaît.

Pour arrêter le transfert d'images

Appuyer sur la touche [■].

• Pour d'autres notes, voir à la page 58.

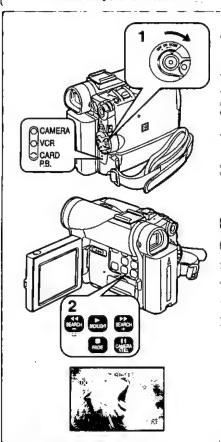


Lecture des fichiers enregistrés sur carte mémoire

Permet la lecture des fichiers enregistrés sur carte mémoire.

Lecture d'images fixes

- 1 Régler le caméscope en mode lecture de carte.
 - •Le voyant [CARD P.B.] s'allume.
 - La plus récente image fixe enregistrée sur la carte s'affiche.
- 2 Lancer la lecture.
- ➤: Lancement du diaporama (L'indication [SLIDED] s'affiche.)
- ▶►: Affichage de l'image suivante
- ◄: Retour à l'image précédente
- : Arrêt de la lecture
- II: Pause

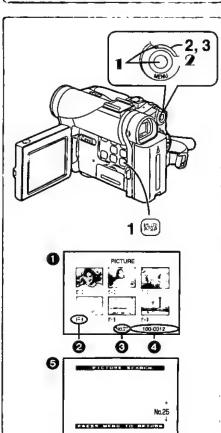


Sélection d'un fichier souhaité et visualisation

Après avoir réglé le caméscope en mode lecture de carte

- Appuyer sur la touche [MULTI].
 - Les images fixes enregistrées sur une carte mémoire s'affichent en mode d'écran multiple.
- 2 Tourner le cadran [PUSH] et sélectionner le fichier désiré.
 - •Le fichier sélectionné est encadré en rouge.
 - Après l'enregistrement de 7 fichiers ou plus, tourner le cadran [PUSH] pour afficher le fichier suivant. Il est également possible d'utiliser la touche [◄◄] ou [▶▶] plutôt que le cadran [PUSH].
- 3 Appuyer aussi bien sur le cadran [PUSH] ou appuyer sur la touche [MULTI].
 - •Le fichier sélectionné est visualisé sur l'écran tout entier.
- Taille du fichier
- Numéro du fichier
- 4 Nom du fichier

Utilisation du mode recherche de fichier

- Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [FILE SEARCH] >> [YES].
 - L'écran de recherche de fichier 5 apparaît.
- 2 Tourner le cadran [PUSH] pour sélectionner le numéro de fichier souhaité et appuyer sur le cadran [PUSH].
 - Le fichier correspondant au numéro sélectionné apparaît.
- Le menu d'accès rapide peut également être utilisé pour ce réglage (→ 18).
- Pour d'autres notes, voir à la page 59.

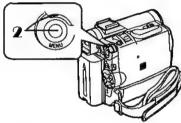



Copie d'images à partir d'une carte mémoire sur une cassette


Après avoir réglé le caméscope en mode lecture de carte (→ 36)..... Pour copier une image

- 1 Régler le sélecteur [TAPE/CARD] sur [TAPE].
- 2 Afficher l'image désirée enregistrée sur une carte mémoire.
 - Se reporter à "Sélection d'un fichier souhaité et visualisation".
- 3 Appuyer sur la touche [PHOTO SHOT].
 - Il faut environ 7 secondes pour copier une image fixe sur la cassette.
 - Pendant la copie, l'indication
 apparaît.

Pour copier toutes les images

- 1 Afficher la première image.
 - Si une image, autre que la première, est affichée, seules les images suivantes seront copiées.
- 2 Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [RECORD TO TAPE] >> [YES].
 - Pendant la copie, l'indication
 apparaît.
 - Il faut environ 7 à 11 secondes pour la copie de chaque image sur la cassette. Pour interrompre la copie en route, appuyer sur la touche [■].
- Avant de lancer un enregistrement sur une bande magnétoscopique, régler le caméscope sur [TAPE]. L'image sera enregistrée sur bande sur pression de la touche [PHOTO SHOT] à l'étape 3.
- Lors d'enregistrement d'images sur une bande magnéstoscopique, un signal d'index PhotoShot est automatiquement enregistré avec l'image.
- Même si vous modifiez un diaporama, l'ordre ne sera pas respecté lors de la copie d'images.
- Pour d'autres notes, voir à la page 58.

Caracteristrances Dandentientienes

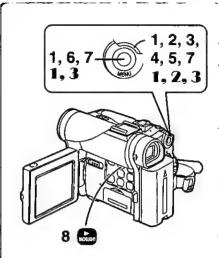









Diaporama

Les photos sauvegardées sur la carte mémoire peuvent être présentées en séquence à la manière d'un diaporama. Vous pouvez créer et éditer votre diaporama.

Sélection des images d'un diaporama

- 1 Régier [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES].
 - •L'écran d'édition de diaporama s'affiche.
- 2 Sélectionner [EDIT] >> [YES].
- 3 Tourner le cadran [PUSH] pour sélectionner une image, puis appuyer sur le cadran.
- 4 Tourner le cadran [PUSH] pour sélectionner l'ordre de présentation, puis appuyer sur le cadran.
 - Cette étape est sautée dans le cas où aucune image n'aurait été sélectionnée.
- 5 Tourner le cadran [PUSH] pour régler la durée de la présentation, puis appuyer sur le cadran.
 - présentation, puis appuyer sur le cadran.
 Les indicateurs de l'ordre de présentation tet de la durée s'affichent.
 - L'indication [●] ③ s'affiche sous les images sélectionnées pour le diaporama.
 - Pour sélectionner l'image suivante, recommencer les étapes 3 à 5 plus haut.
- 6 Appuyer sur la touche [MENU] pour mettre un terme au paramétrage du diaporama.
- 7 Après avoir sélectionné [PRESET] pour [SLIDE SHOW], appuyer sur la touche [MENU].
- Appuyer sur la touche [▶].
 L'indication [M.SLIDE▷] s'affiche.

Présentation en continu de toutes les images

Après avoir réglé [SLIDE SHOW] sur [ALL], appuyer sur la touche [▶].

- ●L'indication [SLIDE▷] s'affiche. ⑤
- Chacune des images demeure affichée environ 5 secondes, et ce à partir de la plus récente jusqu'à la dernière, après quoi la présentation est arrêtée.

Interruption du diaporama (pause)

Appuyer sur la touche [II].

L'indication [(M.) SLIDEII] s'affiche.

Arrêt du diaporama

Appuyer sur la touche [■].

Vérification de la sélection des images

Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES] >> [VERIFY] >> [YES].

 Seules les images sélectionnées s'affichent dans le mode multi-image dans l'ordre prédéfini.


Suppression de la sélection des images


- Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES].
- 2 Sélectionner [DELETE] >> [YES].
- 3 Sélectionner l'image que vous voulez supprimer, puis appuyer sur le cadran [PUSH].

Réinitialisation du paramétrage du diaporama

Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [SLIDE SHOW] >> [YES] >> [RESET] >> [YES] >> [YES].

- Les paramètres du diaporama sont réinitialisés.
- Pour d'autres notes, voir à la page 59.

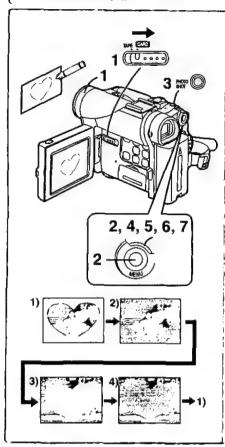

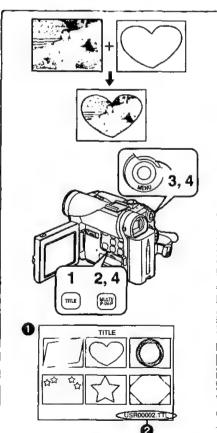

Création d'un titre

Il est possible de créer un titre et l'enregistrer sur une carte mémoire.

Sur le modèle PV-DC252 ou PV-DC252-K, faire glisser le sélecteur [TAPE/CARD] sur [CARD].

·L'indication [PICTURE] s'affiche.

Orienter le caméscope vers l'image que vous souhaitez utiliser pour la création d'un titre.

Mode magnétoscope:

Chercher l'image que vous voulez utiliser pour créer un titre et régler le caméscope sur le mode lecture fixe.

Régler [CARD SETUP] >> [CREATE TITLE] >> [YES].

Appuyer sur la touche [PHOTO SHOT].

Le titre est sauvegardé.

 Pour faire fonctionner PhotoShot à nouveau, sélectionner [RETURN]. Appuyer sur le cadran [PUSH] pour sélectionner

[LUMINANCE], et ensuite appuyer dessus.

Tourner le cadran [PUSH] pour régler le contraste du titre, et ensuite appuyer dessus. L'indication [COLOR] s'affiche.

Tourner le cadran [PUSH] pour sélectionner la couleur désirée, et ensuite appuyer dessus.

Sélectionner [RECORD], et ensuite appuyer sur le cadran (PUSH).

Sélection des couleurs

Si la sélection de la couleur est effectuée en tournant le cadran (PUSH) lors de la création d'un titre, il est possible de changer la couleur comme suit.

Couleur originale (la couleur de l'image capturée)

• Titrer dans la couleur originale où la partie sombre (partie noirâtre) de l'image capturée manque.

2) Présélectionner les couleurs (noir, bleu, vert, cyan, rouge, rose, jaune et blanc) Titrer dans une couleur présélectionnée dans laquelle la partie sombre (partie noirâtre) de l'image capturée manque.

3) Couleur d'origine (la couleur de l'image capturée)

 Titrer dans la couleur originale où la partie brillante de l'image capturée (partie blanchâtre) manque.

Présélectionner les couleurs (noir, bleu, vert, cyan, rouge, rose, jaune et blanc)

 Titrer dans une couleur présélectionnée où la partie brillante (partie blanchâtre) de l'image capturée manque.

Insertion d'un titre

Vous pouvez sélectionner un de vos titres original et l'afficher. (Il peut être affiché en mode caméra, mode magnétoscope et mode lecture carte.)

Appuyer sur la touche [TITLE].

Le titre qui a été créé en dernier est affiché.

Appuyer sur la touche [MULTI].

• Une liste de titres s'affiche.

Tourner le cadran [PUSH] pour sélectionner le titre souhaité. · Le titre sélectionné est encadré en rouge.

Appuyer sur le cadran [PUSH] ou appuyer sur la touche [MULTI].

Le titre sélectionné s'affiche.

En utilisant le sélecteur [TAPE/CARD], sélectionner la destination de l'enregistrement.

Mode caméra: TAPE ou CARD Mode magnétoscope: CARD Mode lecture de carte: TAPE

Appuyer sur la touche (PHOTO SHOT).

Une image fixe est enregistrée sous le titre qui a été introduit.


 Si vous enregistrez sur une cassette en mode enregistrement standard. mettre le sélecteur [TAPE/CARD] sur [TAPE] et appuyer sur la touche d'enregistrement.

2 Nom du fichier


Effacement d'un titre

Appuyer sur la touche [TITLE].

- L'indication (ACCESS) demeure affichée jusqu'à ce que les titres aient été complètement affichés. Lancer l'enregistrement après que l'indication ne soit plus affichée.
- Pour d'autres notes, voir à la page 59.

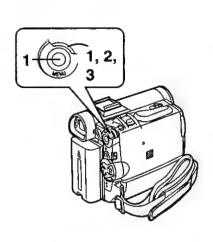



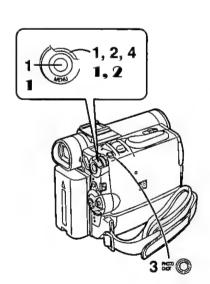

Protection des fichiers contre les effacements accidentels sur une carte mémoire

(Verrouillage de fichier)

Les fichiers qui vous sont précieux, enregistrés sur une carte mémoire, peuvent être verrouillés (pour les protéger contre tout effacement accidentel). (Même dans le cas où ils sont verrouillés, les fichiers seront effacés en cas de formatage de la carte mémoire.)

Se positionner en mode lecture de carte (→ 36).....

- 1 Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [FILE LOCK] >> [YES].
- 2 Tourner le cadran [PUSH] pour sélectionner [PICTURE] ou [TITLE], et ensuite appuyer dessus.
- Le menu [FiLE LOCK] est affiché.
 Tourner le cadran [PUSH] pour sélectionner le fichier à verrouiller et ensuite, appuver dessus.
 - L'indication [o est fixée sur le fichier sélectionné.
 - Appuyer à nouveau sur le cadran [PUSH] pour annuler.
- •Le verrouillage effectué sur ce caméscope n'est valide que sur cet appareil.
- Le menu d'accès rapide peut également être utilisé pour ce réglage (→ 18).

À propos de la languette de protection à l'écriture

La carte mémoire SD comporte une languette de protection à l'écriture. Si la languette a été glissée vers le côté marqué [LOCK], il ne sera pas possible ni d'y enregistrer des données ni d'en supprimer ou encore de formater la carte. Pour pouvoir effectuer ces opérations, glisser la languette dans la direction opposée.

Effacement des fichiers enregistrés sur une carte mémoire

En utilisant le caméscope, il est possible d'effacer les fichiers images fixes et les titres enregistrés sur une carte mémoire. Lorsqu'un fichier est effacé, il ne peut plus être rétabli.

Sur le modèle PV-DC252/PV-DC252-K, faire glisser le sélecteur [TAPE/CARD] à [CARD] pour sélectionner le support sur lequel se trouve les données devant être effacées.


Après avoir réglé le caméscope en mode lecture de carte (→ 36)....


Sélection et effacement d'un fichier

- 1 Régler [CARD FUNCTIONS] >> [DELETE CARD FILE] >> [DELETE FILE BY SELECTION] ou [DELETE TITLE BY SELECTION].
- 2 Tourner le cadran [PUSH] pour sélectionner le fichier que l'on désire effacer, et ensuite appuyer dessus.
 - · Le fichier sélectionné clignote.
 - Pour effacer plus d'un ficher, recommencer cette étape.
- 3 Appuyer sur la touche [PHOTO SHOT].
 - Un message de vérification apparaît.
- 4 Tourner le cadran [PUSH] pour sélectionner [YES], et ensuite appuyer dessus.
 - •Le fichier sélectionné est effacé de la carte mémoire.

Sélection et effacement de tous les fichiers

- Régler [CARD FUNCTIONS] >> [DELETE CARD FILE] >> [DELETE ALL FILES].
 - Un message de vérification apparaît.
- 2 Tourner le cadran [PUSH] pour sélectionner [YES], et ensuite appuyer dessus.
 - Un fichier verrouillé ne peut pas être effacé.
- Le menu d'accès rapide peut également être utilisé pour ce réglage (→ 18).

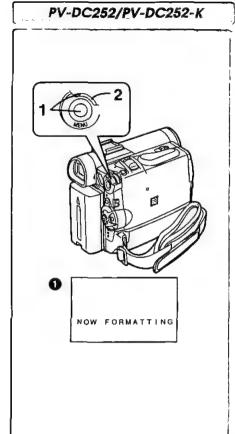

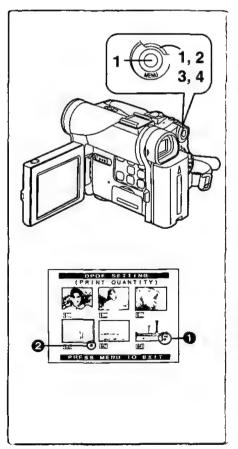

Formatage d'une carte mémoire

Si une carte mémoire devient illisible pour le caméscope, le formatage peut la rendre réutilisable. Le formatage effacera toutes les données enregistrées sur une carte mémoire.

Après avoir réglé le caméscope en mode lecture de carte (→ 36).....

- 1 Régier [CARD FUNCTIONS] >> [CARD EDITING] >> [CARD FORMAT] >> [YES].
- 2 Sélectionner [YES] et appuyer sur le cadran [PUSH].
- Durant le formatage, l'indication [NOW FORMATTING] 1 apparaît.
- Lorsque le formatage est terminé, l'écran devient blanc.
- Même si les fichiers ont été verrouillés, ils seront effacés durant le formatage
- Il est possible qu'une carte mémoire formatée sur ce caméscope ne puisse pas être utilisée sur un autre appareil. Dans un tel cas, formater la carte sur l'appareil dans lequel elle est utilisée. Prendre soin que les fichiers importants aient été sauvegardés sur ordinateur, etc. avant de procéder au formatage.
- Il est possible qu'une carte formatée sur un autre dispositif ne puisse être prise en charge par le caméscope ou que le temps d'écriture soit long. Il est recommandé de formater la carte directement sur le dispositif sur lequel elle est utilisée.
- Pour d'autres notes, voir à la page 58.

Réglage DPOF

Il est possible d'écrire, sur une carte mémoire, les images qui doivent être imprimées, le nombre de tirages et d'autres informations concernant l'impression (réglage DPOF). "DPOF" signifie Format de commande d'impression numérique et, puisque les données d'impression peuvent être ajoutées aux images de la carte mémoire, la carte mémoire peut être utilisée avec tous les systèmes qui prévoient le DPOF.


Après avoir réglé le caméscope en mode lecture de carte (→ 36).....

- 1 Régler [CARD FUNCTIONS] >> [CARD EDITING] >> [DPOF SETTING] >> [YES].
- 2 Tourner le cadran [PUSH] pour sélectionner [VARIABLE], et ensuite appuver dessus.
 - Pour l'impression des images l'une après les autres, sélectionner [ALL 1]; si elles ne sont pas toutes imprimées, sélectionner [ALL 0].
- 3 Tourner le cadran [PÚSH] pour sélectionner l'image, et ensuite appuyer dessus.
- 4 Tourner le cadran [PUSH] pour sélectionner le nombre d'impressions 1, et ensuite appuyer dessus.
 - Les images encadrées seront réglées en DPOF et [●] ② s'affichera.
 Le symbole [●] indique les images pour lesquelles une ou plusieurs impressions ont été réglées.
- 5 Répéter les étapes 3 à 4 pour régler d'autres images, et appuyer sur la touche [MENU] lorsque le réglage est terminé.

Vérification du réglage DPOF

Sélectionner [VERIFY] à l'étape 2 ci-dessus. Les images pour lesquelles une ou plusieurs impressions sont réglées en DPOF sont reproduites en continuité.

- Le symbole d'impression est basé sur DPOF (Digital Print Order Format).
- Le menu d'accès rapide peut également être utilisé pour ce réglage (→ 18).
- Pour d'autres notes, voir à la page 59.

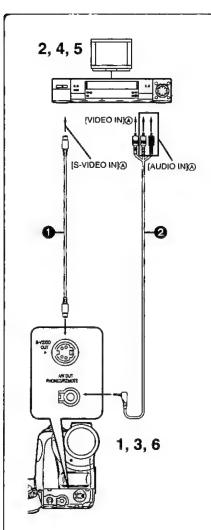

Copie de cassette DV sur une cassette S-VHS ou VHS (Doublage)

Après avoir branché le caméscope aux prises d'entrée s-vidéo, vidéo et audio (A) du magnétoscope comme illustré à gauche, entamer les procédures suivantes.

 S'assurer d'appuyer sur la touche [OSD] de la télécommande avant de copier de manière à ce qu'il n'y ait plus d'indications visibles sinon le compteur affiché de la cassette et les indications de fonctions seraient également copiées.

[Caméscope]

1 Insérer la cassette enregistrée.

[Magnétoscope]

- 2 Introduire une cassette vierge munie d'une languette de protection anti-effacement.
 - Si plusieurs réglages (tels que sortie extérieure, vitesse de la cassette, etc.) sont requis, consulter le mode d'emploi du magnétosocope.

[Caméscope]

- 3 Appuyer sur la touche [▶] pour commencer la lecture. [Magnétoscope]
- 4 Commencer l'enregistrement.
- 5 Appuyer sur la touche de pause ou d'arrêt pour arrêter l'enregistrement.

[Caméscope]


6 Appuyer sur la touche [■] pour arrêter la lecture.


1 Fil S-vidéo (non fourni)

2 Fil A/V (fourni)

ATTENTION:

Échanger et/ou copier des enregistrements non autorisés et protégés par des droits d'auteurs est une infraction.

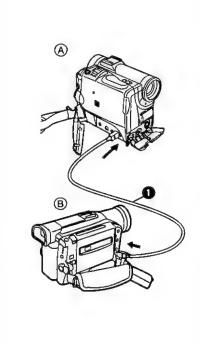

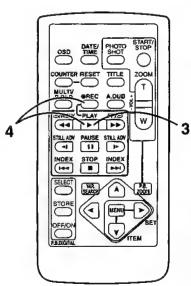

Utilisation du caméscope avec un appareil vidéo numérique (Doublage)

En branchant ce caméscope avec un autre appareil vidéo numérique (tel qu'un autre caméscope du même format/modèle) qui a une prise d'entrée/sortie DV (i.LINK) et qui utilise un câble d'interface DV 4-broches à 4-broches PV-DDC9 (en option) . des images et des sons de haute qualité peuvent être doublés en mode numérique.

[Appareil source (A)]

1 Insérer la cassette enregistrée et régler le caméscope en mode magnétosocope.

[Appareil d'enregistrement (B)]

2 Insérer une cassette à utiliser pour le doublage et régler le caméscope en mode magnétosocope.
[Appareil source (A)]

3 Appuyer sur la touche [▶] pour commencer la lecture. [Appareil d'enregistrement (B)]

- 4 Tout en appuyant sur la touche [REC], appuyer sur la touche [PLAY]. (Les deux touches se trouvent sur la télécommande.)
 - ·L'enregistrement commence.

Arrêt du doublage

Appuyer d'abord sur la touche [■] de l'appareil d'enregistrement, puis appuyer sur la touche [■] de l'appareil source.

ATTENTION:


Échanger et/ou copier des enregistrements non autorisés et protégés par des droits d'auteurs est une infraction.

• Pour d'autres notes, voir à la page 59.

PV-DC252/PV-DC252-K 3 n i⇔⊪sa 107 THE Books to seem one of the down G726 Preoder 3





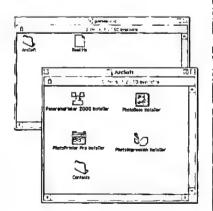

Utilisation du logiciel avec un ordinateur

Une image mémorisée dans une cassette DV peut être transférée sur votre PC.

 Lors de l'utilisation de modèles PV-DC152 et PV-DC152-K, le transfert PhotoShot d'une cassette DV exige l'utilisation d'une trousse optionnelle PV-DRS2 contenant le logiciel de liaison PhotoVu Link et un câble RS-232C. (→ 65)

Configuration minimale requise par le système pour ArcSoft

Lecteur CD-ROM (pour l'installation).

(pour Logiciel ArcSoft)

Pour Windows MD

IBM PC/AT ou compatible

 Processeur Intel Pentium II: 266 MHz ou plus
 Windows^{MD} XP, Windows^{MD} Me, Windows^{MD} 98, Windows^{MD} 95, Windows^{MD} 2000 Professionnel

Mémoire vive: 64 Mo ou plus

• Espace disponible minimum sur disque dur de 300 Mo

• Écran couleur à haute définition (16 bits ou plus)

Lecteur CD-ROM (pour l'installation)

Souris ou autre dispositif de pointage

Pour Macintosh

- Mac OS 8.6 9.1
- Mémoire vive: 64 Mo ou plus
- Espace disponible minimum sur disque dur de 180 Mo
- Écran couleur à haute définition (16 bits ou plus)

(Pilote USB pour carte mémoire SD)

Pour WindowsMD

IBM PC/AT ou compatible

Processeur Intel Pentium II: 266 MHz ou plus
 Microsoft Windows^{MD} XP, Windows^{MD} Me, Windows^{MD} 98 Deuxième Édition, Windows^{MD}2000 Professionnel préinstallé sur PC avec port USB.

 Microsoft et Windows sont des marques déposées ou des marques commerciales de Microsoft Corporation aux États-Unis et/ou dans d'autres pays.

Macintosh est une marque déposée de Apple Computer, Inc.

 Tous les noms des produits et des marques sont des marques commerciales ou déposées de leur propriétaire respectif.

Se reporter à la page 46 pour la configuration du pilote USB.

Installation du logiciel (Windows)

Allumer l'ordinateur et lancer Windows.

Introduire le CD-ROM fourni dans le lecteur de CD-ROM.

Sélectionner le logiciel à installer à partir du [Setup Menu].

Pilote USB (→ 46):

Le logiciel pilote USB permet de transférer directement des images de la carte mémoire à un ordinateur. (Se reporter à la page 46 pour les instructions relatives à l'installation du pilote USB.)

Décodeur G726^a:

Logiciel pour décodeur G726 qui permet l'écoute de MPEG4 avec Windows Media Player.

*Ce logiciel n'est pas requis.

Logiciel ArcSoft (→ 45):

PhotoImpression 3.0, Photo Base 3.0, Panorama Maker 3.0 et PhotoPrinter 2000 Pro sont inclus.

Sulvre les instructions sur l'écran de l'ordinateur jusqu'à ce que l'installation soit terminée.

La fenêtre de réglage disparaîtra lorsque l'installation aura été complétée.


Nota:

Si une fenêtre n'apparaît pas automatiquement, cliquer sur l'icône "Start" du bureau, puis cliquer sur "Run". Lorsque la boîte de dialogue "Run" s'ouvre, saisir "D:\InstMenu.exe" et cliquer sur "OK". ("D" n'est valide que si la lettre D est assignée au lecteur de CD-ROM.)


Installation du logiciel (Macintosh)

- Allumer l'ordinateur et lancer Macintosh.
- Introduire le CD-ROM fourni dans le lecteur de CD-ROM.
- Cliquer deux fois sur l'icône d'un CD-ROM qui apparaît.
- Cliquer deux fois sur le logiciel à installer à partir de [ArcSoft]. Suivre les instructions sur l'écran de l'ordinateur jusqu'à ce que l'installation soit terminée.



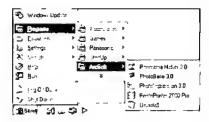



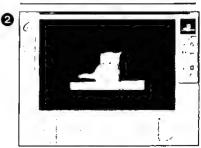





Logiciel ArcSoft

Le logigiel ArcSoft comprend 4 types de logiciel.

Avant de commencer...

- 1 Ouvrir [Start] >> [Programs] >> [ArcSoft] >> [Panorama Maker 3.0] ou [PhotoImpression 3.0] ou [PhotoBase 3.0] ou [PhotoPrinter 2000 Pro].
- Panorama Maker 3.0 (Windows, Mac)
 - Programme de montage photographique facile à utiliser pour constituer une vue panoramique à partir de plusieurs photos.
- 2 PhotoImpression 3.0 (Windows, Mac)
 - Programme de montage photographique, d'utilisation ultra facile, permettant d'éditer, de rehausser ou de retoucher des images ou encore d'y ajouter des effets spéciaux. Ce programme propose également des solutions créatives pour la création de cartes de souhaits et de calendriers.
- 1 PhotoBase 3.0 (Windows), PhotoBase 2.0 (Mac)
 - Programme permettant de créer des albums d'images, vidéo, audio ou autres fichiers électroniques pour les consulter, accéder et gérer facilement.
- 4 PhotoPrinter 2000 Pro (Windows), PhotoPrinter Pro (Mac)
 - Programme permettant de monter des images de tailles diverses et de créer des collages ou des albums, le tout sur une même page.


Pour informations sur le logiciel ArcSoft:

Tél.: 1-510-440-9901
Téléc.: 1-510-440-1270
Site Web: www.arcsoft.com
Courriel: support@arcsoft.com


Voir les informations "Help" (Aide) en ce qui concerne les applications et les messages d'erreurs.




VFA0366




LSFT0489

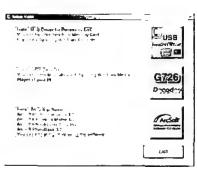

4

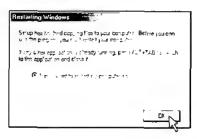

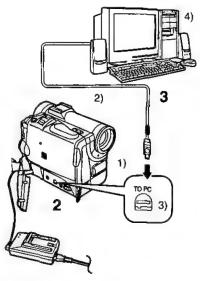

Utilisation de l'ensemble de connexion USB

Configuration du système

Le pilote USB peut être installé sur un ordinateur PC/AT compatible fonctionnant sous Microsoft Windows^{MD} XP, Windows^{MD} Me, Windows^{MD}98 Deuxième Édition, Windows^{MD}2000 Professionnel.

Pilote USB

Pour Windows^{MD}

- Ordinateur IBM PC/AT ou compatible
- Processeur Intel Pentium II: 300 MHz ou supérieur recommandé
 Microsoft Windows^{MD} XP, Windows^{MD} Me, Windows^{MD} 98 Deuxième Édition, Windows MD 2000 Professionnel préinstallé sur PC avec port USB. Carte vidéo avec possibilité de couleur 16 bits avec définition 800×600.
- Mémoire vive: 64 Mo ou plus
- Espace libre d'au moins 2 Mo sur disque dur
- Lecteur de disques: Lecteur CD-ROM
- Ports: Connecteur USB
- · Autres: Souris ou autre dispositif de pointage

Installation du pilote de périphérique USB

Pour installer le pilote USB, il doit y avoir au moins 2 Mo d'espace libre sur le disque dur. Avant de procéder à l'installation, vérifier l'espace disponible sur le disque.


- Introduire le CD-ROM fourni dans le lecteur de CD-ROM.
 - [Setup Menu] apparaît.
- Sélectionner le logiciel à installer à partir du [Setup Menu]. Le programme d'installation s'exécute.
- 3 Suivre les instructions qui s'affichent à l'écran pour procéder à l'installation.
 - •Lire attentivement le contrat de licence qui s'affiche. Si vous acceptez les modalités et conditions, cliquez sur [Yes]. Si vous cliquez sur [No], l'installation est automatiquement interrompue.
- 4 Cliquer sur [OK] lorsque la boîte de dialogue [Restarting Windows] s'affiche.
 - Pour terminer l'installation, redémarrer l'ordinateur.
 - Si d'autres logiciels ont été sélectionnés, le processus d'installation se poursuit après le redémarrage de l'ordinateur.
- Si le pilote n'est plus nécessaire, se reporter à la page 51.
- Après une mise à jour du système d'exploitation, il sera nécessaire de mettre le pilote USB à jour également.

Connexion du caméscope à un ordinateur

Installer le pilote USB (ci-dessus) avant de procéder à la connexion. Avant de faire les raccordements, mettre hors marche tous les appareils concernés.


- Installer le pilote USB fourni. (ci-dessus)
- Mettre la carte mémoire dans le caméscope, puis sélectionner le mode de lecture de carte.
 - Faire la connexion avec un câble USB.
 - Mode connexion à un PC.
 - Caméscope
- 2) Câble de connexion USB
- 3) Connecteur USB
- 4) Ordinateur personnel (vendu séparément)
- Une fois les connexions faites, mettre les appareils en marche.
- Lors de son démarrage initial, Windows installe automatiquement le pilote approprié pour la prise en charge du caméscope.
- Si un ensemble de connexion USB est utilisé, il est recommandé de faire fonctionner le caméscope sur le secteur (adaptateur fourni).
- Lorsque le pilote USB est installé et que le câble de connexion USB est branché au caméscope, ouvrir [My Computer] ou [Windows Explorer] pour vérifier quel lecteur est affiché comme lecteur de disque amovible (seulement lorsqu'une carte mémoire est insérée dans le caméscope). Cela permet l'utilisation comme un lecteur de disquette et permet d'utiliser les méthodes de copier et glisser.



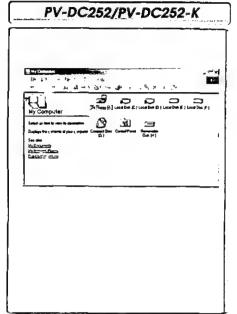

Vérification de la prise en charge du caméscope par l'ordinateur

- S'assurer que l'icône [Removable Disk] a été ajouté dans [My Computer].
 - La désignation du lecteur (H: etc.) peut varier d'un ordinateur à un autre.
- Si le caméscope est connecté à l'ordinateur avant que le pilote n'ait été installé ou si le pilote incorporé au système Windows est utilisé, ce pilote pourrait ne pas être en mesure de prendre le caméscope en charge.
- Dans le cas où le tout ne fonctionnerait pas convenablement, vérifier si le pilote a été installé correctement et, au besoin, procéder à la mise à niveau du pilote.

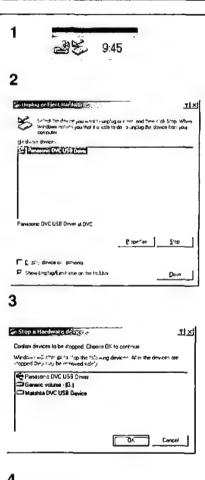

Déconnexion du câble USB

Si le câble USB est déconnecté alors que l'ordinateur est en marche, un message d'erreur s'affiche. Dans un tel cas, cliquer sur [OK] et fermer la boîte de dialogue. Suivre les instructions ci-après pour déconnecter le câble.

- Double-cliquer sur l'icône dans la barre de tâches.
 La boîte de dialogue de déconnexion s'affiche.
- 2 Sélectionner [Panasonic DVC USB Driver], puis cliquer sur
- 3 S'assurer que [Panasonic DVC USB Driver] est sélectionné, puis cliquer sur [OK].
- 4 Cliquer sur [OK].

[Stop].

- Il est maintenant possible de déconnecter le câble.
- Certains systèmes d'exploitation, tel que Windows^{MD} 98 Deuxième Édition, peuvent ne pas afficher l'icône de déconnexion dans leur barre de tâches.
 (Il se peut que le système ait été paramétré pour désactiver cet affichage.)
 S'assurer que le témoin [ACCESS] du caméscope est éteint, puis déconnecter le câble.

ATTENTION:

Si le câble USB est déconnecté alors que le témoin [ACCESS] est allumé, les données de la carte pourraient être endommagées.

1

3


Description

Concerne

Con



Unidate Heren Drove Washed

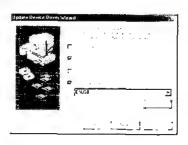



Vérification et mise à jour du pilote

Sous Windows 98 Deuxjème Édition


La vérification et la mise à jour doivent se faire alors que le caméscope est connecté à l'ordinateur.

Vérification du pilote (Le caméscope doit être connecté à l'ordinateur.)

- 1 Sélectionner [Start] >> [Settings] >> [Control Panel], double-cliquer sur [System], sélectionner l'onglet [Device Manager], puis vérifier que [Panasonic DVC USB Driver] et [Panasonic DVC Port Driver] se trouvent dans [Universal Serial Bus controllers] du [Device Manager].
 - Dans le cas où [DVC] est affiché dans [Other devices] sous l'onglet
 [Device Manager], il est recommandé de mettre le pilote à jour. Pour ce faire, suivre les instructions ci-dessous.

Mise à jour du pilote

- Sélectionner [DVC] dans [Other devices] du [Device Manager], puis cliquer sur [Properties].
- 2 Sélectionner [Driver], puis cliquer sur [Update Driver].
- 3 Sélectionner [Search for a better driver than the one your device is using now (Recommended)], puis cliquer sur [Next].
- Sélectionner [Specify a location], indiquer l'emplacement du pilote et le nom de fichier du pilote, puis cliquer sur [Next].
 L'emplacement du pilote (dossier) varie selon l'ordinateur utilisé.
 (Par exemple: C:\\WINDOWS\\NF\MTUSDV98.INF)
- Cliquer sur [Finish] dans la boîte de dialogue qui s'affiche.
 La mise à jour du pilote est terminée.

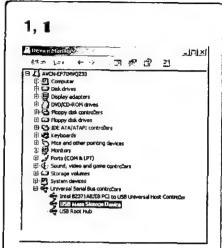

2



3



4



Sous Windows 2000 Professionnel

La vérification et la mise à jour doivent se faire alors que le caméscope est connecté à l'ordinateur.

Vérification du pilote (Le caméscope doit être connecté à l'ordinateur.)

- Sélectionner [Start] >> [Settings] >> [Control Panel], double-cliquer sur [System], sélectionner [Device Manager] sous l'onglet [Hardware], puis vérifier que [Panasonic DVC USB Driver] et [USB Root Hub] se trouvent dans [Universal Serial Bus controllers] du [Device Manager] sous [Hardware].
 - Dans le cas où [USB Mass Storage Device] est affiché dans [Universal Serial Bus controllers] sous l'onglet [Device Manager], il est recommandé de mettre le pilote à jour. Pour ce faire, suivre les instructions ci-dessous.


Mise à jour du pilote

- Sélectionner [USB Mass Storage Device] dans [Device Manager].
- 2 Sélectionner [Driver], puis cliquer sur [Update Driver].
- 3 Sélectionner [Search for a suitable driver for my device (recommended)], puis cliquer sur [Next].
- 4 Sélectionner [Specify a location], indiquer l'emplacement du pilote et le nom de fichier du pilote, puis cliquer sur [Next].
 - L'emplacement du pilote (dossier) varie selon l'ordinateur utilisé.
 (Par exemple: C:\\WINDOWS\INF\MTUSDV2K.INF)
- 5 Cliquer sur [Finish] dans la boîte de dialogue qui s'affiche.


•La mise à jour du pilote est terminée.

Contractantiforms Deputeroffices


1, 1

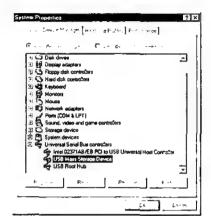

2

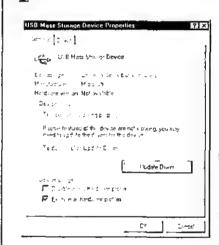

3

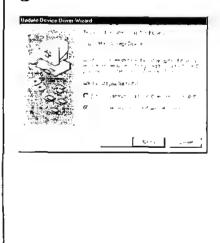

Sous Windows Me

La vérification et la mise à jour doivent se faire alors que le caméscope est connecté à l'ordinateur.


Vérification du pilote

(Le caméscope doit être connecté à l'ordinateur.)

- 1 Sélectionner [Start] >> [Settings] >> [Control Panel], double-cliquer sur [System], sélectionner l'onglet [Device Manager], puis vérifier que [Panasonic DVC USB Driver] se trouve dans [Universal Serial Bus controllers] du [Device Manager].
 - Dans le cas où [USB Mass Storage Device] est affiché sous [Universal Serial Bus controllers] de l'onglet [Device Manager], il est recommandé de mettre le pilote à jour. Pour ce faire, suivre les instructions ci-dessous.

Mise à jour du pilote

- Sélectionner [USB Mass Storage Device] dans [Universal Serial Bus controllers] du [Device Manager], puis cliquer sur [Properties].
- 2 Sélectionner [Driver], puis cliquer sur [Update Driver].
- 3 Sélectionner [Specify the location of the driver (Advanced)], puis cliquer sur [Next].
- 4 Sélectionner [Specify a location] dans [Search for a better driver than the one your device is using now. (Recommended)], indiquer l'emplacement du pilote et le nom de fichier du pilote, puis cliquer sur [Next].
 - L'emplacement du pilote (dossier) varie selon l'ordinateur utilisé.
 (Par exemple: C:\\WINDOWS\INF\MTUSDVME.INF)
- 5 Cliquer sur [Finish] dans la boîte de dialogue qui s'affiche.
 - •La mise à jour du pilote est terminée.

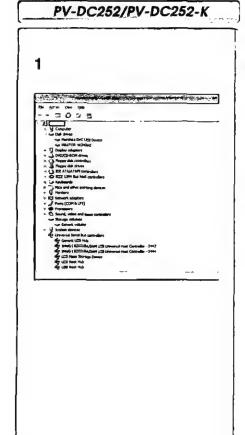


Sous Windows XP

Vérifier le pilote lorsque le caméscope est connecté à l'ordinateur.

- Vérification du pilote (Le caméscope doit être connecté à l'ordinateur.)
- 1 Sélectionner [Start] >> [Control Panel] >> [Performance and Maintenance], double-cliquer sur [System], puis sélectionner [Device Manager] sous l'onglet [Hardware].

S'assurer que les pilotes suivants fournis avec Windows s'affichent:

- 1. Matsushita DVC USB Device
- 2. Generic Volume
- 3. USB Mass Storage Device

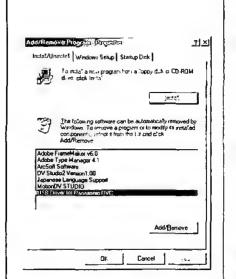

Désinstallation du pilote ou du logiciel

- Désinstallation du logiciel
- 1 Cliquer sur [Start] >> [Settings] >> [Control Panel].
- 2 Double-cliquer sur [Add/Remove Programs] dans [Control Panel].
- 3 Sélectionner le logiciel d'application que vous souhaitez retirer.
- Désinstallation du logiciel (Sous Windows XP)
- Cliquer sur [Start] >> [Control Panel] >> [Pick a Category].
- Cliquer sur [Add or Remove Programs] dans [Pick a Category].
- 3 Sélectionner le logiciel d'application que vous souhaitez retirer.
- Désinstallation du logiciel Arcsoft
- 1 Sélectionner [Arcsoft Software].
- Désinstallation du pilote USB
- 1 Sélectionner [USB Driver for Panasonic DVC].

La procédure de désinstallation varie selon le système d'exploitation. Se reporter au manuel d'utilisation du système.

Remarques (PV-DC252/PV-DC252-K)

- Ne pas déconnecter le câble USB pendant que le voyant de marche du caméscope est allumé. Cela pourrait "figer" le logiciel ou détruire les données en cours de transfert. Se reporter au manuel d'utilisation du caméscope.
- Il est recommandé de faire fonctionner le caméscope sur le secteur (adaptateur fourni) lorsqu'un câble USB est connecté. En effet, des données pourraient être perdues dans le cas où la batterie deviendrait déchargée pendant un transfert
- Ne pas supprimer les dossiers qui se trouvent sur la carte mémoire (dossier d'images, dossier DPOF, dossier des titres, etc.). S'ils étaient supprimés, la carte mémoire pourrait ne pas être reconnue.

À propos de la carte mémoire SD et de la carte MultiMediaCardMC

Carte mémoire SD

La carte mémoire SD (fournie) est pratiquement de la même taille que la carte MultiMediaCard^{MC}. Il s'agit d'une carte mémoire externe disponible avec des capacités de mémoire supérieures.

Elle dispose d'une languette de protection pour éviter l'enregistrement de données et le formatage de carte, ainsi qu'une fonction de protection des droits d'auteur.

Le logo SD est une marque de commerce.

Carte MultiMediaCardMC

La carte MultiMediaCardMC est une carte mémoire compacte, légère et extractible.

 Toutes les autres sociétés et noms de produits figurant dans ce manuel sont des marques de commerce ou des marques déposées enregistrées par les corporations respectives.

Fichiers sauvegardés sur carte mémoire SD ou carte MultiMediaCard MC

Avec ce caméscope, il n'est peut être pas possible de lire les fichiers enregistrés et créés à partir d'autres équipements ou vice versa. Pour cette raison, vérifier au préalable la compatibilité des équipements.


À propos de la compatibilité des fichiers sauvegardés sur carte mémoire

Les fichiers de données d'images enregistrés sur "cartes mémoire SD" ou "cartes MultiMediaCard" sont conformes avec les DCF (Design Rules for Camera Files Systems universal standard) établies par JEITA (Japan Electronics and Information Technology Industries Association).

 Si on tente de lire les fichiers enregistrés avec ce caméscope sur d'autres équipements ou vice versa de lire des fichiers enregistrés à partir d'autres équipements sur ce caméscope, il ne sera peut être pas possible de les lire. Vérifier au préalable la compatibilité avec les autres équipements.

À propos de la structure du dossier lors de l'utilisation de la carte mémoire dans l'ordinateur

 Si vous insérez dans votre PC une carte mémoire sur laquelle des données ont été sauvegardées, le répertoire des dossiers devrait s'afficher comme ci-dessous.

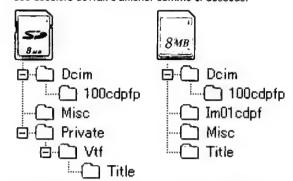

[100cdpfp]:

Les images de ce dossier (Imga0001.jpg, etc.) sont enregistrées au Format JPEG. Ce dossier contient des fichiers avec des images réglées par des données DPOF.

[Title]:


[Misc]:

Ce dossier contient les données des titres originaux (Usr00001.jpg, Usr00001.ttl, etc.) En mode carte, le caméscope sauvegarde automatiquement

les images sous un fichier numéroté (Imga0001.jpg, etc.). Les numéros de fichiers sont enregistrés avec chaque image numérotée séquentiellement.

La capacité mémoire inscrite sur l'étiquette de la carte mémoire SD correspond à la capacité mémoire totale. Une portion de cette capacité est utilisée pour la protection et la gestion des droits d'auteur et toute la capacité n'est pas disponible à titre de mémoire pour un caméscope, un ordinateur personnel ou autre dispositif. Capacité mémoire disponible:

Carte 8 Mo: environ 6 800 000 octets

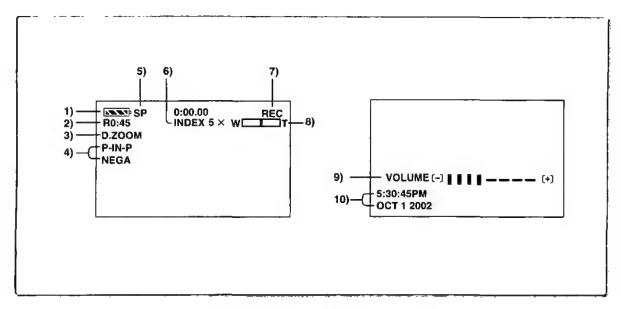

Autres

Indications

Les différentes fonctions et conditions du caméscope devraient s'afficher sur l'écran.

1) Autonomie de la batterie [

- Lorsque la batterie est faible, l'indication change. Lorsque la batterie est complètement déchargée, l'indication L 📑 (🚃) clignote.
- Lorsque vous utilisez l'adaptateur secteur, il se peut que l'indication [apparaisse, mais cela ne signifie rien dans ce cas.

2) Temps d'enregistrement disponible [R0:00]

- •Le temps restant sur la cassette est indiqué en minutes. Lorsqu'il arrive à moins de 3 minutes. l'indication commence à clignoter.
- Zoom numérique [D.ZOOM] (→ 22) Lecture zoom [ZOOM 5×] (→ 32)

4) Fonction des effets numériques


- Mode image multiple (→ 28) MULTI:
- P-IN-P: Mode image sur image (→ 28)
- ·WIPE: Mode volet (→ 27, 32)
- Mode mixage (→ 27, 32) MIX:
- STROBE: Mode stroboscopique (→ 27, 32)
- GAIN-UP: Mode accroissement du gain (→ 27)
- TRAIL: Mode effet traînée (→ 27, 32)
- MOSAIC: Mode mosaïque (→ 27, 32)
- MIRROR: Mode miroir (→ 27, 32)
- ●NEGA: Mode négatif (→ 27, 32)
- SEPIA: Mode sépia (→ 27, 32)
- MONO: Mode noir et blanc (→ 27, 32)
- SOLARI: Mode solarisation (→ 27, 32)
- Sélecteur de vitesse d'enregistrement
 - ·SP: Mode standard (→ 19)
 - Mode vitesse de défilement lente (→ 19) ·LP:

 Lorsque les signaux de l'index sont enregistrés, l'indication [INDEX] clignote pendant quelques instants. (→ 31)

Recherche nombre [S1] (→ 31)

- Ce chiffre indique le numéro de la scène qui doit être lue en comptant à partir de l'avant de la scène courante.
- 7) Indications de fonctionnement de bande
 - Enregistrement (→ 20) REC:
 - ●PAUSE: Enregistrement interrompu momentanément
 - $(\rightarrow 20)$
 - •⊳: Lecture/recherche caméra vers l'avant $(\rightarrow 29)$
 - •⊲: Recherche caméra vers l'arrière (→ 29)
 - •11: Lecture d'image fixe (→ 30)
 - DD: Lecture avance rapide/repérage (→ 29)
 - **4**4: Lecture rebobinage/rétrospective (→ 29)
 - •ID: Lecture ralentie en direction normale (→ 30)
 - •<1: Lecture ralentie vers l'arrière (→ 30)
 - I I I > : Lecture image fixe direction normale (→ 30)
 - **411**: Lecture image fixe vers l'arrière (→ 30)
 - DDI: Recherche index vers l'avant (→ 31)
 - Idd: Recherche index vers l'arrière (→ 31)
 - •CHK: Vérification d'enregistrement (→ 20)

 - A.DUB ▷:Doublage audio (→ 33)
 - A.DUB II:Pause de doublage audio (→ 33)
 - PHOTO: Enregistrement en mode PhotoShot (→ 21)
 - BLANK: Recherche des blancs (→ 30)
 - Lecture en reprise (→ 29) •R ▷:
 - •2×▷▷: Recherche à vitesse variable (→ 29)
- 8) Incrément du zoom
 - Lorsque la touche [W/T] zoom est relevé ou pressé, l'indicateur du grossissement apparaît. (→ 21, 22)
- 9) Volume du son
 - Utiliser cette indication pour régler le volume du son à partir du haut-parleur incorporé ou du casque. (→ 29)
- 10) Indication date/heure (→ 19, 55)

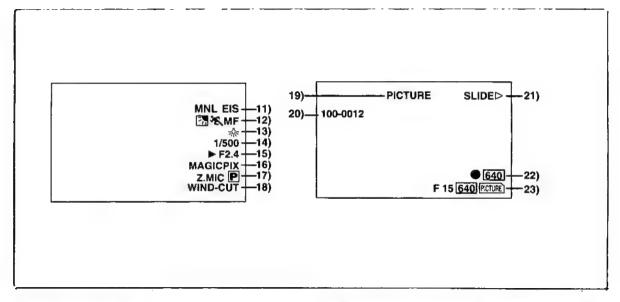

11) Mode d'enregistrement

 AUTO: Ceci apparaît lorsque le commutateur du sélecteur de mode est placé sur [AUTO].

 MNL: Ceci apparaît lorsque le commutateur du sélecteur de mode est placé sur [MANUAL].
 (→ 24, 25, 26)

Stabilisateur d'image électronumérique [EIS] (→ 22) Affichage entrée du doublage audio [MIC/AV IN] (→ 33)

Mode d'enregistrement audio [12bit/16bit] (→ 19)

12) Mise au point manuelle [MF] (→ 25) Mode contre-jour ([]] (→ 23)

Mode de réglage automatique de l'exposition

★ : Mode sports (→ 24)
 Mode portrait (→ 24)

Mode éclairage faible (→ 24)

• Mode projecteur (→ 24)
• Mode mer et neige (→ 24)

13) Mode d'équilibre du blanc

•AWB: Mode équilibre du blanc automatique (→ 26)

 ► La: Dernier réglage d'équilibre du blanc effectué manuellement (→ 26)

●篇: Mode éclairage fluorescent (→ 26)

● ¥:: Mode extérieur (→ 26)

 ♠: Mode intérieur (enregistrement sous lumière incandescente) (→ 26)

14) Vitesse d'obturation [1/500] (→ 25)

15) Valeur d'iris [F2.4] (Nombre F) (→ 25)

16) Mode MAGICPIX [MAGICPIX] (→ 23)

17) Mode PhotoShot progressif [[P]] (→ 21)

18) Atténuation du bruit du vent [WIND-CUT] (→ 24)

19) Affichage de type de fichier [PICTURE/TITLE] (→ 36, 39)

20) Affichage de nom de fichier (→ 36)

21) Indications des fichiers sauvegardés sur carte mémoire 1 (mode CARD P.B.)

•SLIDED: Diaporama (→ 38)

•SLIDEII: Diaporama – pause (→ 38)

M.SLIDED: Diaporama – lecture à la demande (→ 38)
 M.SLIDEII: Diaporama – pause, lecture à la demande

(→ 38)

22) Indications des fichiers sauvegardés sur carte mémoire 2 (mode CARD P.B.)

Taille d'image [640] (→ 34, 36)

Lorsque vous reproduisez une scène enregistrée sur un caméscope avec une spécification de taille d'image différente de celle indiquée ci-dessus, les indications suivantes devraient s'afficher. Si la taille de l'image se situe entre 640 pixels et 800 pixels, l'indication [[640]] s'affichera;

Nombre d'impressions DPOF [00] (→ 41)
 Paramètre DPOF et diaporama

●(Blanc): Paramétrage DPOF terminé (1 image ou plus) (→ 41)

(Vert): Paramétrage du diaporama terminé (→ 38)
 (Bleu): Paramétrages DPOF (1 image ou plus) et du diaporama terminés (→ 38, 41)

23) Indications des fichiers sauvegardés sur carte mémoire 3 (mode caméra)

 Qualité d'image de carte PhotoShot [F/N/E] (→ 34) (Enregistrement de carte PhotoShot) Les abréviations respectives sont [F] pour Fine (haute résolution), [N] pour Normal (résolution moyenne) et [E] pour Economy (basse résolution).

Carte PhotoShot (enregistrement en cours) [PRTURE] (rouge) (→ 34)

Carte mémoire non insérée [ﷺ] (clignotant en rouge) (→ 34)

• Carte PhotoShot prête pour l'enregistrement [PETURE] (cyan) (→ 34)

Numéro du fichier [No.000] (→ 36)

Carte PhotoShot (images restantes) [000] (→ 34)

• Verrouillage [o→] (→ 40)

Modification du mode d'affichage du compteur

En changeant [C.DISPLAY] à partir du sous-menu [DISPLAY SETUP], il est possible de changer le mode d'affichage du compteur par indication compteur de cassette (0:00.00), indication compteur de mémoire (M0:00.00), ou indication code temps (0h00m00s00f).

 Vous pouvez également appuyer de manière répétée sur la touche [COUNTER] de la télécommande pour changer l'indication compteur.

Affichage date/heure

Pour afficher l'indication date/heure, régler la date/heure dans [DATE/TIME] du sous-menu [DISPLAY SETUP].

Il est également possible d'appuyer sur la touche [DATE/TIME] de la télécommande de manière répétée pour afficher ou changer l'indication de la date/heure.

Modification du mode d'affichage

En changeant [DISPLAY] à partir du sous-menu [DISPLAY SETUP], le mode d'affichage du compteur se modifie en affichage toutes fonctions, affichage partiel et affichage minimum.

Signaux d'avertissement/alarme

Si l'un des signaux s'allume ou clignote, contrôler l'état du caméscope.

• Les indications affichées varient selon les modèles.

EJECT TAPE: Après l'affichage du message [DEW

DETECTED], éjecter la cassette.

CHECK REC TAB: La languette de protection contre
l'effacement est rompue (position)

(SAVE).

Ce message s'affiche lorsque le doublage audio est amorcé sur une partie vierge de la bande ou est tenté sur une cassette dont la languette de protection est en position [SAVE]. (→ 33, 43)

南 TAPE NOT INSERTED:

Absence de cassette dans

l'appareil. (→ 13)

LOW BATTERY: La batterie est faible. La recharger.

(+ 12)

Ea pile au lithium est faible. (→ 19)

END/TAPE END: La bande est arrivée à sa fin

pendant l'enregistrement.

REMOTE/

CHECK REMOTE MODE:

Un mode d'opération incorrect a été sélectionné sur la télécommande.

(→ 11)

CANNOT REC LP-MODE:

Parce que l'enregistrement original a été fait dans le mode LP, le doublage audio n'est pas possible. (→ 33)

INCOMPATIBLE DATA:La cassette est incompatible ou est

protégée contre le piratage. En raison de la protection contre le piratage, les images ne peuvent être correctement enregistrées.

Correctement enregistrees.

Si cette indication s'affiche, remettre

l'écran à cristaux liquides à sa position d'origine pour vérifier le contenu de la mise en garde/

avertissement.

AV INPUT RECORDING:

FILE LOCKED:

X:

Ce message s'affiche lorsqu'un enregistrement est tenté sur la carte mémoire pendant un doublage

(→ 43) sur la cassette.

NO CARD: Absence de carte mémoire dans

l'appareil.

PLEASE WAIT: Ce message s'affiche lors de la

Ce message s'affiche lors de la lecture sur la carte mémoire (lecture, formatage, pendant l'utilisation de la fonction d'écran

multiple). (- 36, 41)

CARD ERROR: La carte mémoire utilisée n'est pas

compatible avec le caméscope. Ce message s'affiche lorsque l'utilisateur tente de supprimer une

image protégée. Il n'est pas possible de supprimer une image protégée.

WRITE PROTECTED: Lorsque vous tentez d'enregistrer

des données sur une carte mémoire SD dont la languette de protection contre l'enregistrement est réglée

sur [LOCK].

NO PICTURE: La carte mémoire ne comporte

aucune image.

NO TITLE: Aucun titre n'a été enregistré sur la

carte mémoire.

NO SPACE LEFT Ce message s'affiche lorsque

l'utilisateur tente d'enregistrer sur une carte mémoire saturée. Lecture d'images à un format

différent ou endommagées. (→ 36)

DEW DETECTED: Présence de condensation. (→ 61)

NEED HEAD CLEANING:

Les têtes vidéo sont sales. (→ 61)

Notes et précautions

Indications se rapportant aux sources d'alimentation (→ 12)

- Lorsque le caméscope est utilisé pendant une longue durée, le boîtier du caméscope se réchauffe mais ceci n'est pas indice de mauvais fonctionnement.
- Si le voyant [CHARGE] ne s'allume pas bien que la batterie soit fixée, la retirer et la remonter.

Mise en place/éjection de la cassette (→ 13)

- Dans le cas d'une cassette précédemment enregistrée, il est possible d'utiliser la fonction recherche caméra pour trouver l'endroit où commencer à filmer.
- Si une cassette neuve est insérée, la rebobiner depuis le début avant de commencer l'enregistrement.

Si le support de la cassette ne se referme plus:

- Appuyer sur la marque [PUSH CLOSE] et fermer le capot du logement supérieur de la cassette fermement.
- Éteindre le caméscope et l'allumer à nouveau.
- ·Vérifier si la batterie est faible.

Si le support de la cassette ne s'ouvre pas:

- Fermer complètement le capot du logement inférieur de la cassette. Ensuite, l'ouvrir à nouveau.
- •Vérifier si la batterie est faible.

Avertisseurs sonores

Lorsque le paramètre [BEEP] du sous-menu [OTHER FUNCTIONS] dans le menu [CAMERA FUNCTIONS] est activé [ON], des avertisseurs/tonalités de confirmation sont émis comme suit: 1 bip

- Lors du lancement d'un enregistrement
- Lorsque le commutateur [OFF/ON/MODE] est basculé de [OFF] à [ON].
- 2 bips
- Lors d'une pause à l'enregistrement
 10 bips
- En cas d'erreur ou pendant un enregistrement

Enregistrement (→ 20)

 Avant d'allumer votre caméscope, retirer le capuchon de l'objectif. Si le capuchon de l'objectif est encore fixé quand le caméscope est allumé, le réglage automatique de l'équilibre du blanc ne fonctionnera pas correctement.

Contrôle de l'enregistrement (→ 20)

 Lors du contrôle de l'enregistrement, le mode caméscope (SP/LP) doit être identique à celui employé pour l'enregistrement. S'il est différent, la lecture des images sera altérée.

Recherche caméra (→ 20)

- Dans le mode recherche caméra, les images peuvent présenter des parasites de type mosaïque. Il s'agit d'un phénomène caractéristique du système de vidéo numérique et non d'un mauvais fonctionnement.
- Si les modes de vitesse d'enregistrement (SP/LP) des enregistrements précédents et ceux des nouveaux sont différents, la lecture des images pourra être altérée.

Fonction PhotoShot progressif (→ 21)

- Lorsque vous passez en mode image fixe, vous entendez un déclic. Il correspond au bruit de fermeture de l'iris et non d'un mauvais fonctionnement.
- Si vous enregistrez des images fixes en mode PhotoShot progressif lorsque votre caméscope est réglé sur le réglage automatique de l'exposition, la clarté des images peut changer.

À propos du réglage [PROGRESSIVE]

 Lorsque l'indication [P] s'affiche, il est possible d'utiliser la fonction PhotoShot progressif.

Lorsque (PROGRESSIVE) est sur [ON]:

Il est possible d'utiliser la fonction PhotoShot progressif à tout moment. Cependant, dans ce cas, les fonctions suivantes sont désactivées.

- •[EFFECT1] Modes effet numérique
- Zoom numérique [D.ZOOM]
- 1/750e ou vitesse d'obturation plus rapide
- Fonction PhotoShot continu
- Lorsque [REC MODE] du sous-menu [CAMERA SETUP] est réglé à [NORMAL], [FRAME] n'est pas disponible.

Lorsque [PROGRESSIVE] est sur [AUTO]:

Il n'est pas possible d'utiliser la fonction PhotoShot progressif dans les circonstances suivantes.

- Lorsque le grossissement du zoom est d'environ 10x ou plus grand.
- Lorsque la vitesse d'obturation est de 1/750e ou plus rapide.
- Lorsque [EFFECT1] est sur [WIPE], [MIX], [STROBE],
 [GAIN-UP], [TRAIL], [MOSAIC], [MIRROR].
- Lorsque les images sont affichées sur un écran multiple ou sur un écran image sur image.
- Fonction PhotoShot continu.

Fonctions zoom avant/zoom arrière

(**→** 21, 22)

- En appuyant sur la touche [W/T] de zoom [W] ou [T] en mode de pause d'enregistrement, il est possible de faire un zoom de 1-10x à une vitesse maximum de 2,1 seconde.
- En mode enregistrement, il est possible de faire un zoom de 1-10× dans un intervalle de temps de seulement 2,7 seconde.
- En cas d'effet de zoom accru, l'image peut se brouiller momentanément.
- Lorsqu'un taux élevé de zoom est utilisé, une mise au point plus accrue est obtenue si le sujet de l'enregistrement est à 1,2 m (4 pi) ou plus du caméscope.

Fonction de stabilisation électronumérique de l'image (→ 22)

- Sous des conditions de faible éclairage, la fonction de stabilisation de l'image ne fonctionnera pas. Dans ce cas, l'indication [EIS] clignotera.
- Sous une lumière fluorescente, la clarté de l'image peut changer ou les couleurs peuvent ne pas être naturelles.
- Des chevauchements d'images peuvent apparaître.
- Nous recommandons d'éteindre la fonction de stabilisation de l'image en cas d'utilisation d'un trépied.
- En réglant {EFFECT} du sous-menu [DIGITAL EFFECT] sur [GAIN-UP], il est possible de désactiver la fonction de stabilisation de l'image. Le cas échéant, l'indication [EIS] clignote.
- La fonction de stabilisation de l'image ne peut être utilisée de pair avec la fonction MAGICPIX. Le cas échéant, l'indication [EIS] clignote.

Mode fondu à l'entrée/en sortie (→ 22)

Le mode fondu à l'entrée/en sortie ne peut pas être utilisé lors d'un enregistrement d'images fixes en modes PhotoShot, image fixe numérique et multi-image ni pour la petite image fixe du mode image sur image.

Fonction cinéma (→ 23)

- La fonction cinéma ne peut être utilisée lorsque le caméscope est en mode caméra.
 (PV-DC252/PV-DC252-K)
- L'utilisation de la fonction cinéma n'a pas pour effet d'agrandir l'angulaire à l'enregistrement.
- Lors de la lecture d'un enregistrement effectué en mode cinéma sur un grand écran (16:9), le format de l'image est automatiquement ajusté à l'écran. Pour plus de détails, se reporter au manuel de l'utilisateur du téléviseur.
- Lorsque les images sont visionnées sur un écran de télévision, il se peut que l'indication de l'horodateur ne soit pas affichée.
- Selon le téléviseur utilisé, la qualité de l'image pourrait être atténuée.
- Le mode cinéma est désactivé lorsqu'un titre est affiché. (PV-DC252/PV-DC252-K)

■ Réglage automatique de l'exposition (→ 24)

- Si l'un des modes du réglage automatique de l'exposition est sélectionné, il n'est pas possible de régler la vitesse d'obturation ou l'iris.
- Il n'est pas possible d'utiliser le réglage automatique de l'exposition en mode accroissement du gain [GAIN-UP].

Mode sports

- Lors de la lecture standard, le mouvement de l'image peut ne pas apparaître régulier.
- Parce que la couleur et la clarté de la lecture d'image peuvent varier, éviter d'enregistrer sous une lumière incandescente, au mercure ou au sodium.
- Dans le cas d'enregistrement d'un sujet éclairé par une très forte lumière ou d'un sujet hautement réfléchissant, des lignes verticales de lumière peuvent apparaître.
- ●Si l'éclairage est insuffisant, l'indication [🔏] clignote.

Mode sports/mode portrait

- Si une image fixe est enregistrée en mode PhotoShot progressif, la clarté de l'image enregistrée peut devenir instable.
- Si ces modes sont utilisés dans le cadre d'un enregistrement à l'intérieur, les images reproduites peuvent vaciller.

Mode éclairage faible

 Des scènes extrêmement sombres peuvent ne pas devenir plus claires de manière satisfaisante.

Mode projecteur

- En utilisant ce mode, les images enregistrées peuvent devenir très sombres.
- Si le sujet d'enregistrement est extrêmement lumineux, l'image enregistrée peut être blanchâtre.

Mode mer et neige

•Si le sujet d'enregistrement est extrêmement lumineux, l'image enregistrée peut être blanchâtre.

■ Réglage manuel de la vitesse d'obturation

- Des lignes verticales de lumière peuvent être observées lors de la reproduction d'une image d'un sujet éclatant ou très réfléchissant.
- Pendant la lecture standard, le passage d'une scène à l'autre peut ne pas être régulier.
- Parce que la couleur et la clarté d'une image reproduite peuvent devenir instables, éviter d'enregistrer sous une lumière fluorescente, au mercure ou au sodium.
- Si vous utilisez le mode accroissement du gain ou le mode de réglage automatique de l'exposition, le réglage de la vitesse d'obturation est impossible. Si la vitesse d'obturation est réglée manuellement, ce réglage sera annulé.

Réglage manuel de l'iris (→ 25)

- En fonction du grossissement du zoom, la valeur de l'iris peut ne pas être affichée correctement.
- Si le mode d'accroissement du gain ou le mode de réglage automatique de l'exposition sont utilisés, le réglage de l'iris est impossible.
- Ne pas tenter de régler la vitesse de pose après le réglage de l'iris; cela aurait pour effet d'annuler ce dernier.

Équilibre du blanc (→ 26)

Dans les conditions suivantes, il n'est pas possible de régler l'équilibre du blanc.

- Lorsque [EFFECT1] du sous-menu [DIGITAL EFFECT] du menu [CAMERA FUNCTIONS] est réglé sur [GAIN-UP] ou que [EFFECT2] est réglé sur [SEPIA] ou [MONO].
- ◆Lorsque le zoom est fixé à 10× ou plus.
- Lorsque le mode image fixe numérique est activé.
- · Pendant l'affichage d'un menu.
- Lorsque le mode MAGICPIX est activé.

Dans les cas suivants, l'indication [№] clignote:

- Le clignotement indique que le réglage précédent de l'équilibre du blanc est toujours mémorisé. Ce réglage sera conservé jusqu'à ce que l'équilibre du blanc soit une nouvelle fois réglé.
- Il ne sera peut être pas possible d'effectuer le réglage manuel de l'équilibre du blanc sous des conditions de faible éclairage.

■ Fonctions et effets numériques (mode caméra) (→ 27)

- Si vous réglez (EFFECT1) du sous-menu
 [DIGITAL EFFECT] sur [GAIN-UP], il faut régler la mise au point manuellement. Cependant, le réglage de la vitesse d'obturation et de l'iris et la sélection de l'équilibre du blanc ne sont pas possibles.
- Si (EFFECT2) du sous-menu [DIGITAL EFFECT] est réglé sur [MONO] ou [SEPIA], le mode de l'équilibre du blanc sélectionné ne peut pas être modifié.
- Il n'est pas possible d'utiliser le réglage automatique de l'exposition en mode accroissement du gain [GAIN-UP].
- Lorsque [PROGRESSIVE] du sous-menu [CAMERA SETUP] est réglé sur [ON], aucun mode numérique ne peut être utilisé avec [EFFECT1] sur le sous-menu [DIGITAL EFFECT].



Mode volet et mode mixage (→ 27)

Si l'une des opérations suivantes doit être exécutée, les images mémorisées seront effacées et les fonctions volet et mixage ne peuvent pas être utilisées.

- Utiliser la fonction recherche caméra.
- Appuver sur la touche (CAMERA STILL).
- ●Commuter le sélecteur [TAPE/CARD]. (PV-DC252/PV-DC252-K)

Mode écran multiple (→ 28)

- Lorsque [PROGRESSIVE] du sous-menu [CAMERA SETUP] est sur [ON], le mode écran multiple ne peut pas être utilisé.
- ·Si on appuie sur la touche [MULTI] lorsque l'autoenregistrement est utilisé en mode miroir (→ 20) l'image fixe est affichée à partir de l'angle supérieur droit de l'écran mais en réalité, l'image est toujours enregistrée à partir de l'angle supérieur gauche.
- La qualité des images enregistrées en mode écran multiple est légèrement altérée.

Mode image sur image (→ 28)

- •Les images en mode image sur image ne peuvent pas être enregistrées en mode PhotoShot progressif.
- Lorsque le caméscope est éteint, l'image la plus petite disparaît.
- L'introduction d'un titre est impossible dans la plus petite des images.
- Si on appuie sur la touche [CAMERA STILL] en mode image sur image, le réglage est annulé.

Fonctions de recherche de l'index (→ 31)

- La recherche de l'index peut ne pas être possible en début de cassette.
- Parce que les signaux de l'index PhotoShot ne sont pas enregistrés sur des images fixes enregistrées en mode PhotoShot continu, la fonction PhotoShot indexée ne peut pas être utilisée pour ces images fixes.
- La recherche de scène indexée peut ne pas fonctionner correctement si l'intervalle entre 2 signaux de scène indexée est inférieur à 1 minute.

Fonctions de lecture zoom (→ 32)

- Il n'est pas possible de régler le volume avec la télécommande en mode de lecture zoom.
- Si vous éteignez le caméscope ou si vous passez du mode magnétoscope au mode caméra, le mode de lecture zoom est annulé automatiquement.
- Même si les fonctions de lecture zoom sont utilisées, les images qui sortent de la prise DV ou de la prise images fixes numériques ne sont pas agrandies.
- En agrandissant une image, la qualité de l'image s'altère.
- Les fonctions de lecture zoom et le mode miroir des effets numériques ne peuvent pas être utilisés simultanément.
- Avec les fonctions de lecture zoom, la fonction de recherche à vitesse variable ne peut pas être utilisée avec la télécommande.

Fonctions de lecture avec effet numérique

- · Les signaux modifiés des images auxquels on ajoute des effets numériques lors de la reproduction ne peuvent pas sortir de la prise DV ou de la prise d'image fixe numérique.
- Il n'est pas possible d'utiliser la fonction volet ou mixage tout en repassant la partie de la bande non enregistrée.

Sélection du son pendant la lecture

 $(\rightarrow 29.33)$

Il est possible de sélectionner le son en utilisant [AUDIO OUT] du sous-menu [PLAYBACK FUNCTIONS]. Son stéréo (son principal et arrière son)

Son de la voie de gauche (son principal) L: R: Son de la voie de droite (arrière son)

 Lors du doublage d'une cassette enregistrée [12bit] avec sélection de réglage sur [AUDIO-REC], le son reproduit devient un son stéréo indépendamment du fait que [AUDIO] soit réglé sur [AUDIO OUT] ou [MIX].

Doublage audio (→ 33)

- La partie vierge d'une bande ne peut pas être doublée.
- Les sons envoyés par la prise DV ne peuvent pas être doublés.
- Si le ruban présente une partie non enregistrée au cours du doublage, les images et les sons peuvent être perturbés lorsque cette partie de ruban sera reproduite.
- Si vous réinitialisez le compteur de la cassette à zéro, à l'endroit où vous souhaitez arrêter le doublage audio de manière à activer la fonction arrêt de la mémoire (→ 63), le doublage audio se termine automatiquement lorsque la cassette atteint cette position.
- Dans le cas d'apport de données enregistrées par doublage audio sur un ordinateur utilisant un programme de logiciel, uniquement le son original (ST1) peut être importé en fonction du logiciel.

Prise microphone

Lorsque le doublage du son est effectué au moyen d'un micro extérieur ou d'un dispositif audio, le brancher à la prise [MIC]. Dans ce cas, le micro incorporé du caméscope sera éteint.

Fonctions de la carte (→ 34~41) (PV-DC252/PV-DC252-K)

- Ne pas toucher la prise de connexion située au dos de la carte.
- •Si le rabat de la fente de la carte est ouvert, il n'est pas possible d'accéder à la carte.
- Les images larges ne peuvent pas être enregistrées.
- Une carte qui a été formatée avec ce caméscope peut ne pas être utilisable sur un autre appareil. Si cela se produit, formater la carte au moyen de l'appareil avec lequel elle sera utilisée. Avant d'effectuer cette opération, nous conseillons de mémoriser les images importantes sur l'ordinateur par mesure de précaution.
- En mode carte PhotoShot, le caméscope sauvegarde automatiquement les numéros des fichiers (Imga0001.jpg, etc.) avec les images. Le numéro d'un fichier est enregistré avec chaque image comme un numéro courant.

Carte PhotoShot (→ 34) (PV-DC252/PV-DC252-K)

- Aucun son ne peut être enregistré.
- •L'effet de vitesse d'obturation ne peut être utilisé.
- La fonction PhotoShot progressif est activée [ON].
- La vitesse d'obturation varie entre 1/30 − 1/500.
- Une carte formatée sur un autre dispositif (tel un ordinateur) pourrait être inutilisable ou la vitesse d'enregistrement pourrait être ralentie. Il est recommandé de faire le formatage directement sur l'appareil.

Les fonctions suivantes ne peuvent être utilisées.

- Zoom numérique
- Mode cinéma
- Fonctions et effets spéciaux numériques

Enregistrement sur carte à partir d'un autre appareil (→ 35) (PV-DC252/PV-DC252-K)

Si le sélecteur [TAPE/CARD] est positionné sur [CARD], il est possible d'utiliser la fonction carte PhotoShot pour l'entrée de signaux externes. (Pas pendant l'enregistrement.)

- Des rayures noires peuvent apparaître aux quatre coins de l'image.
- Lorsqu'on appuie sur la touche [PHOTO SHOT], l'image semble se déplacer momentanément en arrière mais ceci n'affecte en rien l'enregistrement.
- La fonction carte PhotoShot ne peut pas être utilisée lors d'un enregistrement avec une entrée analogique.

Lecture de la carte (→ 36) (PV-DC252/PV-DC252-K)

- Si une carte vierge (sans enregistrement) est insérée, l'écran devient blanc et l'indication [NO FILE] apparaît.
- Dans le cas où le fichier dont vous tentez de faire la lecture a été enregistré dans un format non compatible ou que les données du fichier ont été corrompues, l'indication [×] et le message [CARD ERROR] pourraient s'afficher.
- Dans le cas d'affichage d'images mémorisées sur un écran multiple, s'il y en a 7 ou plus, elles ne peuvent pas être affichées toutes de suite. Tourner le cadran [PUSH] ou appuyer sur [SEARCH+] pour appeler l'affichage des 6 images suivantes.
- Lorsque les images enregistrées à partir d'un autre caméscope sont reproduites avec ce caméscope, la taille des images peut être différente de la taille enregistrée.
- Lors de la copie automatique d'images de bandes sur une carte, le nombre d'images restantes pouvant être enregistrées sur la carte est affiché. Lorsque [0] est atteint, la bande passe en mode de pause à l'enregistrement.

■ Diaporama (→ 38) (PV-DC252/PV-DC252-K)

- La durée du diaporama peut être fixée entre 5 et 99 secondes.
- Effectuer le paramétrage du diaporama directement sur le caméscope.
- La taille du fichier peut prolonger la durée du diaporama au-delà de la durée fixée.
- Lorsque le diaporama est lancé après l'affichage de titres, ceux-ci ne demeurent pas affichés.

Fonctions de titre (→ 39) (PV-DC252/PV-DC252-K)

- Même si le contraste du titre est ajusté, les portions avec très peu de différence entre les contrastes sombres et clairs ainsi que les limites sombres et claires peuvent ne pas apparaître.
- Le titre pourrait ne pas apparaître s'il est trop petit.
- Si vous créez un titre original, le nombre d'images qui peut être enregistré sur la carte mémoire diminue.
- Si le nombre d'images qui peut être enregistré sur une carte mémoire est restreint, il ne sera quelquefois pas possible de créer des titres originaux.
- Lorsqu'un titre est affiché en mode magnétoscope, le titre n'est pas sorti d'une prise DV ou d'une prise numérique à image fixe.

Réglage DPOF (→ 41) (PV-DC252/PV-DC252-K)

- •Le nombre d'impressions peut aller de 0 à 99.
- Effectuer le réglage DPOF sur le caméscope utilisé.
- La confirmation du réglage DPOF peut prendre un peu de temps. Attendre jusqu'à ce que le voyant [ACCESS] s'éteigne.

Utilisation avec un appareil vidéo numérique (Doublage) (→ 43)

- Indépendamment du réglage choisi, le doublage est effectué automatiquement dans le même mode d'enregistrement audio que celui de la cassette du côté du dispositif de lecture.
- Les images sur l'écran du côté de l'enregistrement peuvent être perturbées mais ceci n'affecte pas les images enregistrées.
- Même si des effets numériques de reproduction, lecture zoom ou lecture de titre ont été utilisés, ces effets ne sortent pas de la prise DV.
- Même si vous utilisez un appareil avec prises DV (tels que i.LINK), dans certains cas, il ne sera pas possible d'effectuer des doublages numériques.

Utilisation d'une carte avec un ordinateur personnel (PV-DC252/PV-DC252-K)

- Pour effacer des enregistrements sur une carte effectués par un caméscope, s'assurer de les effacer avec le caméscope et non l'ordinateur.
- Il est possible que la lecture ou la recherche ne puisse être effectuée adéquatement sur le caméscope si les données ou les images ont été modifiées sur un ordinateur.



Précautions d'emploi

Après utilisation

- 1 Sortir la cassette. (→ 13)
- 2 Régler le commutateur [OFF/ON/MODE] sur [OFF]. (→ 14)
- 3 Retirer la source d'alimentation et rétracter le viseur. (→ 12)
- 4 Pour protéger l'objectif, fixer le capuchon d'objectif fourni. (→ 13)

Conseils d'utilisation de votre caméscope Lorsque vous utilisez votre caméscope sous la pluie ou sous la neige ou sur la plage, veiller à ce que l'eau ne s'infiltre pas dans le caméscope.

- L'eau peut provoquer un mauvais fonctionnement du caméscope et de la cassette. (Et causer des dommages parfois irréparables.)
- Si des éclaboussures d'eau de mer atteignent le caméscope, mouiller un chiffon doux avec de l'eau du robinet, l'essorer et l'utiliser pour essuyer le boîtier du caméscope soigneusement. Ensuite, l'essuyer à l'aide d'un linge doux et sec.

Tenir le caméscope à l'écart des champs magnétiques (tels que fours à micro-ondes, téléviseurs, jeux, etc.)

- Si vous utilisez votre caméscope près d'un téléviseur, les images et les sons peuvent être perturbés par les ondes électromagnétiques.
- À cause des puissants champs magnétiques provenant de haut-parleurs ou de grands moteurs, l'enregistrement sur cassette peut être endommagé et les images peuvent être déformées.
- Les ondes électromagnétiques engendrées par un microprocesseur peuvent affecter le caméscope en provoquant des perturbations aux images et aux sons,
- Si le caméscope est affecté par des apparells à charges magnétiques et ne fonctionne pas correctement, l'éteindre et retirer la batterie ou l'adaptateur secteur et le rebrancher une nouvelle fois à la batterie ou à l'adaptateur secteur. Ensuite, le mettre sous tension.

Ne pas utiliser le caméscope à proximité de radioémetteurs ou de lignes à haute tension.

 Si des images sont enregistrées à proximité de radioémetteurs ou de lignes à haute tension, les images enregistrées seront affectées.

N'utiliser pas le caméscope à des fins de surveillance ou professionnelles.

- Si le caméscope est utilisé pendant une longue période, la température intérieure s'élève et, par conséquent, elle peut provoquer un mauvais fonctionnement.
- Ce caméscope n'est pas destiné à un usage industriel.

Lorsque le caméscope est utilisé sur la plage ou dans un endroit semblable, veiller à ce que le sable ou la poussière fine ne pénètrent pas à l'intérieur du caméscope.

 Le sable ou la poussière peuvent endommager le caméscope ou la cassette. (Une attention particulière devrait être portée lors de l'introduction et l'extraction de la cassette.)

Ne pas vaporiser d'insecticides ou de produits chimiques volatiles sur le caméscope,

- Si de tels produits étaient vaporisés sur le caméscope, le boîtier de ce dernier pourrait se déformer et la finition pourrait être endommagée.
- Ne pas laisser de produits en caoutchouc ou en plastique en contact avec le caméscope pendant une longue période de temps.

Pour le nettoyage du caméscope, n'utiliser aucun type de solvant tels que de l'essence, alcool, diluants, etc.

- Le boîtier du caméscope pourrait se déformer et la finition pourrait s'écailler.
- Avant de nettoyer le caméscope, retirer la batterie ou débrancher le câble c.a. de la prise secteur.
- Nettoyer le caméscope avec un linge doux et sec. Pour enlever les taches rebelles, le nettoyer à l'aide d'un linge trempé dans un produit détergent dilué avec de l'eau et l'essuyer ensuite avec un linge sec.
- Pour le rangement ou le transport du caméscope, le placer dans un sac ou dans une boîte dotés de renforts de manière à protéger le revêtement de l'appareil contre l'usure.

Après utilisation, veiller à sortir la cassette et retirer la batterie du caméscope ou débrancher le câble c.a. de la prise secteur.

- Si la cassette est laissée à l'intérieur du caméscope, la bande se détend et s'abîme.
- Si la batterie reste fixée au caméscope pendant une longue période, le voltage s'abaisse et la batterie ne fonctionnera plus, même après avoir été rechargée.

À propos de l'adaptateur secteur

- Si la température de la batterie est extrêmement élevée ou extrêmement basse, le voyant [CHARGE] peut continuer à clignoter et la batterie peut ne pas se recharger. Dès que la température ait suffisamment augmenté ou diminué, le rechargement commence automatiquement. Si le voyant [CHARGE] continue à clignoter même après que la température ait suffisamment augmenté ou descendu, la batterie ou l'adaptateur secteur peuvent être défectueux. Dans ce cas, consulter votre revendeur.
- Si la batterie est chaude, le temps de rechargement sera plus long que la normale.
- Si l'adaptateur secteur est utilisé à proximité d'une radio, la réception pourrait être perturbée. Placer l'adaptateur secteur à au moins un mètre de la radio.
- Lorsque l'adaptateur secteur est utilisé, il peut émettre des sons de ronflement. C'est tout à fait normal.
- Après utilisation, veiller à retirer le câble c.a. de la prise secteur. (Si on les laisse branchés, l'appareil continuera à consommer une petite quantité de courant.)
- Veiller à ce que les électrodes de l'adaptateur secteur et de la batterie soient toujours propres.

■ Condensation

Si l'indication [DEW DETECTED] clignote lorsque le caméscope est allumé, c'est que de la condensation s'est formée à l'intérieur. Dans ce cas, le caméscope s'éteint automatiquement dans la minute qui suit.

Suivre les étapes suivantes:

1 Sortir la cassette.

- Aucune des autres fonctions ne fonctionne. En raison de la quantité de condensation, le retrait de la cassette peut être difficile. Si cela se produit, attendre 2 ou 3 heures avant de la sortir.
- 2 Ouvrir le logement de la cassette et attendre 2 ou 3 heures.
 - Le nombre d'heures à attendre dépend de la quantité de condensation et de la température ambiante.
- 3 2 ou 3 heures plus tard, allumer le caméscope et vérifier si l'indication [DEW DETECTED] est affichée.
 - Même si l'indication [DEW DETECTED] n'est pas affichée, par mesure de précaution, attendre encore une heure avant d'utiliser le caméscope.

Regarder s'il y a de la condensation même avant que l'indication [DEW DETECTED] soit affichée.

- Parce que la condensation se forme graduellement, l'indication [DEW DETECTED] peut ne pas s'afficher dans les 10 à 15 premières minutes de l'apparition de la condensation.
- Dans les endroits extrêmement froids, la condensation peut geler et se transformer en gel. Dans ce cas, le gel fond en formant tout d'abord de la condensation et il faudra 2 ou 3 heures pour éliminer la condensation.

Lorsque l'objectif est embué:

Placer le commutateur [OFF/ON/MODE] sur [OFF] et laisser le caméscope dans cette position pendant 1 heure. Lorsque la témperature de l'objectif se rapproche de la températue ambiante, la buée disparaît naturellement.

Nettoyage des têtes vidéo numériques

Si les têtes (les parties qui font contact avec le ruban) sont sales, des rayures de type mosaïque peuvent apparaître lorsque l'image est reproduite et l'écran peut devenir complètement noir. Si les têtes sont extrêmement sales, les performances d'enregistrement baissent et dans le pire des cas, le caméscope n'enregistre plus du tout.

Situations dans lesquelles les têtes vidéo numériques deviennent sales

- Grande quantité de poussière dans l'air
- Environnement à haute température et à taux d'humidité élevé
- Cassette endommagée
- Longues heures de fonctionnement

Utilisation d'une cassette Mini-DV auto-nettoyante pour les têtes vidéo format numérique

- 1 Introduire la cassette auto-nettoyante des têtes vidéo dans le caméscope de la même manière qu'une cassette vidéo.
- 2 Appuyer sur la touche [▶], et 20 secondes plus tard, appuyer sur la touche [■]. (Ne pas rebobiner la cassette.)
- 3 Sortir la cassette auto-nettoyante. Introduire une cassette vidéo et commencer à enregistrer. Ensuite, lire la cassette depuis le début pour vérifier l'image enregistrée.
- 4 Si l'image n'est toujours pas claire, répéter les étapes de 1 à 3. (Ne pas utiliser la cassette auto-nettoyante plus de 3 fois de suite.)

Notes:

- Ne pas rebobiner chaque fois que la cassette autonettoyante est utilisée. Rebobiner seulement lorsque la cassette est arrivée à la fin et l'utiliser ensuite depuis le début de la même manière que précédemment.
- Si les têtes se salissent peu après le nettoyage, la cassette peut être endommagée. Dans ce cas, arrêter immédiatement l'utilisation de cette cassette.
- Ne pas nettoyer les têtes de manière excessive. (Un nettoyage excessif peut user les têtes. Si les têtes sont usées, les images ne peuvent plus être reproduites même après qu'elles aient été nettoyées.)
- Si les têtes sales ne peuvent pas être nettoyées au moyen d'une cassette auto-nettoyante, le caméscope doit être nettoyé par le centre de service. Consulter un détaillant ou un centre de service Panasonic.
- Les cassettes auto-nettoyantes peuvent être achetées auprès des centres de service.
- Le nettoyage des têtes lorsqu'elles sont sales n'est pas considéré comme un mauvais fonctionnement du produit. Il n'est pas couvert par la garantie.

Vérification périodique

Afin de maintenir une qualité d'image élevée, nous recommandons de remplacer les pièces usées telles que les têtes, etc., après 1000 heures d'utilisation environ. (Ceci dépend toutefois des conditions de fonctionnement telles que la température, l'humidité, la poussière, etc.)

Utilisation optimale de la batterie

Caractéristiques de la batterie

Cette batterie est une batterie au lithium-ion rechargeable. Sa capacité de générer de l'énergie est basée sur une réaction chimique qui se produit à l'intérieur. Cette réaction est sensible à la température et à l'humidité ambiante et si la température est trop élevée ou trop basse, la durée de fonctionnement de la batterie s'écourte. Si la batterie est utilisée dans un environnement extrêmement froid, la batterie fonctionnera 5 minutes seulement. Si la batterie devient extrêmement chaude, une fonction de protection peut s'activer et la batterie est inutilisable pendant quelques instants.

Veiller à retirer la batterie après utilisation

Veiller à retirer la batterie du caméscope. (Lorsqu'elle est laissée fixée au caméscope, elle consomme une faible quantité d'énergie même si le caméscope est éteint.) Si la batterie est laissée fixée au caméscope pendant une longue période, un sur-déchargement se produit. La batterie peut devenir inutilisable après qu'elle ait été rechargée.

Se débarrasser d'une batterie inutilisable

- •La batterie a une durée de vie limitée.
- Ne pas jeter la batterie dans le feu car cela pourrait provoquer une explosion.

Veiller à ce que les pôles de la batterie soient toujours propres

S'assurer que les pôles ne s'encrassent pas à cause d'impuretés, poussières ou autres substances. Si la batterie tombe accidentellement, vérifier que le bloc batterie et les pôles ne se sont pas déformés.

Fixer une batterie déformée au caméscope ou à l'adaptateur secteur pourrait endommager le caméscope ou l'adaptateur secteur.

Précautions de rangement

Avant de ranger le caméscope, sortir la cassette et retirer la batterle.

Placer tous les composants dans un endroit sec où la température est relativement stable.

Température recommandée: de 15°C à 25°C (59°F à 77°F),
 Taux d'humidité recommandé: de 40% à 60%

Caméscope

- L'envelopper dans un linge doux à l'abri de la poussière.
- Ne pas laisser le caméscope à des endroits qui l'exposeraient à des températures élevées.

Batterie

- Des températures extrêmement élevées ou extrêmement basses réduiront la durée de vie de la batterie.
- Si la batterle est conservée dans des endroits particulièrement enfumés et poussiéreux, les pôles peuvent rouiller et provoquer un mauvals fonctionnement.
- •Ne pas permettre à ce que les pôles de la batterie soient en contact avec des objets métalliques (tels que colliers, épingles à cheveux, etc.). Ceci pourrait provoquer un court-circuit ainsi qu'une production de chaleur et si la batterie était manipulée à ce moment-là, elle provoquerait des brûlures sérieuses.
- Ranger la batterie lorsqu'elle est complètement déchargée.
 Pour conserver une batterie pendant longtemps, nous recommandons de la charger au moins une fois par an et de la reposer seulement après l'avoir à nouveau déchargée.

Cassette

- Avant de la ranger, rebobiner la bande au début. Si la cassette est laissée 6 mois avec la bande à mi-course, la bande se détend (bien que cela dépende des conditions de rangement). Veiller à rebobiner la cassette au début.
- Conserver la cassette dans son boîtier. La poussière, la lumière directe (rayons ultraviolets) ou l'humidité peuvent endommager la bande. La poussière contient des particules minérales dures et des bandes recouvertes de poussière peuvent endommager les têtes du caméscope ainsi que les autres composants. Prendre la bonne habitude de toujours replacer la cassette dans son boîtier.
- Tous les six mois, faire défiler la cassette jusqu'à la fin et puls la rebobiner au début. Si la cassette est laissée une année ou plus sans bobinage ni rebobinage, les changements de température et l'humidité peuvent déformer la cassette en la faisant gonfler ou se rétrécir, etc. Le ruban enroulé sur lui-même peut coller.
- Ne pas placer la cassette près de substances ou d'équipements hautement magnétiques.
- La superficie de la cassette est recouverte de minuscules particules magnétiques sur lesquelles les signaux sont enregistrés. Les colliers, jouets magnétiques, etc., ont une force magnétique souvent plus forte que l'on pourrait penser et peuvent effacer le contenu d'un enregistrement et provoquer des parasites aux images et aux sons.

Carte (PV-DC252/PV-DC252-K)

- Lors de la lecture d'une carte, ne pas retirer la carte, couper le contact ou faire vibrer l'appareil.
- Ne pas exposer la carte aux rayons directs du soleil, à des températures élevées, à des champs magnétiques ou à des endroits générant de l'électricité statique.
- Ne pas plier ou échapper la carte. La carte ou son contenu pourrait être endommagé.
- Après utilisation, retirer la carte du caméscope.
- Après utilisation, conserver la carte mémoire SD dans la pochette jaune fournie.

Écran à cristaux liquides/viseur/parasoleil

Écran à cristaux liquides (LCD)

- Dans un endroit où la température change brusquement, de la condensation pourrait se déposer sur l'écran à cristaux liquides. L'essuyer avec un linge doux et sec.
- Si le caméscope est extrêmement froid lorsqu'il est mis sous tension, l'image de l'écran à cristaux liquides est dans un premier temps légèrement plus foncée qu'à la normale. Cependant, puisque la témperature interne augmente, il retrouve sa luminosité habituelle.

Une technologie de très haute précision est utilisée pour la fabrication de l'écran à cristaux liquides qui se caractérise par un total d'environ 112 000 pixels. Il en résulte plus de 99,99% de pixels actifs avec seulement 0,01% de pixels inactifs ou constamment allumés. Il ne s'agit cependant pas d'un mauvais fonctionnement et n'affecte en rien la qualité de l'image enregistrée.

Viseur

- Ne pas orienter le viseur ou l'objectif en direction du soleil.
 Les composants internes pourraient être sérieusement endommagés.
- Lorsque le caméscope est utilisé avec une batterie de grande capacité, il n'est pas toujours pratique de regarder dans le viseur de derrière la batterie. Dans ce cas, relever le viseur jusqu'à trouver un angle qui permette de voir de manière aisée.

Une technologie de très haute précision est utilisée pour la fabrication de l'écran du viseur qui se caractérise par un total d'environ 113 000 pixels. Il en résulte plus de 99,99% pixels actifs avec seulement 0,01% de pixels inactifs ou constamment allumés. Il ne s'agit cependant pas d'un mauvais fonctionnement et n'affecte en rien la qualité de l'image enregistrée.

Parasoleil

- Ne pas fixer d'autres lentilles de conversion devant le parasoleil; il n'y a pas de monture pour leur fixation.
- Lors du raccordement du téléobjectif (vendu séparément) ou de l'objectif grand angulaire (vendu séparément), un filtre protecteur (vendu séparément) ou filtre gris neutre (vendu séparément), s'assurer de tout d'abord tourner le parasoleil dans le sens antihoraire. Si un filtre protecteur (vendu séparément) ou un filtre gris neutre (vendu séparément) est utilisé, le parasoleil peut être installé sur le filtre.
- Si vous glissez la touche [W/T] vers [W] pendant l'enregistrement avec le filtre ou la lentille de conversion fixés au caméscope, les 4 coins de l'image peuvent s'assombrir (vignettes). Pour plus de détails, lire le mode d'emploi des accessoires.
- S'assurer de conserver le parasoleil en place sur le caméscope afin d'éviter toute lumière excessive.

Explication des termes

Système vidéo numérique

Dans un système vidéo numérique, les images et les sons sont transformés en signaux numériques et enregistrés sur une bande. Cet enregistrement numérique complet est en mesure d'enregistrer et lire les images et les sons avec une distorsion minimale.

De plus, il enregistre automatiquement les données telles que code temps et date/heure comme signaux numériques. Compatiblité avec les cassettes S-VHS ou VHS

Parce que le caméscope utilise un système numérique pour enregistrer l'image et le son, il n'est pas compatible avec les équipements vidéo S-VHS ou VHS conventionnels qui utilisent un système d'enregistrement analogue. La taille et la forme de la cassette sont également différentes.

Compatibilité avec les signaux de sortie

Parce que la sortie du signal AV est analogue à la fiche de sortie du signal AV (la même que dans les systèmes vidéo conventionnels), ce caméscope peut être branché à un magnétoscope S-VHS ou VHS ou à un téléviseur pour la reproduction de l'image. (+ 42)

Mise au point

Réglage de la mise au point automatique

Le système de mise au point automatique déplace automatiquement l'objectif du caméscope vers l'avant et vers l'arrière pour la mise au point du sujet de manière à ce qu'il soit clairement perçu.

Cependant, le système de mise au point ne fonctionne pas correctement pour les sujets suivants ou sous les conditions d'enregistrement suivantes.

Utiliser de préférence le mode mise au point manuelle.

- Enregistrer un sujet dont une extrémité est située plus près du caméscope et l'autre plus éloignée de celui-cl.
 - Parce que la mise au point effectue les réglages au centre de l'image, il peut être impossible de mettre au point un sujet situé à la fois au premier plan et à l'arrière plan.
- Enregistrer un sujet à travers une vitre sale ou recouverte de poussière.
 - Parce que la mise au point se fait sur la vitre recouverte de poussière, le sujet derrière la vitre ne sera pas net.
- 3) Enregistrer un sujet dans un environnement sombre.
 - Parce que l'information de la lumière qui arrive à travers l'objectif diminue considérablement, le caméscope ne peut pas mettre au point de manière correcte.
- Enregistrer un sujet qui est entouré d'objets à surfaces brillantes ou d'objets très réfléchissants.
 - Parce que le caméscope met au point sur les objets à surfaces brillantes ou sur des objets très réfléchissants, le sujet enregistré peut devenir flou.
- 5) Enregistrer un sujet en pleine action.
 - Parce que l'objectif de mise au point se déplace mécaniquement, il ne tient pas le rythme avec un sujet en pleine action.
- 6) Enregistrer un sujet avec peu de contraste.
 - Parce que la mise au point du caméscope se base sur les lignes verticales d'une image, un sujet avec peu de contraste tel qu'un mur blanc peu devenir flou.

Réglage de l'équilibre du blanc

En fonction du type de source d'éclairage, les couleurs enregistrées par le caméscope peuvent être affectées. Dans certains cas, les images peuvent être enregistrées avec une nuance bleuâtre ou rougeâtre. Afin de minimiser l'effet de lumière sur la couleur du sujet, ce qu'on appelle réglage de l'équilibre du blanc devient nécessaire.

Réglage de l'équilibre du blanc

Le réglage de l'équilibre du blanc reconnaît la couleur de la fumière et fait les réglages nécessaires de façon à ce que le blanc devienne un blanc optique.

Réglage de l'équilibre du blanc automatique

Ce caméscope mémorise des réglages qui sont optimals pour certains types de sources d'éclairage générales. Le caméscope détermine la nuance de lumière qu'il reçoit à travers l'objectif et le capteur de l'équilibre du blanc, jugeant de cette façon la situation de l'enregistrement, et sélectionne le réglage de nuance le plus proche. Cette fonction s'appelle réglage de l'équilibre du blanc automatique.

Cependant, puisque les réglages de l'équilibre du blanc ne sont mémorisés que pour certaines sources d'éclairage, la fonction de l'équilibre du blanc automatique ne fonctionne pas correctement lorsque l'enregistrement s'effectue sous un éclairage qui n'entre pas dans les paramètres de réglage.

Code temps

Les signaux code temps sont des données qui indiquent le temps en heures, minutes, secondes et images (30 images par seconde). Si ces données sont incluses dans un enregistrement, une adresse est donnée à chaque image de la bande.

- Le code temps est automatiquement enregistré comme partie intégrante du sous-code à chaque enregistrement.
- Lorsqu'une nouvelle cassette (précédemment non enregistrée) est introduite, le code temps se met automatiquement à zéro. Si une cassette déjà enregistrée est insérée, le code temps part au point où la dernière scène a été enregistrée. (Dans ce cas, lorsque la cassette est insérée, l'affichage à zéro [0h00m00s00f] peut apparaître mais le code temps commence à la valeur précédente.)
- •Le code temps ne peut pas être réinitialisé à zéro.
- À moins que le code temps soit constamment enregistré dès le début de la cassette, un montage précis peut ne pas être possible. Pour s'assurer que le code temps sera enregistré sans interruptions, nous recommandons l'utilisation de la fonction recherche caméra (→ 20) ou la fonction recherche des blancs (→ 30) avant d'enregistrer une nouvelle scène.

Fonction arrêt mémoire

La fonction arrêt mémoire est utile pour les opérations suivantes.

Rebobiner ou avancer une bande à la position désirée

- 1 Régler [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].
- 2 Remettre le compteur de la cassette à zéro à la position où le point de départ de la lecture est souhaité. (→ 10, 16)
- 3 Lancer la lecture ou l'enregistrement.
- Quand la lecture ou l'enregistrement sont terminés: glisser le commutateur [OFF/ON/ MODE] de [ON] vers le mode magnétoscope.
 Le voyant [VCR] s'allume.
- 5 Rebobiner la bande.
 - La cassette s'arrête automatiquement à l'endroit approximatif où le compteur a été mis à zéro.

Arrêt automatique du montage pendant le doublage audio

- 1 Régler [DISPLAY SETUP] >> [C.DISPLAY] >> [MEMORY].
- 2 Réinitialiser le compteur de la cassette à zéro à l'endroit ou l'arrêt du montage est souhaité.
- 3 Lecture des images fixes au début du doublage audio.
- 4 Lancer le doublage audio. (→ 33)
 - Le doublage audio s'arrête automatiquement à l'endroit où le compteur a été mis à zéro.

Spéifications

Caméscope numérique

Informations pour votre sécurité

Source d'alimentation: Consommation d'énergie:

5.5 W

Format d'enregistrement:

Bande utilisée: Enregistrement/temps

de lecture:

Vidén

Système d'enregistrement: Système de télévision:

Système d'enregistrement:

Capteur image:

Objectif:

Diamètre du filtre:

Zoom. Écran: Viseur: Microphone Haut-parleur:

Éclairage standard: Éclairage minimal requis:

Niveau sortie vidéo: Niveau sortie S-Vidéo:

Niveau sortie audio: Entrée micro:

Image fixe numérique:

Sortie d'interface série

RS-232C

(PV-DC152/PV-DC152-K):

USB (PV-DC252/PV-DC252-K):

Interface numérique:

Dimensions:

Poids:

Température de

fonctionnement: Humidité de fonctionnement: 10%-80%

7.8/7.2 V c.c. Enregistrement

Mini DV (Usage Consommateur-Format SD vidéonumérique) Bande vidéo numérique 6,35 mm

Durée standard (SP): 80 min; longue durée (LP): 120 min (avec DVM80)

Composant numérique CCIR: 525 lignes, 60 champs NTSC signal couleur

Enregistrement numérique PCM 16 bits (48 kHz/2pistes),

12 bits (32 kHz/4pistes) Capteur image 1/4 po CCD (680 000 pixels)

Iris auto, F1.8, longueur focale; 3,15-31,5 mm,

Macro (Grande Portée AF) 30,5 mm

10:1 Puissance Zoom 2,5 po à cristaux liquides Viseur électronique en couleur

Stéréo 1 haut-parleur rond 20 mm 1400 lux

12 lux 1,0 V c.-à-c., 75 ohms Sortie Y: 1,0 V c.-à-c., 75 ohms

Sortie C: 0.286 V c.-à-c., 75 ohms 316 mV, 600 ohms Sensibilité du micro -50 dB

(0 dB=1 V/Pa, 1 kHz) (Mini-prise stéréo)

Sortie image fixe numérique, contrôle

signal entrée/sortie

(Vitesse de transfert: max. 115 kbps)

Prise de sortie RS-232 pour le

Trousse optionnelle PV-DRS2 contenant le logiciel PhotoVu Link et

un câble RS-232 exigée.

Fonction d'écriture/lecture sur carte,

conforme à USB 2,0 (maximum de 12 Mbits/s)

Aucune protection contre le piratage Prise d'entrée/sortie DV

(i.LINK, 4-broches) 68 (L)×89 (H)×114 (P) mm 2 11/16 (L) X3 1/2 (H) X4 1/2 (P) po

0,47 kg (1,04 lb) (sans batterie ni cassette DV)

0°C-40°C (32°F-104°F)

Fonctions de la carte mémoire (PV-DC252/PV-DC252-K)

Enregistrement média:

Carte mémoire SD, carte MultiMediaCard^{MC}

JPEG Compression de l'image:

Nombre d'images maximum qui peut être enregistré sur la carte mémoire SD tournie

FINE: environ 45 images NORMAL: environ 95 images ECONOMY: environ 190 images

· Lorsque vous enregistrez sur une carte mémoire en utilisant des modes différents (FINE, NORMAL, ECONOMY), le nombre maximum d'images disponibles ne dépassera pas les indications énoncées plus haut.

Le nombre d'images qui peut être enregistré est approximatif. En cas d'enregistrement d'images complexes et détaillées, le nombre d'images fixes qui peut être enregistré sur la carte mémoire fournie sera inférieur.

Adaptateur secteur Informations pour votre sécurité

Source d'alimentation: 110-240 V c.a., 50/60 Hz

Consommation d'énergie: 18 W

Sortie c.c.:

Dimensions:

1 W (Lorsqu'il n'est pas utilisé.) 7,8 V c.c., 1,4 A (Caméscope) 8,4 V c.c., 1,2 A (Chargement de la batterie)

70 (L)× 45 (H)× 116 (P) mm

2 3/4 (L)× 1 3/4 (H)× 4 9/16 (P) po Poids: 0,165 kg (0,363 lb)

Les poids et les dimensions sont approximatifs. Sous réserve de modifications.

Accessoires du caméscope

| ເ⊂ັN° _∈ de pièce ື | Illustration | Description |
|--|--------------|--|
| PV-DAC11A-K | | Adaptateur secteur avec câble c.a. et c.c. |
| *CGR-D08A/1B (Remplace le *CGR-D120A/1B) | | Bloc-batterie rechargeable au lithium-ion 800 mAh |
| *CGR-D16A/1B (Remplace le *CGR-D220A/1B) | | Bloc-batterie rechargeable au lithium-ion 1600 mAh |
| *CGP-D28A/1B | | Bloc-batterie rechargeable au lithium-ion 2800 mAh |
| *CGR-D53A/1K (Remplace le *CGR-D815A/1B) | | Bloc-batterie rechargeable au lithium-ion 5300 mAh |
| PV-DDC9-K | | Câble d'interface DV (i.LINK) (4 broches à 4 broches) |
| PV-DRC9-K | | Télécommande infrarouge |
| RP-SD064BPPA RP-SD032BPPA RP-SD016BPPA | | Carte mémoire SD de 64 Mo Carte mémoire SD de 32 Mo Carte mémoire SD de 16 Mo |
| BN-SDCAPU/1B | | Lecteur/Enregistreur USB SD (compatible avec la carte MultiMediaCard ^{MC}) |
| BN-SDABPU/1B | /1 a [| Adaptateur de carte SD PCMCIA (compatible avec la carte MultiMediaCard ^{MC}) |
| PV-DRS2 | | Unité de connexion PC (comprend les câbles de connexion RS-232C et le logiciel pour liaison PHOTOVU) |

^{*}Concernant le temps de recharge de la batterie et le temps d'enregistrement disponible, se référer à la page 12.

^{*}Nota: Les accessoires et(ou) les numéros de modèle peuvent varier selon les pays. Consulter le détaillant de la région.

Guide de dépannage (Problèmes et Solutions)

En cas de difficulté avec votre caméscope numérique, il peut s'agir d'un problème que vous pouvez résoudre vous-même. Voir la liste des problèmes et des solutions ci-dessous.

| Problèmes | Solutions |
|---|---|
| Le caméscope ne s'allume pas. | La source d'alimentation est-elle correctement branchée? |
| L'alimentation du caméscope est automatiquement coupée. | Si le caméscope est laissé plus de 5 minutes en mode de pause d'enregistrement, l'alimentation est coupée automatiquement pour protéger la bande et économiser l'énergie de la batterie. |
| L'alimentation du caméscope ne dure pas suffisamment. | La batterie est-elle faible? Charger la batterie ou fixer une batterie complètement rechargée. |
| Le caméscope ne fonctionne pas correctement ou il est allumé mais aucune des fonctions ne fonctionne. | Appuyer sur la touche [RESET] du caméscope au moyen d'un instrument pointu. Si le problème ne se résout pas, débrancher la prise électrique et attendre environ 1 minute. Ensuite, rebrancher la prise électrique et appuyer sur l'interrupteur. (Les données sur la carte peuvent être endommagées si l'opération énoncée ci-dessus est effectuée lorsque le voyant [ACCESS] de la fente de la carte est allumé.) |
| La batterie perd sa charge rapidement. | La batterie est-elle complètement rechargée? La recharger au moyen de l'adaptateur secteur. La batterie est-elle conservée dans un endroit extrêmement froid? Dans les endroits froids, le temps de fonctionnement est plus court. La batterie est-elle usée? Si le temps d'autonomie est encore trop court même après l'avoir complètement rechargée, la batterie est usée. |
| La batterie ne peut pas être rechargée. | Si le câble c.c. est branché à l'adaptateur secteur, le rechargement ne peut pas être effectué. Débrancher le câble c.c |
| L'enregistrement ne commence pas bien que le caméscope soit sous tension et que la cassette soit correctement positionnée. | La languette de protection contre l'effacement accidentel de la cassette est-elle ouverte? Si elle est ouverte, (sur [SAVE]), l'enregistrement est alors impossible. La bande est-elle déroulée jusqu'à la fin? Introduire une nouvelle cassette. Le caméscope est-il allumé? Est-ce que le voyant [CAMERA] est allumé? Si le voyant [CAMERA] n'est pas allumé, aucune fonction d'enregistrement ne peut être effectuée. De la condensation s'est-elle formée? Attendre jusqu'à ce que l'indication [DEW DETECTED] disparaisse. |
| La fonction de doublage audio ne fonctionne pas. | La languette de protection contre l'effacement accidentel de la cassette est-elle ouverte? Si elle est ouverte, (sur [SAVE]), l'enregistrement est alors impossible. Essayez-vous de modifier une partie de bande enregistrée en mode LP? Le mode LP n'admet pas le doublage audio. |
| Le code temps devient imprécis. | Le compteur d'indication du code temps peut ne pas être constant en direction inverse dans le mode lecture au ralenti, ceci ne constitue pas un mauvais fonctionnement. |
| L'indication du temps disponible restant sur la cassette disparaît. | Lors de l'enregistrement d'images fixes en mode PhotoShot, le temps disponible restant sur la cassette peut disparaître momentanément. Cependant, il réapparaît lorsque le caméscope est à nouveau réglé sur le mode d'enregistrement standard. |
| L'indication du temps disponible restant sur la cassette ne correspond pas au temps disponible réel restant sur la cassette. | Si des scènes de moins de 15 secondes sont continuellement enregistrées, le temps disponible restant sur la cassette ne peut être affiché correctement. Dans certains cas, l'indication du temps disponible restant sur la cassette peut être de 2 à 3 minutes plus court que le temps disponible réel. |

En cas de difficulté avec votre caméscope numérique, il peut s'agir d'un problème que vous pouvez résoudre vous-même. Voir la liste des problèmes et des solutions ci-dessous.

| Problèmes | Solutions |
|--|---|
| Les images ne peuvent pas être reproduites même lorsqu'on appuie sur la touche [▶]. | Le voyant [VCR] est-il allumé? Si le voyant [VCR] n'est pas allumé, la fonction de lecture ne peut pas être utilisée. |
| Des parasites de type mosaïque apparaissent sur les images, pendant la recherche ou lors de la lecture au raienti. | Ce phénomène est caractéristique des systèmes vidéo numériques. Il ne s'agit pas d'un mauvais fonctionnement. |
| Bien que le caméscope soit correctement branché au téléviseur, les images reproduites ne peuvent pas être visionnées. | L'entrée vidéo a-t-elle été sélectionnée sur le téléviseur? Lire le mode d'emploi du téléviseur et sélectionner le canal qui correspond aux prises d'entrée utilisées pour la connexion. |
| La lecture de l'image n'est pas claire. | Les têtes du caméscope sont-elles sales? Si les têtes sont sales, la lecture de l'image peut ne pas être claire. |
| Aucun son n'est émis par le haut-parteur incorporé ni par le casque du caméscope. | Le volume est-il trop bas? Pendant la lecture, continuer d'appuyer sur le cadran [PUSH] jusqu'à ce que l'indication [VOLUME] apparaisse. Ensuite, tourner le cadran [PUSH] pour régler le volume. |
| Des sons différents sont reproduits en même temps. | [AUDIO] du sous-menu [PLAYBACK FUNCTIONS] du menu principal [VCR FUNCTIONS] a été réglé sur [MIX]. Il en résulte que le son original et le son qui a été enregistré par doublage audio sont lus ensemble. Il est possible de reproduire les sons séparément. |
| Le son original a été effacé lorsque le doublage audio a été effectué. | Si un doublage audio est effectué en mode [16bit], le son original sera effacé. Si vous souhaitez conserver le son original, assurez-vous de sélectionner le mode [12bit] au moment de l'enregistrement. |
| Les sons ne peuvent pas être reproduits. | Bien qu'une cassette sans doublage audio soit reproduite, [AUDIO] du sous-menu [PLAYBACK FUNCTIONS] du menu principal [VCR FUNCTIONS] est-il réglé sur [ST2]? Pour lire une cassette sans doublage audio, [AUDIO] doit être réglé sur [ST1]. La fonction recherche à vitesse variable fonctionne-t-elle? Appuyer sur la touche [▶] pour annuler la fonction de recherche à vitesse variable. |
| Les images enregistrées sur la carte mémoire ne sont pas nettes. (PV-DC252/PV-DC252-K) | Avez-vous réglé [PICTURE QUALITY] sur [ECONOMY] dans le sous- menu (CARD SETUP]? Si l'enregistrement est effectué avec le réglage sur [ECONOMY], le détail de l'image peut être présenté en motif mosaïque. Régler [PICTURE QUALITY] sur [NORMAL] ou [FINE]. (→ 35) |
| La carte PhotoShot ne reproduit pas l'image normalement. (PV-DC252/PV-DC252-K) | L'image peut avoir été endommagée. Pour éviter d'endommager les données constituant l'image, la cassette devrait être copiée et une sauvegarde devrait être effectuée sur votre ordinateur. (→ 37, 46) |
| La carte a été formatée mais ne fonctionne pas. (PV-DC252/PV-DC252-K) | Votre caméscope ou la carte peuvent être endommagés. Consulter votre revendeur. |

Garantie

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

Certificat de garantie limitée Panasonic

Panasonic Canada Inc. garantit cet appareil contre tout vice de fabrication et accepte, le cas échéant, de remédier à toute défectuosité pendant la période indiquée ci-dessous et commençant à partir de la date d'achat original.

Caméscopes - Un (1) an, pièces et main-d'oeuvre

LIMITATIONS ET EXCLUSIONS

Cette garantie n'est valide que pour les appareils achetés au Canada et ne couvre pas les dommages résultant d'une installation incorrecte, d'un usage abusif ou impropre ainsi que ceux découlant d'un accident en transit ou de manipulation. De plus, si l'appareil a été altéré ou transformé de façon à modifier l'usage pour lequel il a été conçu ou utilisé à des fins commerciales, cette garantie devient nulle et sans effet. Les piles sèches ne sont pas couvertes sous cette garantie. Cette garantie est octroyée à l'utilisateur original seulement. La facture ou autre preuve de la date d'achat original sera exigée pour toute réparation sous le couvert de cette garantie.

CETTE GARANTIE LIMITÉE ET EXPRESSE REMPLACE TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, EXCLUANT LES GARANTIES IMPLICITES DU CARACTÈRE ADÉQUAT POUR LA COMMERCIALISATION OU UN USAGE PARTICULIER.

PANASONIC N'AURA D'OBLIGATION EN AUCUNE CIRCONSTANCE POUR TOUT DOMMAGE DIRECT, INDIRECT OU CONSÉCUTIF.

Certaines juridictions ne reconnaissent pas les exclusions ou limitations de dommages indirects ou consécutifs, ou les exclusions de garanties implicites. Dans de tels cas, les limitations stipulées ci-dessus peuvent ne pas être applicables.

RÉPARATION SOUS GARANTIE

Pour de l'aide sur le fonctionnement de l'appareil ou pour toute demande d'information, veuillez contacter votre détaillant ou notre service à la clientèle au:

N° de téléphone: (905) 624-5505

N° de télécopieur: (905) 238-2360

Site Internet: www.panasonic.ca

Pour la réparation des appareils, veuillez consulter

- votre détaillant, lequel pourra vous renseigner sur le centre de service agréé le plus près de votre domicile ;
- notre service à la clientèle au (905) 624-5505 ou www.panasonic.ca ;
- •un de nos centres de service de la liste ci-dessous

Richmond, Colombie-Britannique Panasonic Canada Inc. 12111 Riverside Way Richmond, BC V6W 1K8 Tél.: (604) 278-4211 Téléc.: (604) 278-5627 Calgary, Alberta
Panasonic Canada Inc.
6835-8th St. N.E.
Calgary, AB T2E 7H7
Tél.: (403) 295-3955

Téléc.: (403) 274-5493

Mississauga, Ontario Panasonic Canada Inc. 5770 Ambler Dr. Mississauga, ON L4W 2T3

Tél.: (905) 624-8447 Téléc.: (905) 238-2418 Lachine. Québec Panasonic Canada Inc. 3075, rue Louis A. Amos Lachine, QC H8T 1C4 Tél.: (514) 633-8684 Téléc.: (514) 633-8020

| Pour vos dossiers | | |
|-----------------------|------------------|--|
| Nom de l'utilisateur: | | |
| N° de modèle: | N° de série: | |
| | | |
| Nom du détaillant: | | |
| Adresse: | N° de téléphone: | |


Expédition de l'appareil à un centre de service


Emballer soigneusement l'appareil, de préférence dans le carton d'origine, et l'expédier port payé et assuré au centre de service. Inclure la description détaillée de la panne et la preuve de la date d'achat original.

Index

| M A | |
|---|----|
| Accessoires du caméscope | 65 |
| Adaptateur secteur | |
| Affichage date/heure | 55 |
| ArcSoft | |
| Atténuation bruit du vent | 24 |
| ■ C | |
| Carte mémoire | 34 |
| Carte mémoire SD | 52 |
| Carte PhotoShot34, | |
| Code temps | |
| Compensation de contre-jour | |
| Condensation | 61 |
| D | |
| Diaporama | 38 |
| Doublage42, | 43 |
| Doublage audio | 33 |
| . E | |
| Effets numériques | 32 |
| Enregistrement automatique | 20 |
| Ensemble de connexion USB | 46 |
| Écran visualisation menu | |
| Écran à cristaux liquides | |
| Équilibre du blanc | 63 |
| F | |
| Fonction arrêt mémoire | 63 |
| Fonction cinéma | |
| Fonction gros-plan macro | |
| Fondu | |
| Formatage | 41 |
| G | |
| Garantie | |
| Guide de dépannage | 66 |
| | |
| Image fixe numérique | |
| Iris | 25 |
| L | |
| Languette de protection anti-effacement | 13 |
| Lecture au ralenti | |
| Lecture avance fixe | |
| Lecture avec molette | |
| Lecture de carte | |
| Lecture de repérage | |
| Lecture de rétrospective | 29 |
| Lecture avec effets numériques | 32 |
| Lecture zoom | 32 |
| • M | |
| Microphone zoom | 21 |
| Microphone21, | |
| Mise au point automatique | |
| Mise au point manuelle | 25 |
| Mode accroissement du gain | |
| Mode cinéma | |
| Mode d'ecran multiple | 20 |

| Mode image sur image | |
|---|------|
| Mode longue durée et courte durée (SP/LP) | |
| Mode mer et neige | |
| Mode miroir (Effet numérique)27 | |
| Mode mixage27 | |
| Mode mosaïque | |
| Mode noir et blanc | |
| Mode négatif27 Mode oscillation27 | |
| Mode pause d'enregistrement | |
| Mode portrait | |
| Mode projecteur | |
| Mode recherche de fichier | |
| Mode solarisation27 | 32 |
| Mode sports | |
| Mode stroboscopique27 | |
| Mode sépia27 | |
| Mode volet27 | |
| Mode éclairage faible | |
| N | |
| Nombre F | 25 |
| E P | 25 |
| | |
| PhotoShot | |
| PhotoShot continu | |
| PhotoShot progressif | .21 |
| R | |
| Recharge de la batterie | |
| Recherche caméra | |
| Recherche de l'index | |
| Recherche des blancs | |
| Recherche à vitesse variable | |
| Repérage de la fin de l'enregistrement | |
| Réglage automatique de l'exposition | |
| Réglage de la date et de l'heure | |
| Réglage de l'équilibre du blanc automatique | |
| Réglage DPOF | .41 |
| S | |
| Sous-code | |
| Stabilisateur électronumérique de l'image | |
| Structure du dossier | .52 |
| Т | |
| Température de la couleur | |
| Titre | |
| Télécommande10, | |
| Têtes vidéo encrassées | .61 |
| V | |
| Verrouillage de fichier | |
| Viseur | .14 |
| Vitesse d'enregistrement | |
| Vitesse d'obturation | |
| Volume du son | |
| Vérification de l'enregistrement | .20 |
| Z | |
| Zoom21, | , 22 |

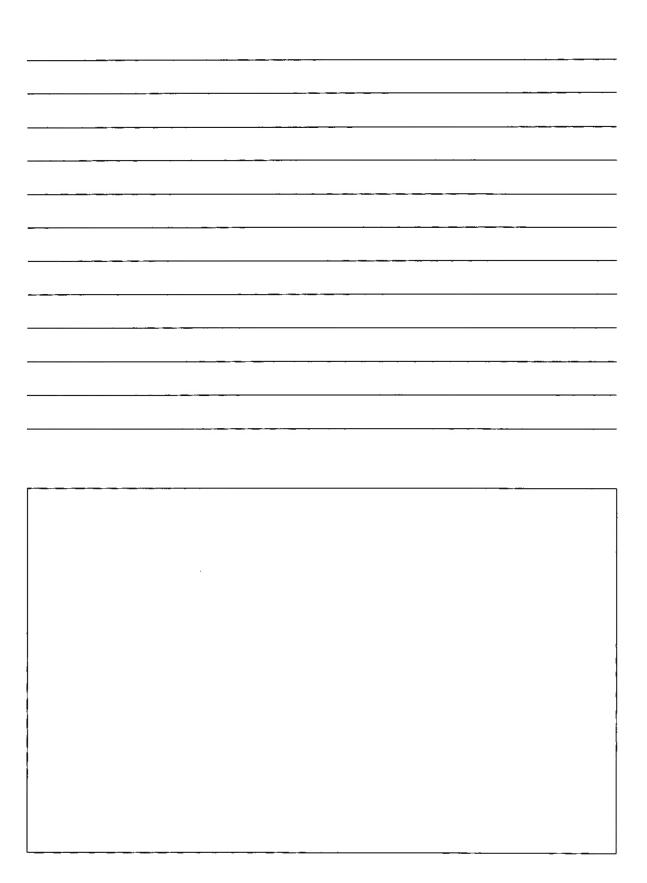

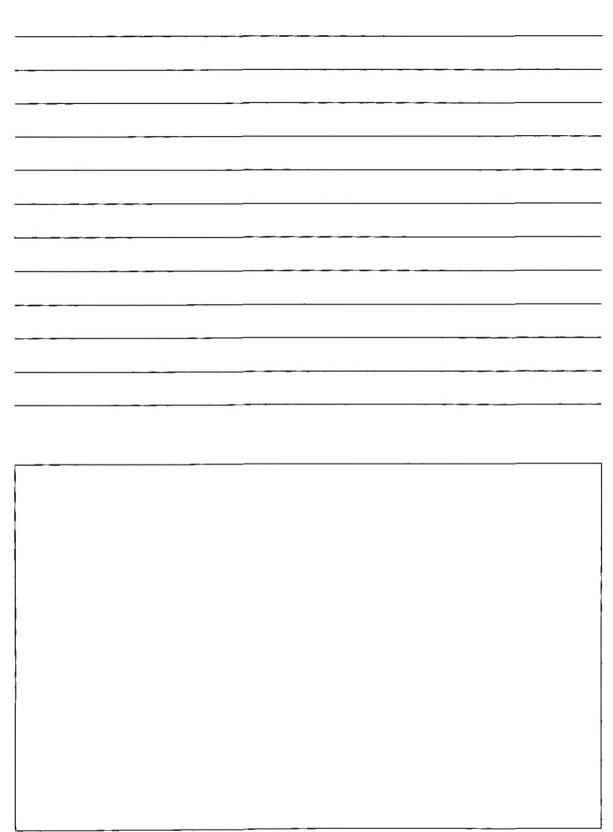

Panasonic[®]

Panasonic Canada Inc. 5770 Ambler Drive, Mississauga, Ontario L4W2T3 (905) 624-5010 www.panasonic.ca Montréal: 3075 Louis A. Amos, Lachine, Québec H8T 1C4 (514) 633-8684

Toronto: 5770 Ambler Drive, Mississauga, Ontario L4W 2T3 (905) 238-2181

Calgary: 6835 8th Street N.E., Calgary, Alberta T2E7H7 (403) 295-3922

Vancouver: 12111 Riverside Way, Richmond, BC V6W 1K8 (604) 278-4211

